

Service
Service

Service Manual

TABLE OF CONTENTS

	Page
Technical Specifications	1-2
Measurement setup	1-3
Service Aids, Safety Instruction, etc	1-4 to 1-5
Preparations & Controls	1-6 to 1-9
Maintenance & Troubleshooting	1-10
Disassembly Instructions & Service positions	2
Set Block diagram	3
Set Wiring diagram	4
Key Board	5
Servo Board	6
Main Board	7
Set Mechanical Exploded view & parts list	8

SPECIFICATIONS

■ General

Power supply:	12V DC(11V-16V) Test voltage 14.4V, negative ground
Maximum power output:	50Wx4 channels
Continuous power output:	25Wx4 channels (4Ω, 10% T.H.D.)
Suitable speaker impedance:	4-8 ohm
Pre-Amp output voltage:	2.0V (CD play mode: 1KHz, 0 dB, 10 KΩ load)
Fuse:	15A
Dimensions(WxHxD)	178x50x162mm
Weight:	1.7kg

■ Components

Mounting collar	1
Machine screws M5x6mm	4
Mounting bolt (50mm)	1
Wire connector	1
Removable face plate case	1
Trim plate	1
L-key	2
Operating instructions	1
Rubber cushion	1

■ FM Stereo Radio

Frequency range:	87.5 - 108.0 MHz (EUROPE mode) 65.0 - 74.0 MHz (OIRT mode)
Usable sensitivity:	8 dBμ
quieting sensitivity(S/N=50dB):	12 dBμ
Frequency response:	30Hz-15kHz
Stereo separation:	30dB(1kHz)
Image response ratio:	50dB
IF response ratio:	70dB
Signal/noise ratio	55dB


■ Disc Player

System:	Disc digital audio system
Frequency response:	20Hz - 20kHz
Signal/noise ratio:	>86 dB
Total harmonic distortion:	Less than 0.20%(1 kHz)
Wow and flutter:	Below measurable limits
Channel separation:	>60 dB

Note: Specifications and design are subject to change without notice for product improvements.


PREPARATIONS

■ Wiring Diagram

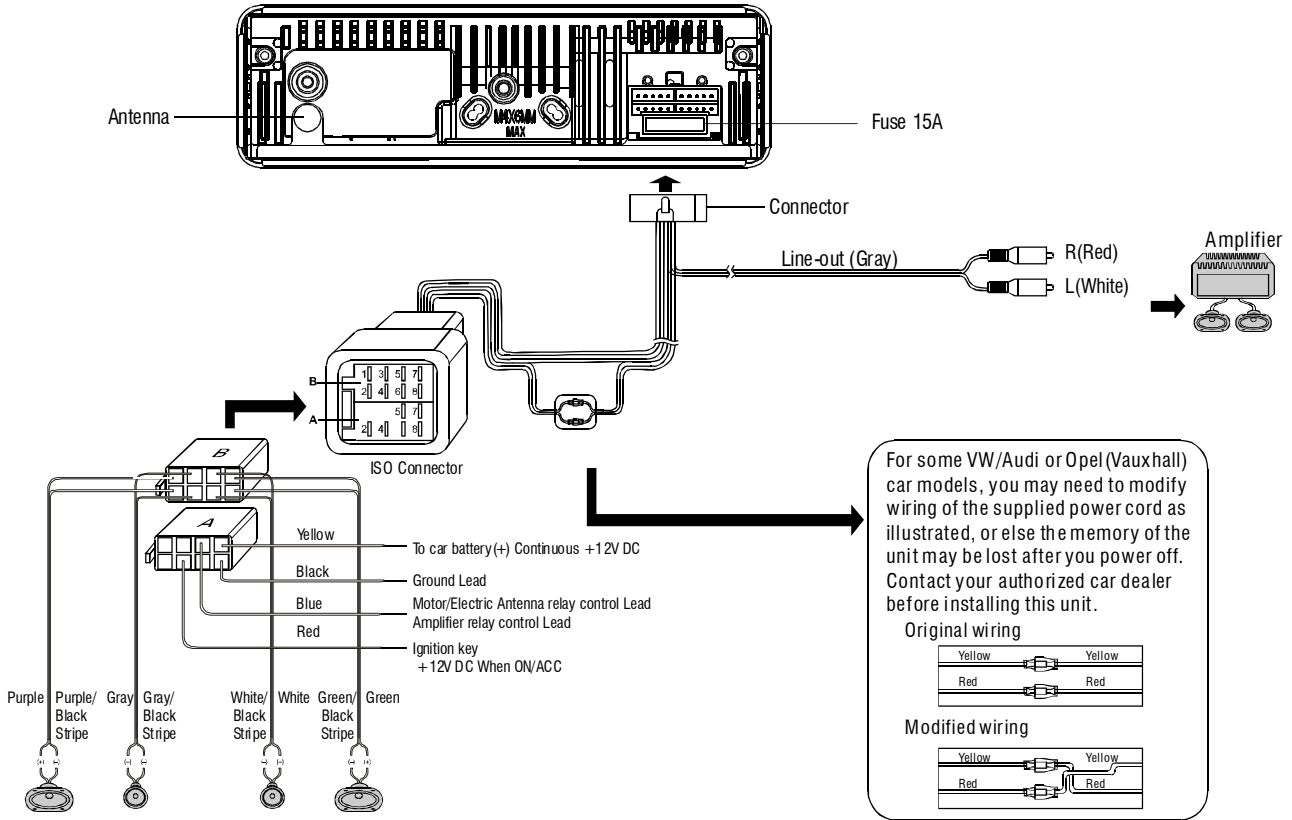


■ Using the ISO Connector

1. If your car is equipped with the ISO connector, then connect the ISO connectors as illustrated.

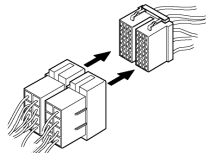


2. For connections without the ISO connectors, check the wiring in the vehicle carefully before connecting, incorrect connection may cause serious damage to this unit.

Cut the connector, connect the colored leads of the power cord to the car battery, as shown in the colour code table below for speaker and power cable connections

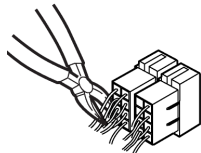


LOCATION	FUNCTION	
	Connector A	Connector B
1		Rear Right(+)--Purple
2		Rear Right(--)--Purple/Black Stripe
3		Front Right(+)--Gray
4	ACC +/red	Front Right(--)--Gray/Black Stripe
5	Auto Antenna/blue	Front Left(+)--White
6		Front Left(--)--White/Black Stripe
7	Battery 12V (+)/yellow	Rear Left(+)--Green
8	Ground/black	Rear Left(--)--Green/Black Stripe

KEY BOARD - CIRCUIT DIAGRAM

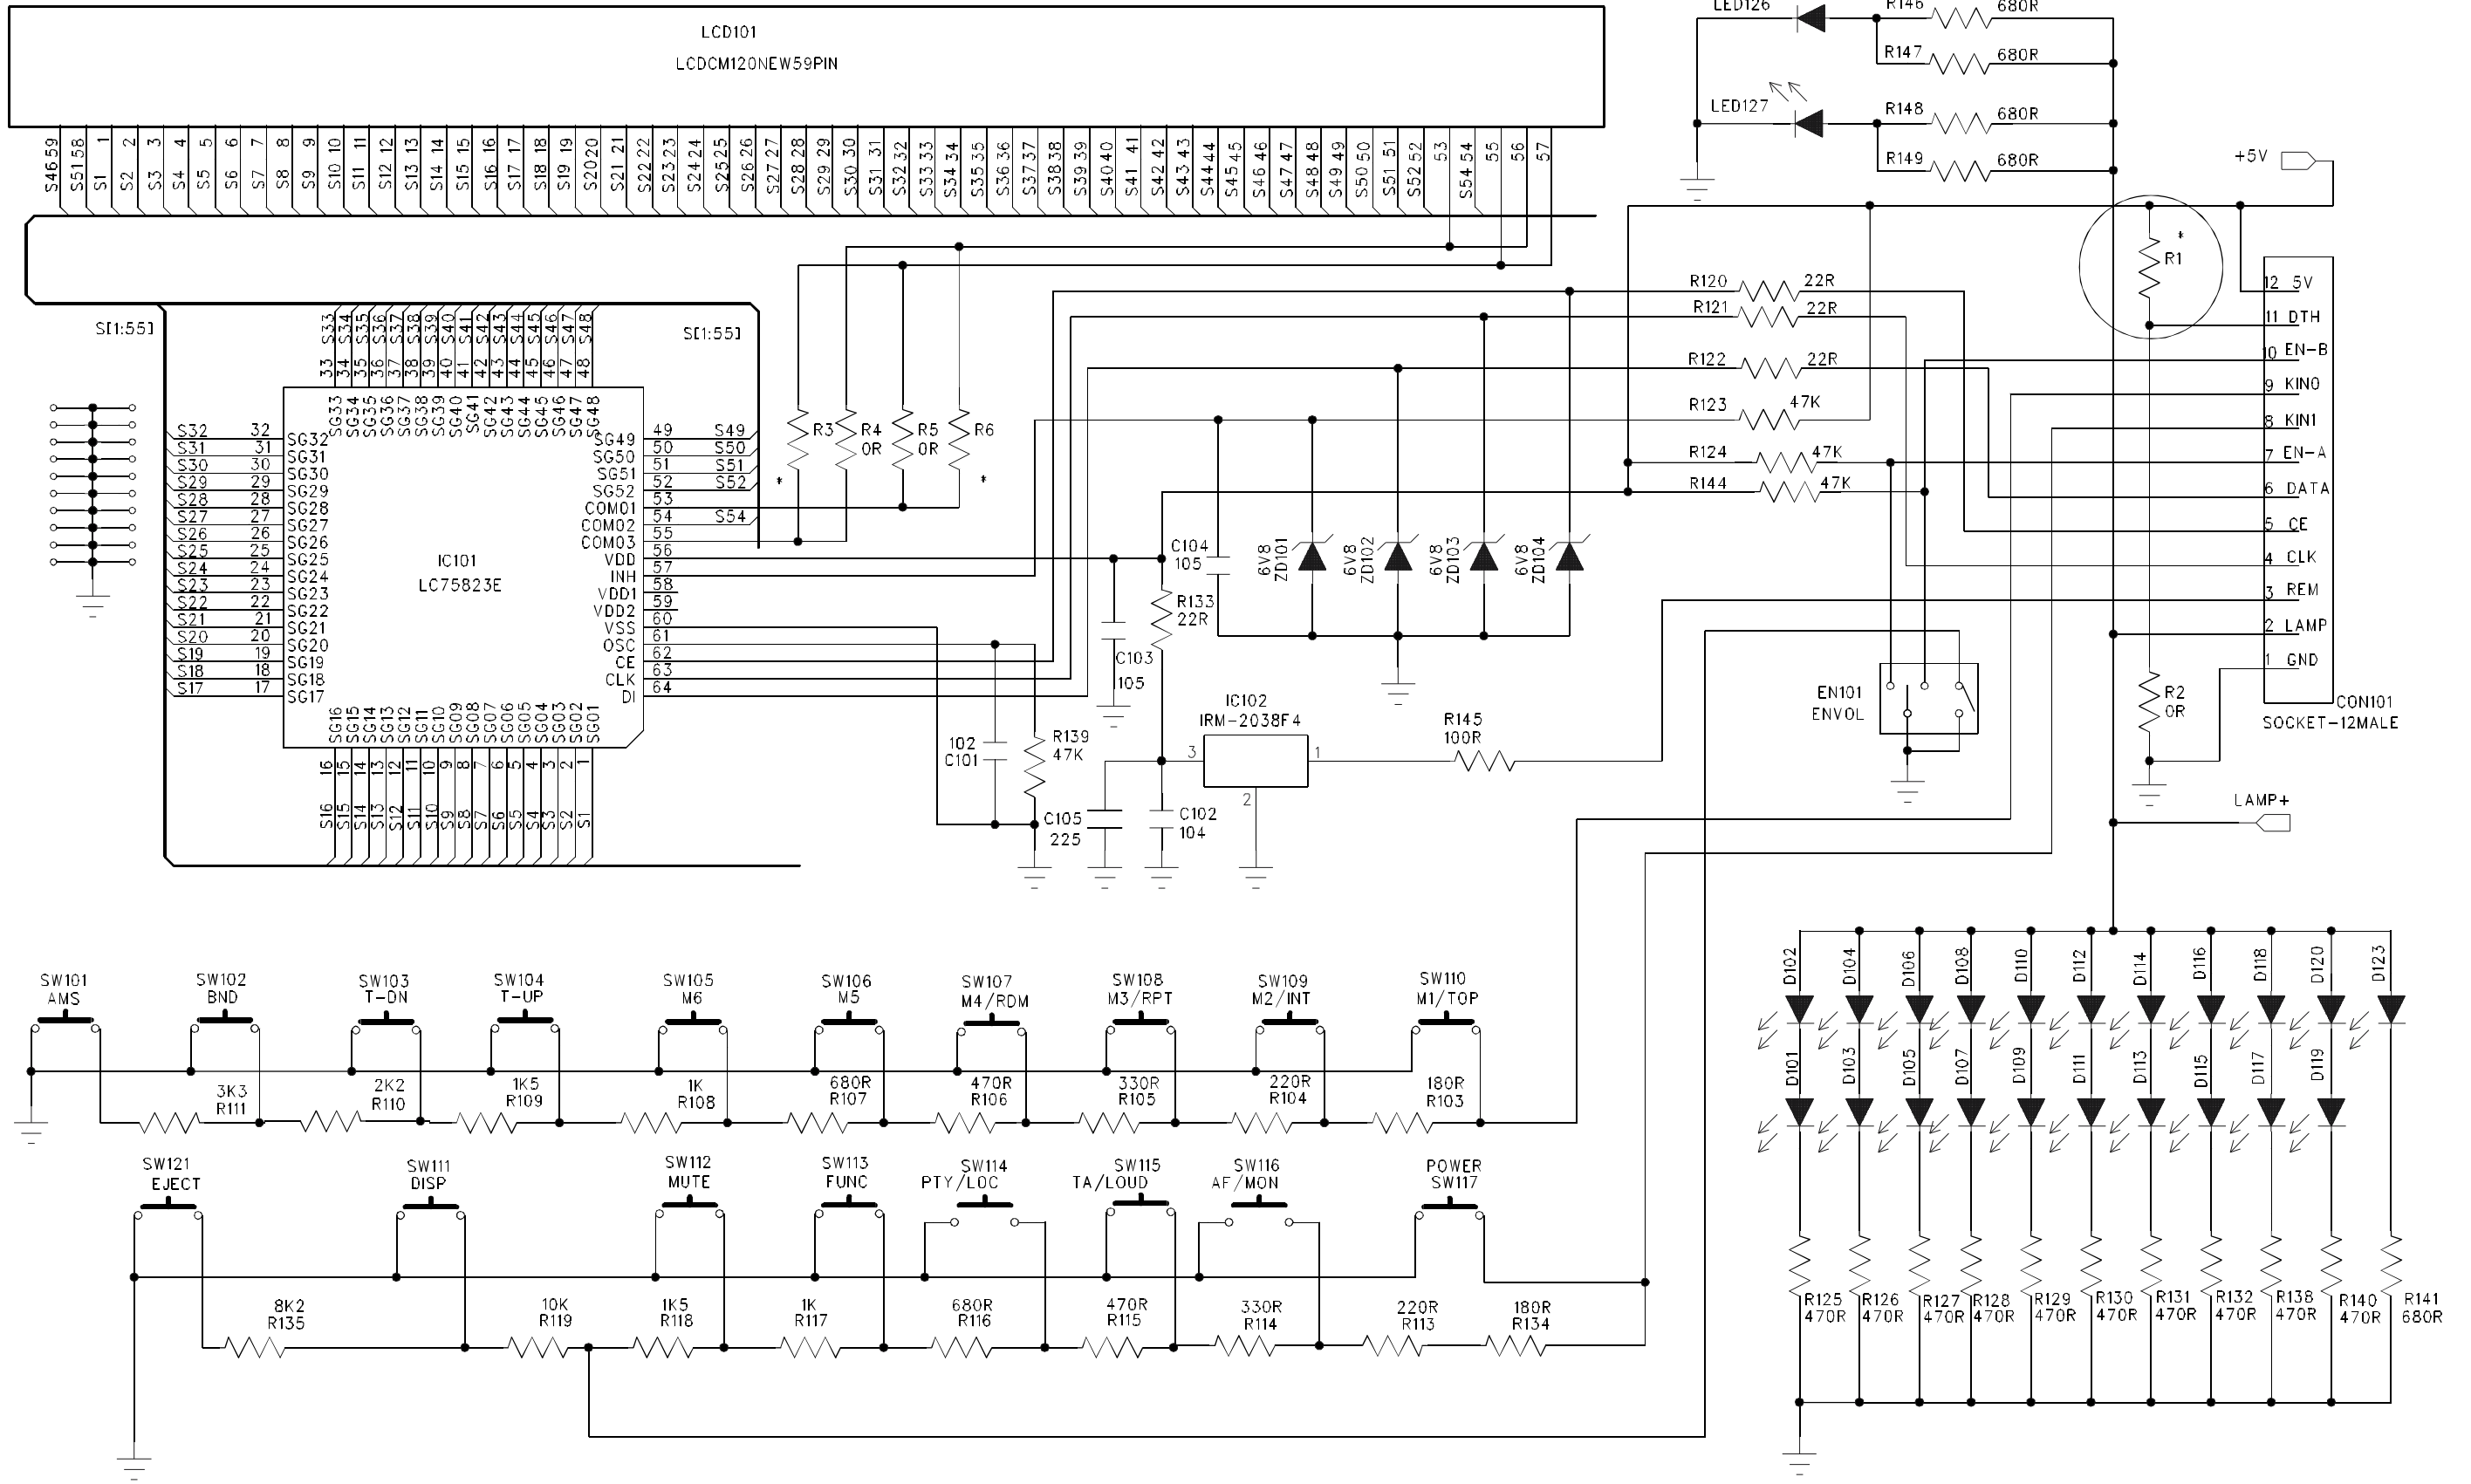

	R1	R2	R3	R4	R5	R6
CM125	/	OR	/	OR	OR	/

SERVO BOARD - CIRCUIT DIAGRAM

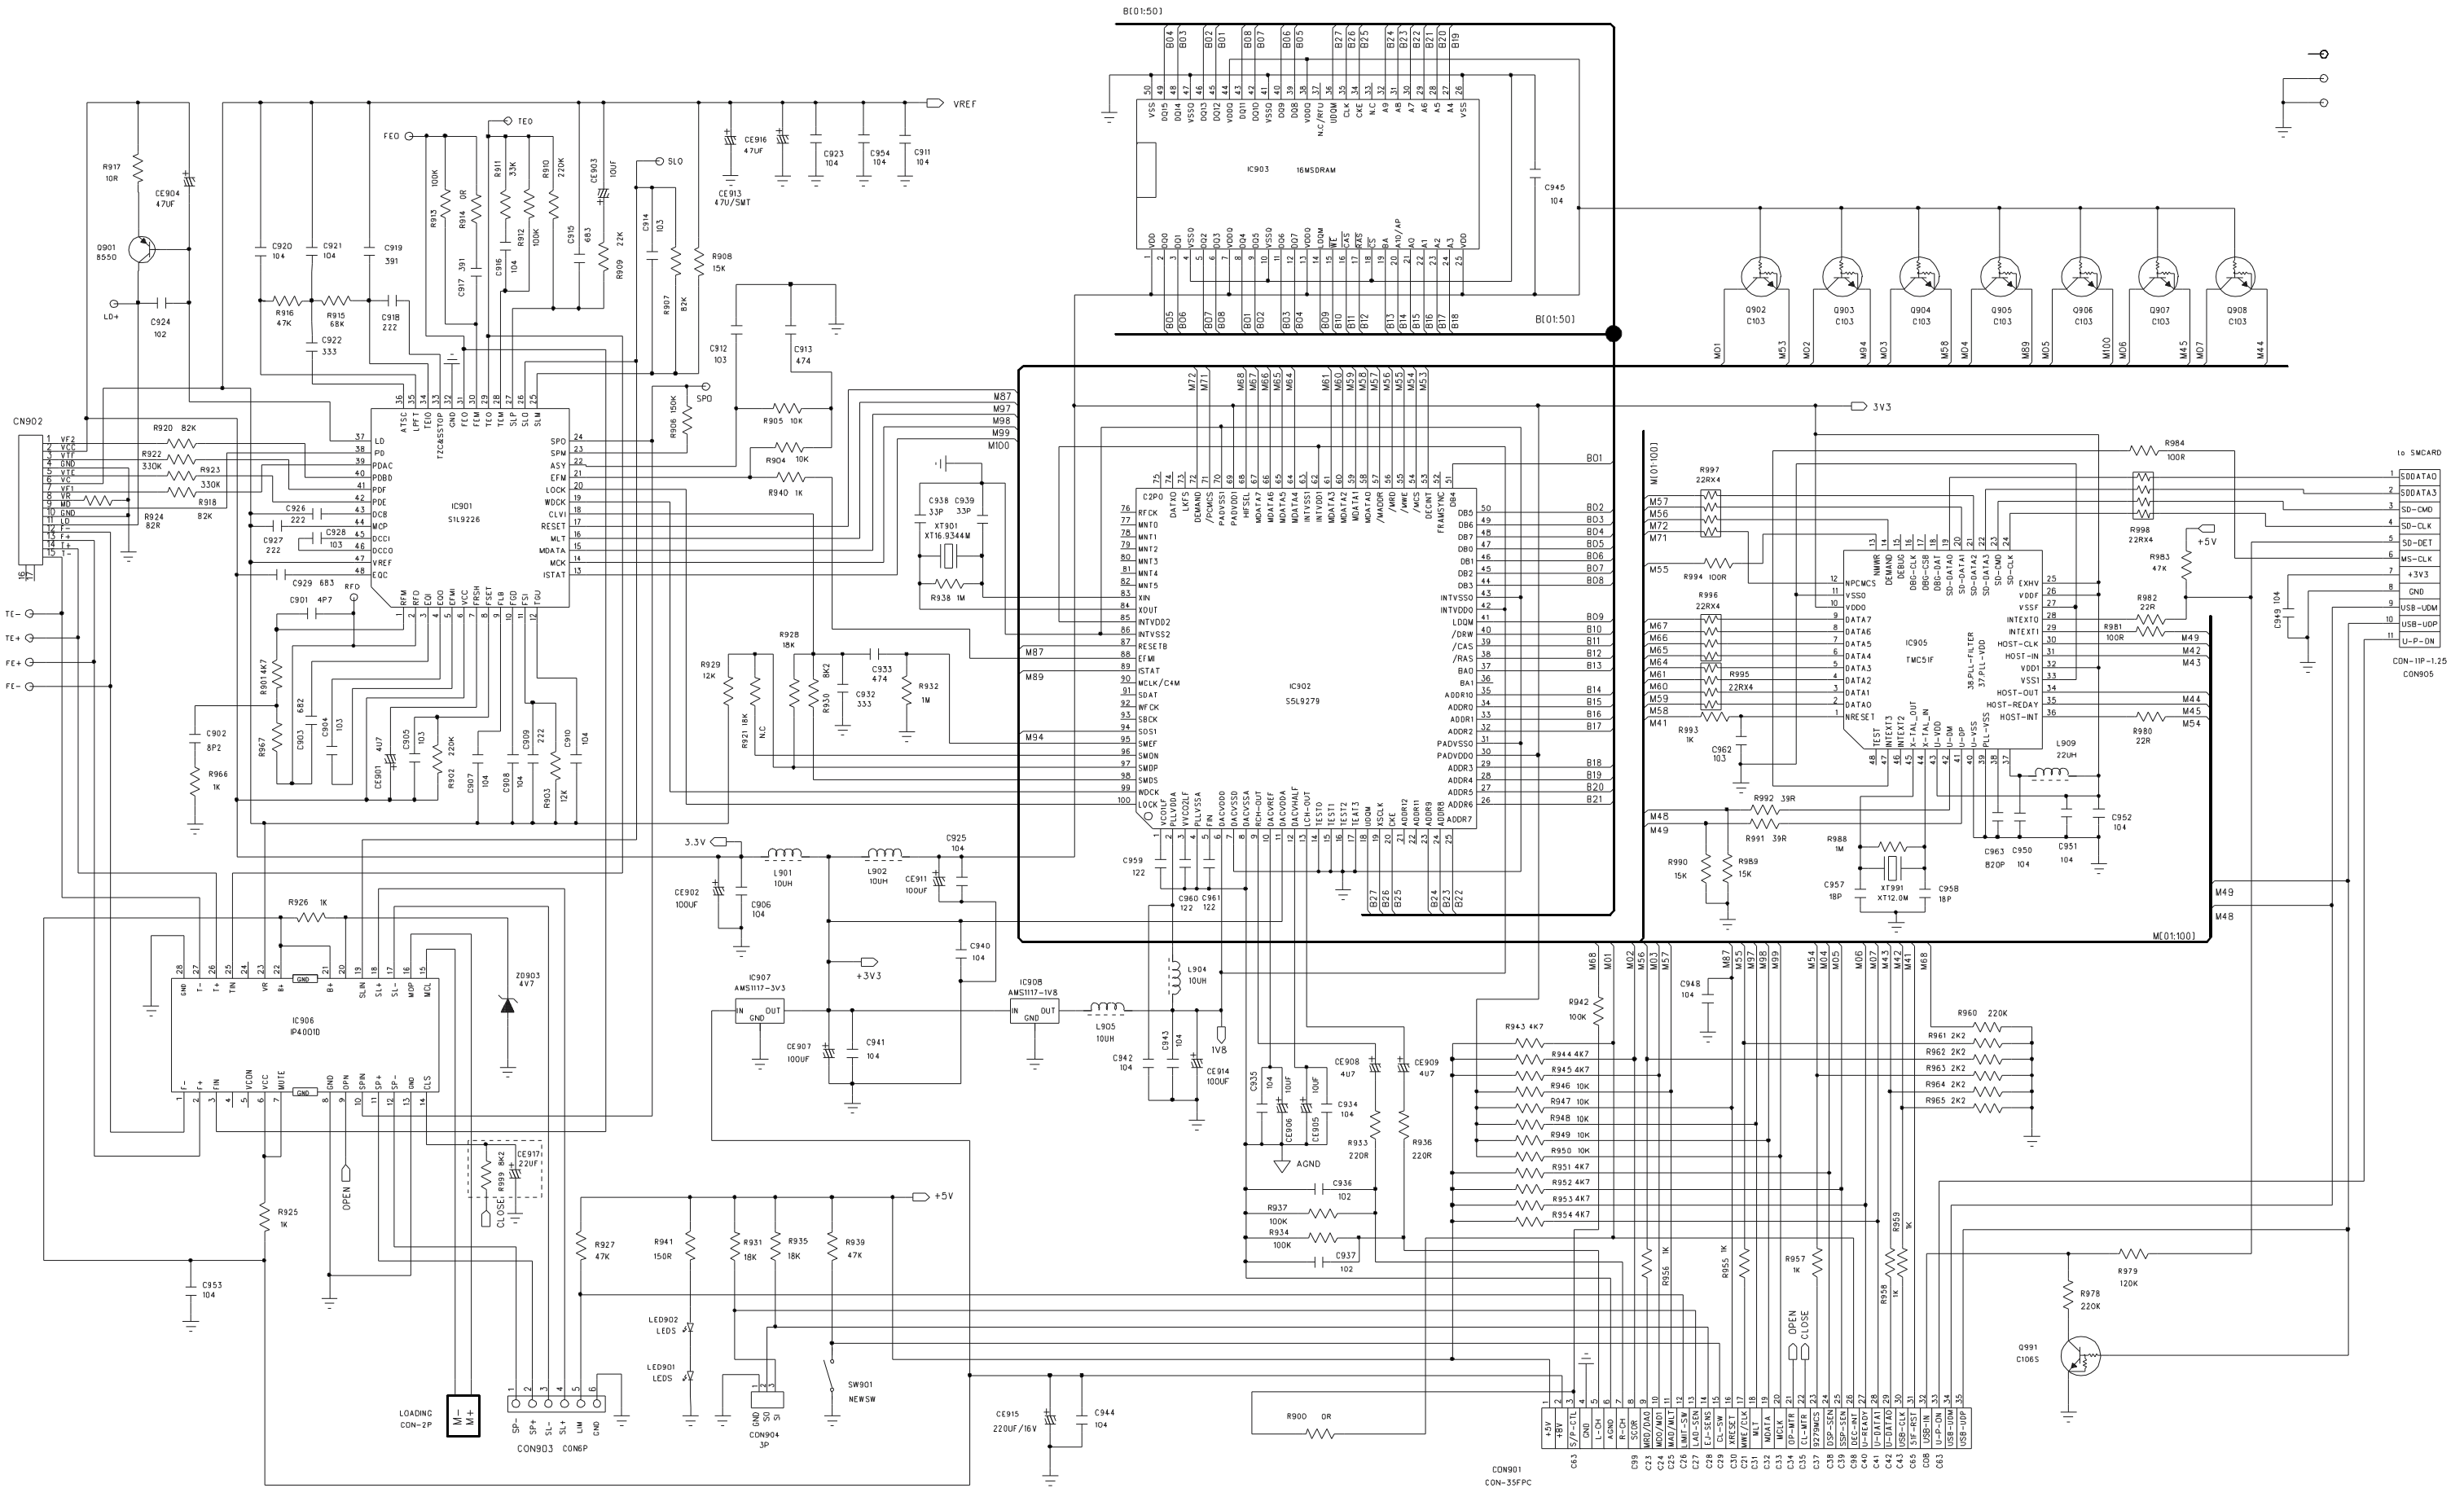

MAIN BOARD - CIRCUIT DIAGRAM

