


Service
Service


Service Manual

PROLOGY


MAIN BOARD - CIRCUIT DIAGRAM

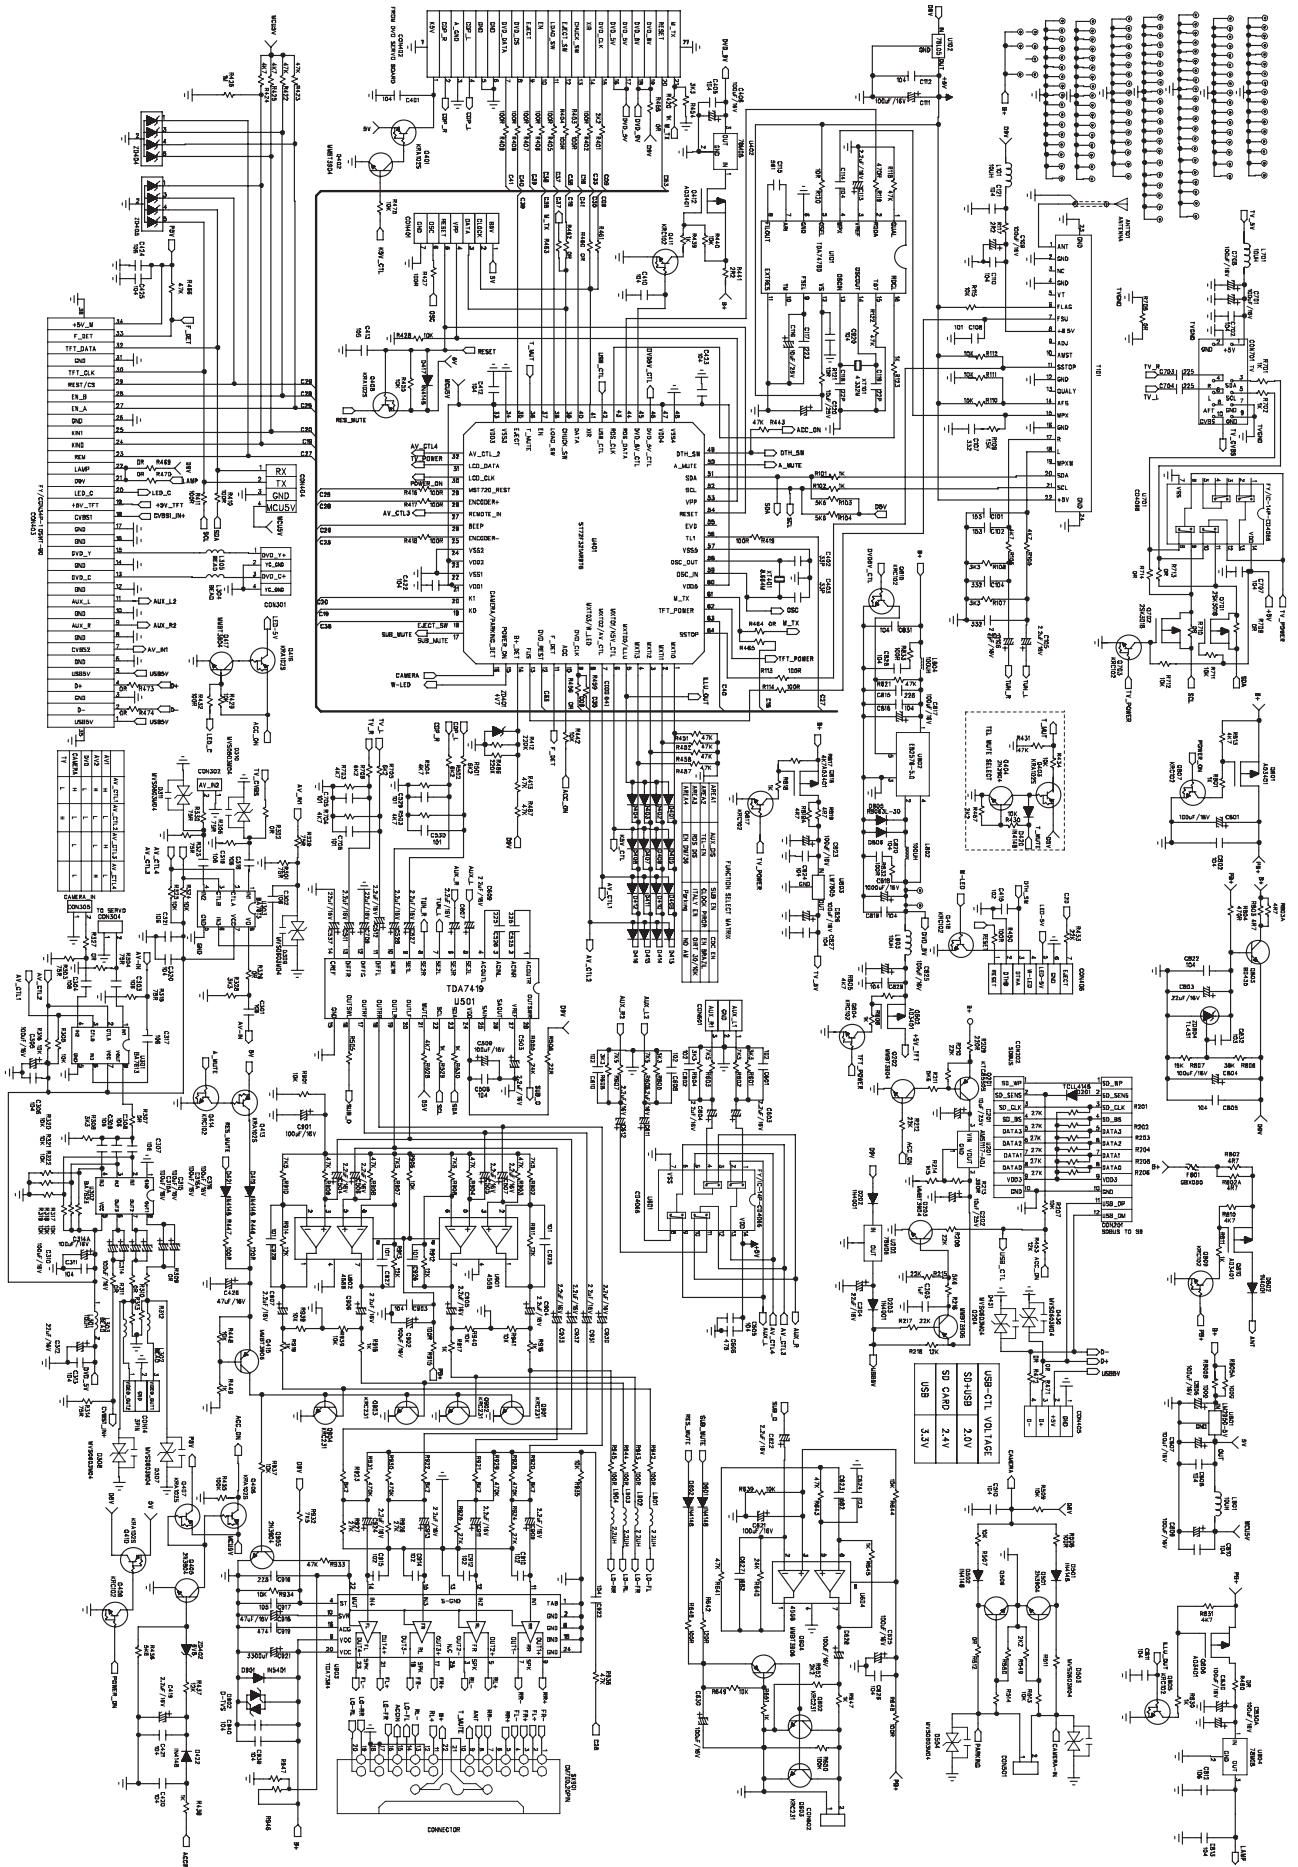


MAIN BOARD - PCB LAYOUT TOP VIEW

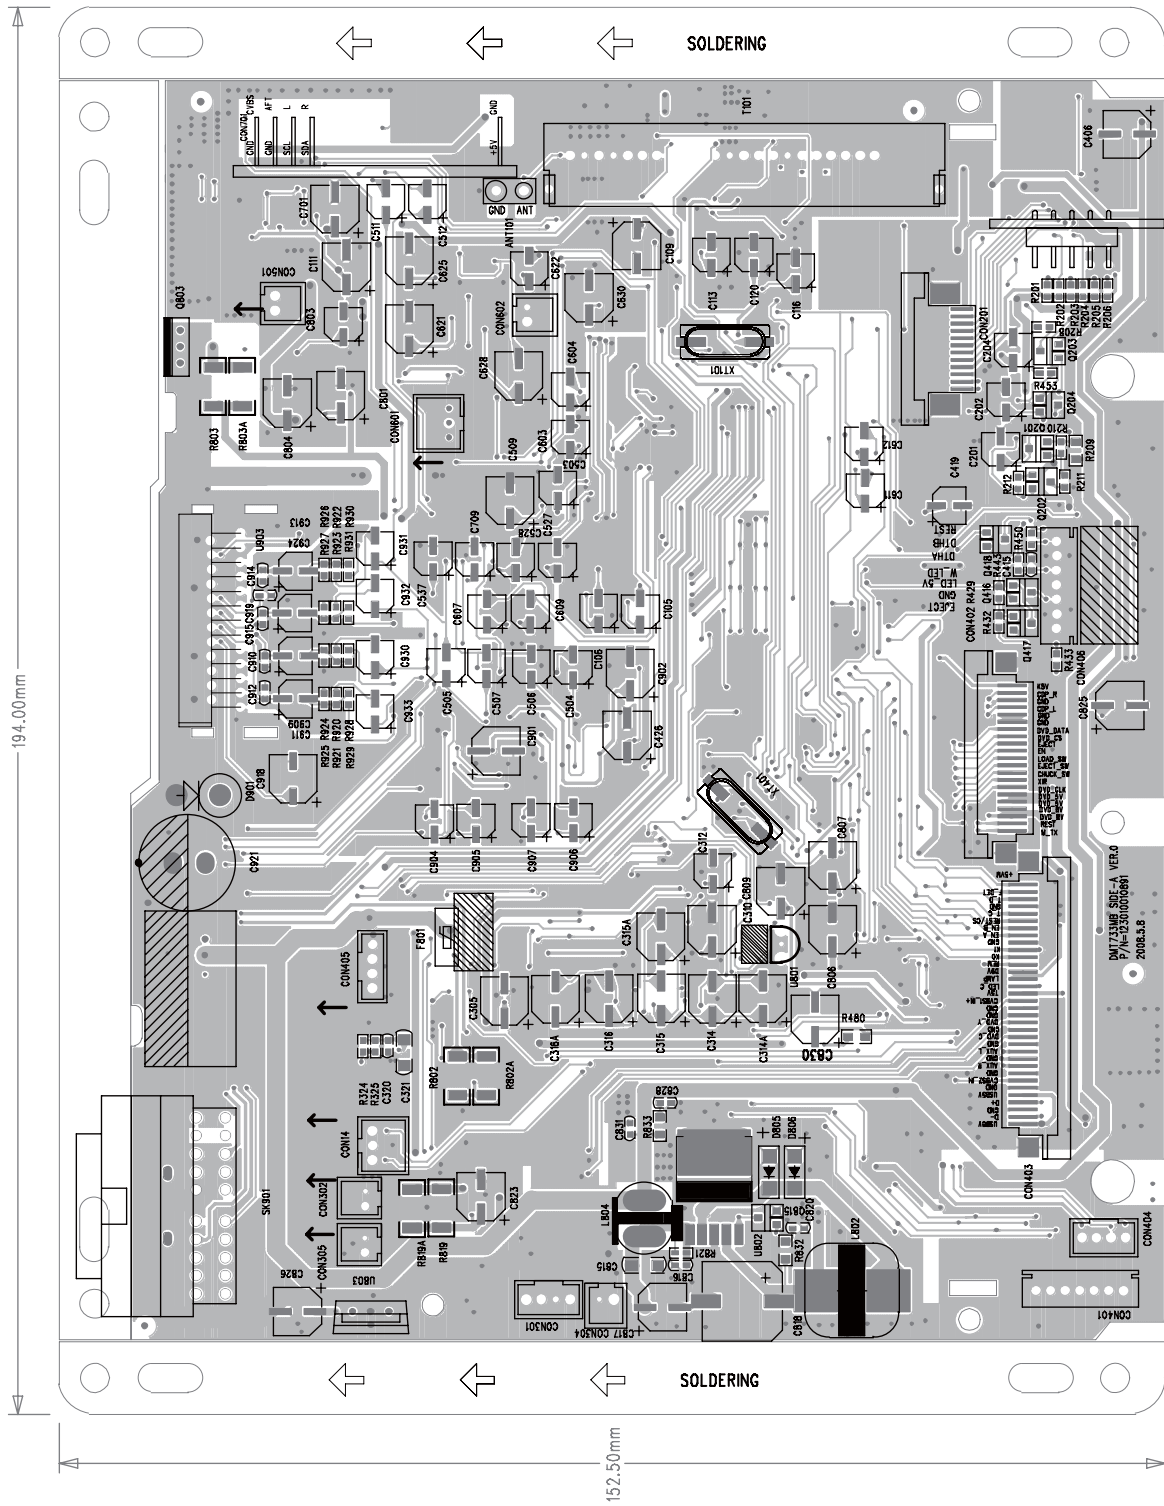


MAIN BOARD - PCB LAYOUT BOTTOM VIEW

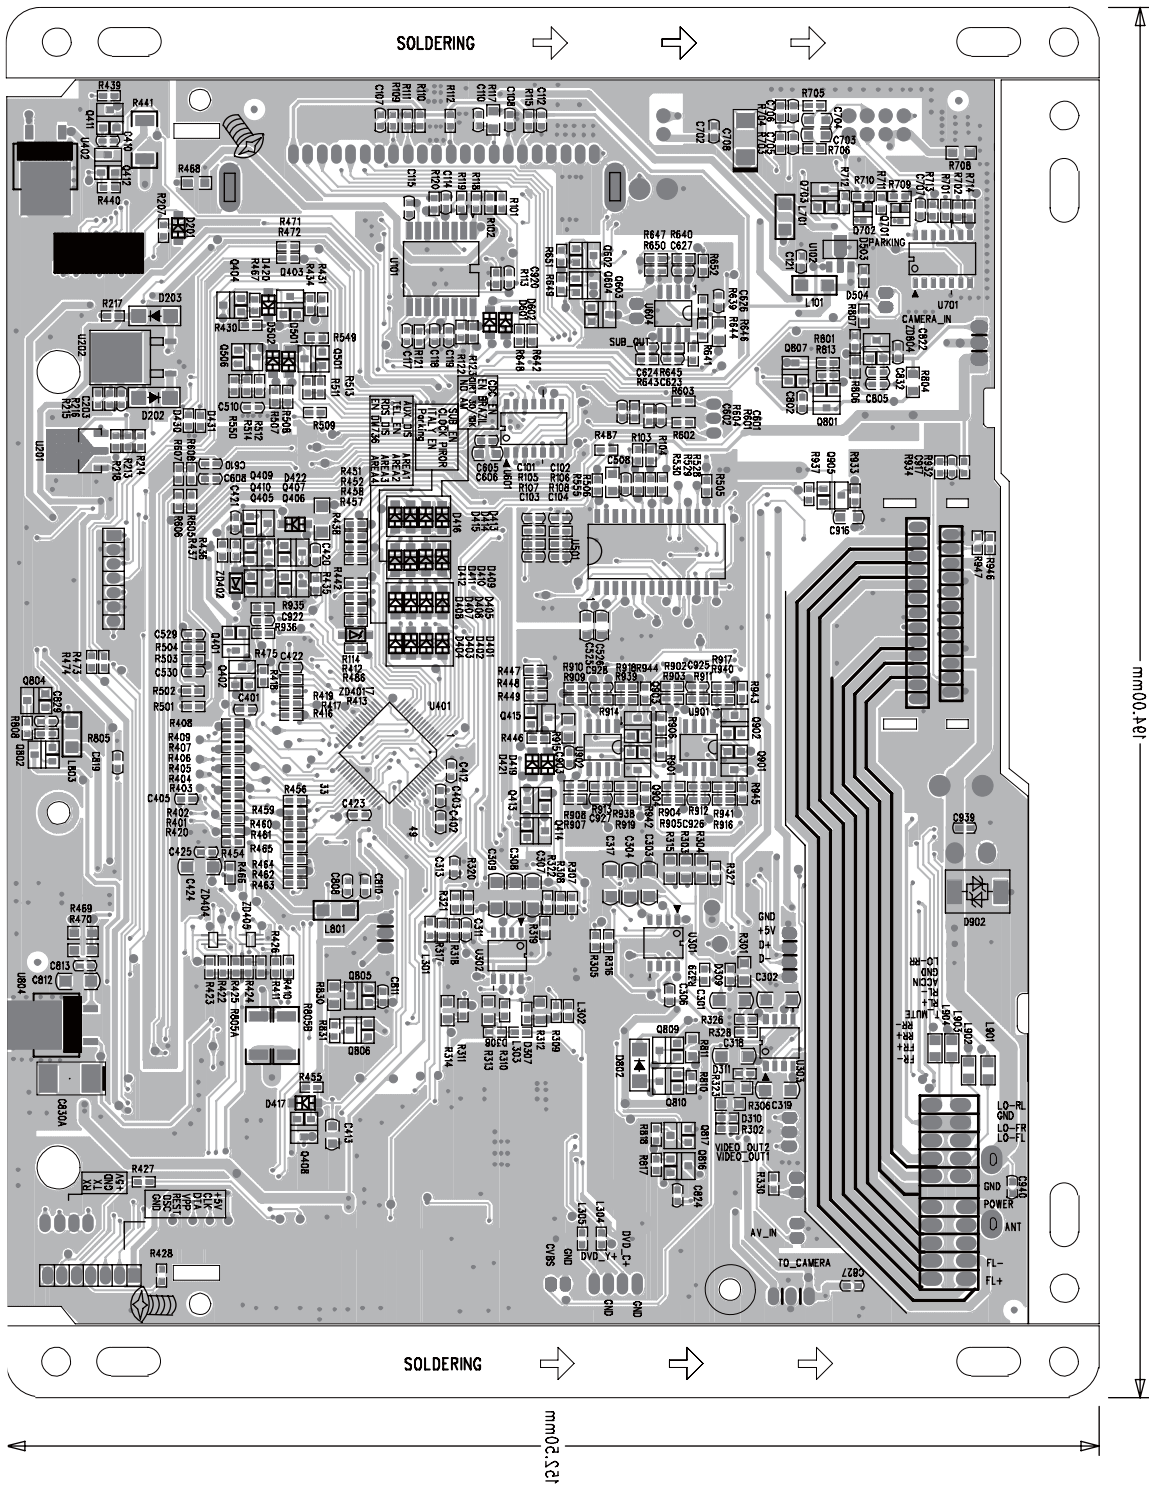


SERVO BOARD - LAYOUT DIAGRAM TOP VIEW

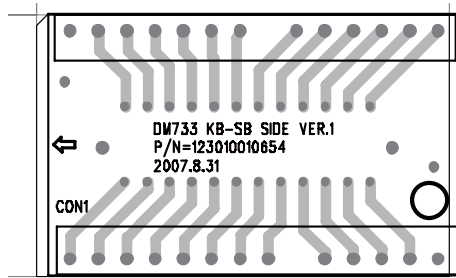


SERVO BOARD - LAYOUT DIAGRAM BOTTOM VIEW

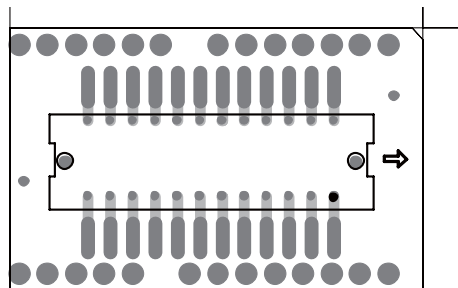


KB BOARD - CIRCUIT DIAGRAM

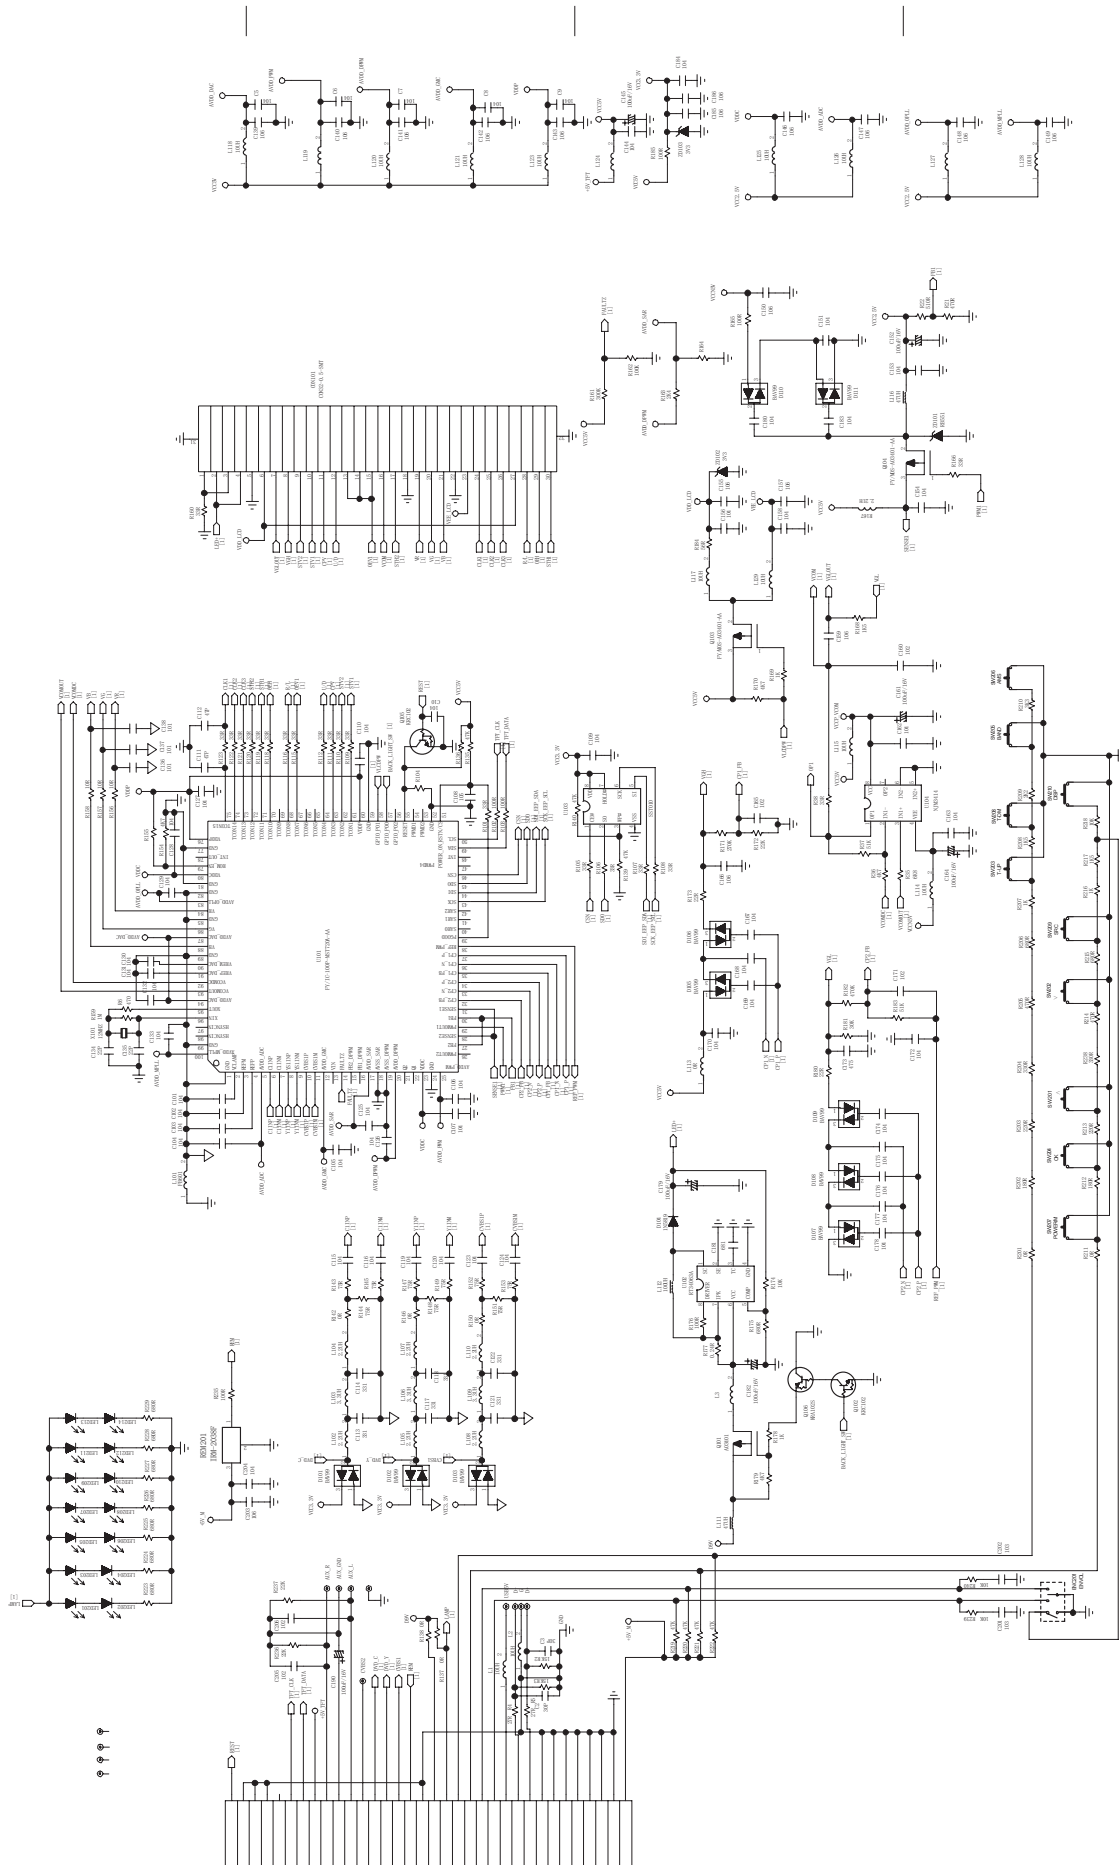


KB BOARD - CLAYOUT DIAGRAM TOP VIEW

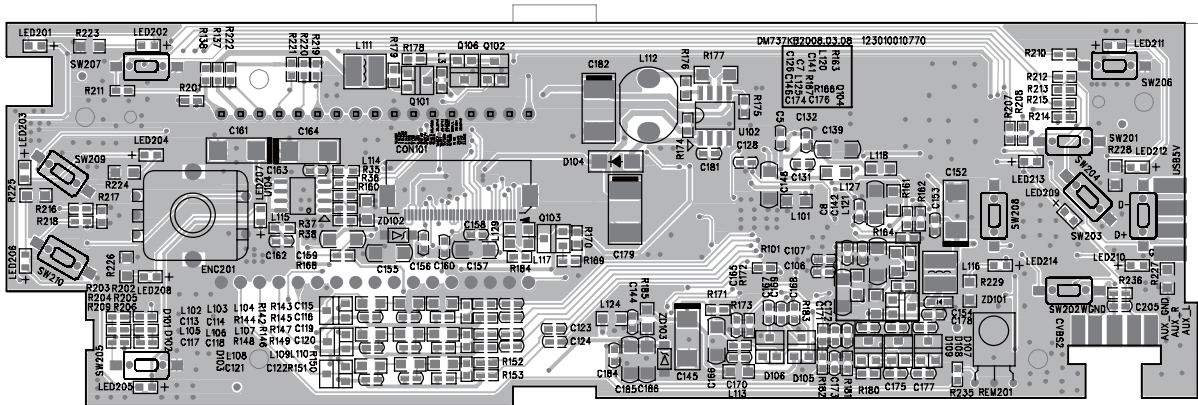

KB BOARD - CLAYOUT DIAGRAM BOTTOM VIEW

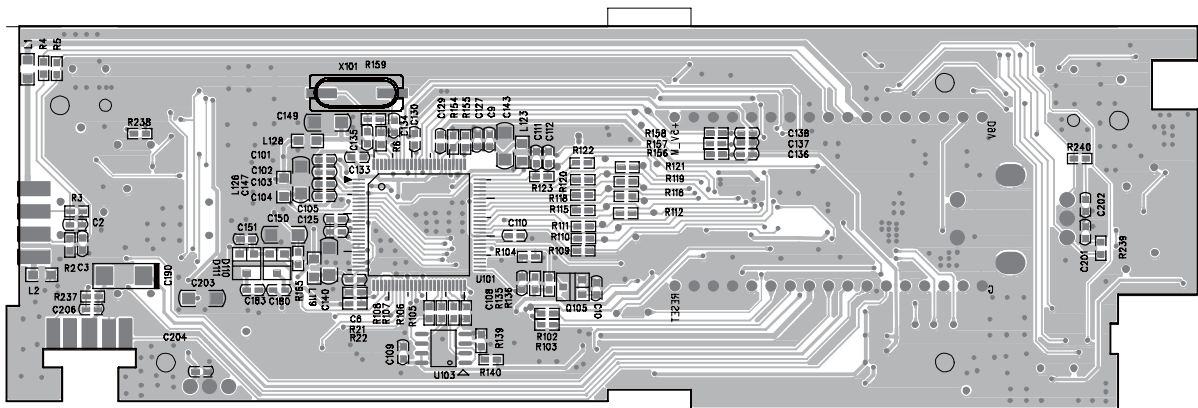

EXPLODED VIEW - MAIN NUIT

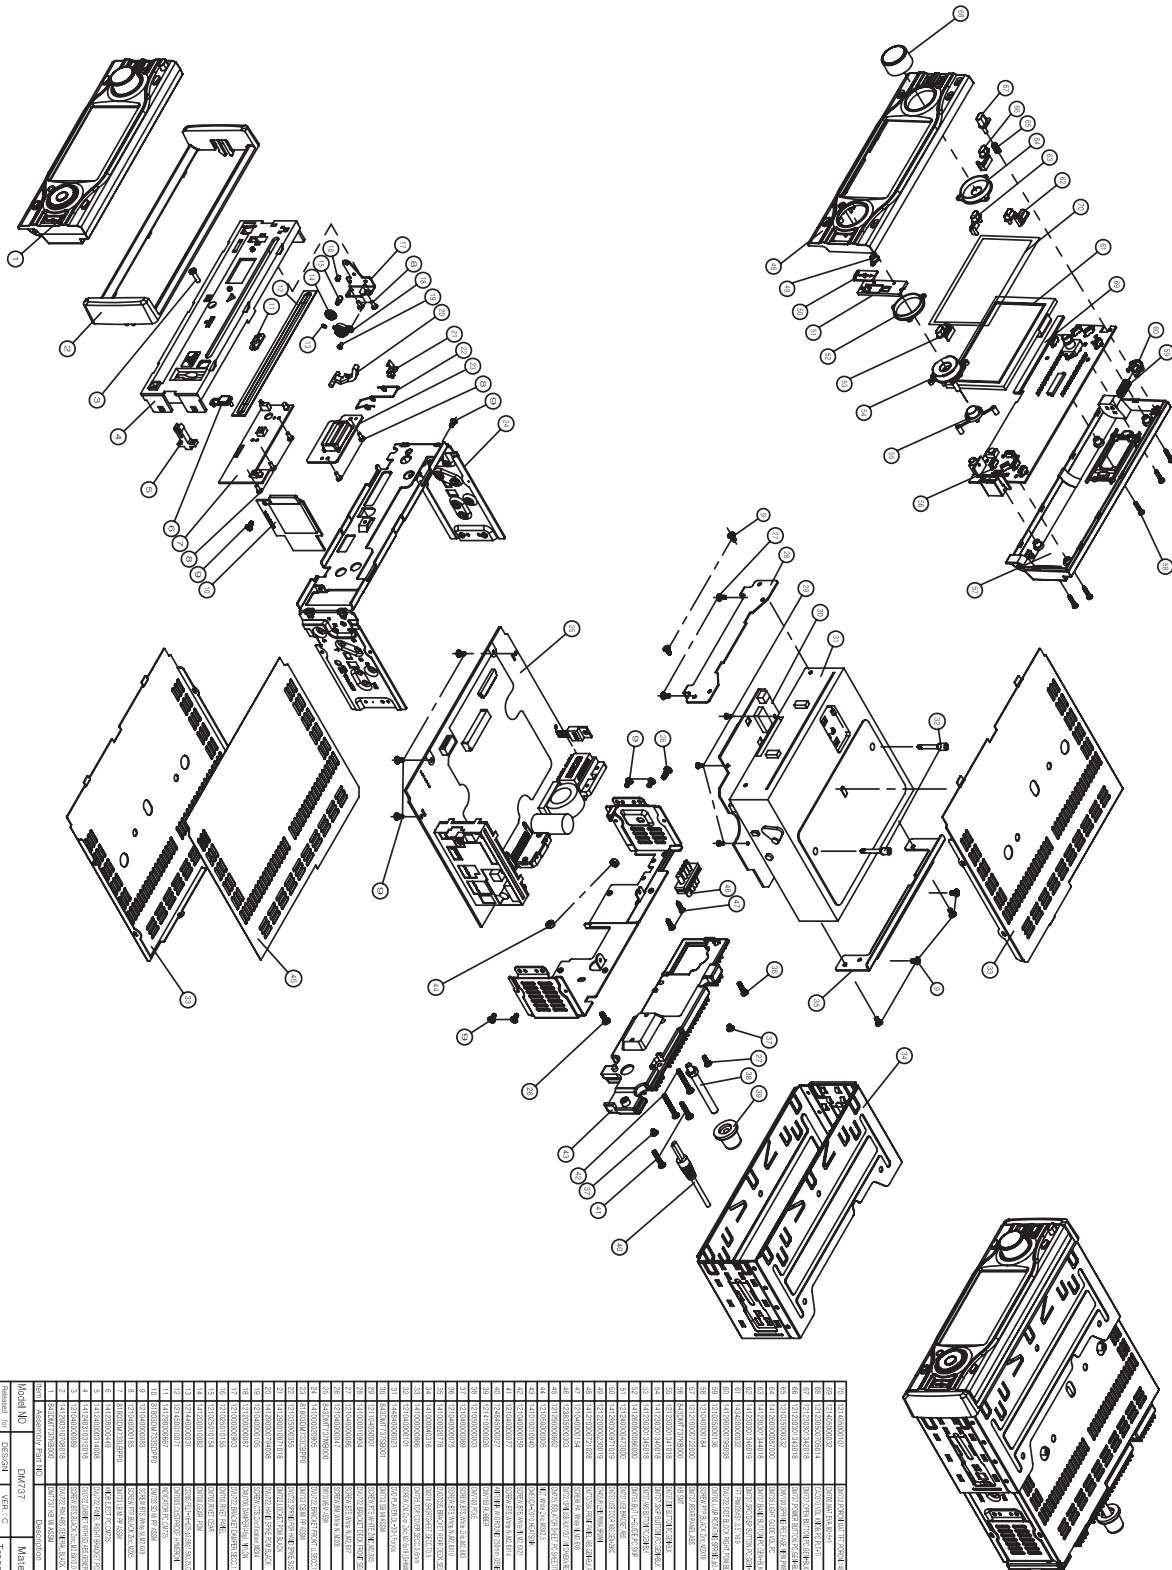

Part No.	Description	Quantity	Material	SEE PART	Notes
1	FRONT PANEL	1	PC/ABS	SEE PART	
2	INTERNAL CHASSIS	1	PC/ABS	SEE PART	
3	CONNECTOR	1	PC/ABS	SEE PART	
4	CONNECTOR	1	PC/ABS	SEE PART	
5	CONNECTOR	1	PC/ABS	SEE PART	
6	CONNECTOR	1	PC/ABS	SEE PART	
7	CONNECTOR	1	PC/ABS	SEE PART	
8	CONNECTOR	1	PC/ABS	SEE PART	
9	CONNECTOR	1	PC/ABS	SEE PART	
10	CONNECTOR	1	PC/ABS	SEE PART	
11	CONNECTOR	1	PC/ABS	SEE PART	
12	CONNECTOR	1	PC/ABS	SEE PART	
13	CONNECTOR	1	PC/ABS	SEE PART	
14	CONNECTOR	1	PC/ABS	SEE PART	
15	CONNECTOR	1	PC/ABS	SEE PART	
16	CONNECTOR	1	PC/ABS	SEE PART	
17	CONNECTOR	1	PC/ABS	SEE PART	
18	CONNECTOR	1	PC/ABS	SEE PART	
19	CONNECTOR	1	PC/ABS	SEE PART	
20	CONNECTOR	1	PC/ABS	SEE PART	
21	CONNECTOR	1	PC/ABS	SEE PART	
22	CONNECTOR	1	PC/ABS	SEE PART	
23	CONNECTOR	1	PC/ABS	SEE PART	
24	CONNECTOR	1	PC/ABS	SEE PART	
25	CONNECTOR	1	PC/ABS	SEE PART	
26	CONNECTOR	1	PC/ABS	SEE PART	
27	CONNECTOR	1	PC/ABS	SEE PART	
28	CONNECTOR	1	PC/ABS	SEE PART	
29	CONNECTOR	1	PC/ABS	SEE PART	
30	CONNECTOR	1	PC/ABS	SEE PART	
31	CONNECTOR	1	PC/ABS	SEE PART	
32	CONNECTOR	1	PC/ABS	SEE PART	
33	CONNECTOR	1	PC/ABS	SEE PART	
34	CONNECTOR	1	PC/ABS	SEE PART	
35	CONNECTOR	1	PC/ABS	SEE PART	
36	CONNECTOR	1	PC/ABS	SEE PART	
37	CONNECTOR	1	PC/ABS	SEE PART	
38	CONNECTOR	1	PC/ABS	SEE PART	
39	CONNECTOR	1	PC/ABS	SEE PART	
40	CONNECTOR	1	PC/ABS	SEE PART	
41	CONNECTOR	1	PC/ABS	SEE PART	
42	CONNECTOR	1	PC/ABS	SEE PART	
43	CONNECTOR	1	PC/ABS	SEE PART	
44	CONNECTOR	1	PC/ABS	SEE PART	
45	CONNECTOR	1	PC/ABS	SEE PART	
46	CONNECTOR	1	PC/ABS	SEE PART	
47	CONNECTOR	1	PC/ABS	SEE PART	
48	CONNECTOR	1	PC/ABS	SEE PART	
49	CONNECTOR	1	PC/ABS	SEE PART	
50	CONNECTOR	1	PC/ABS	SEE PART	
51	CONNECTOR	1	PC/ABS	SEE PART	
52	CONNECTOR	1	PC/ABS	SEE PART	
53	CONNECTOR	1	PC/ABS	SEE PART	
54	CONNECTOR	1	PC/ABS	SEE PART	
55	CONNECTOR	1	PC/ABS	SEE PART	
56	CONNECTOR	1	PC/ABS	SEE PART	
57	CONNECTOR	1	PC/ABS	SEE PART	
58	CONNECTOR	1	PC/ABS	SEE PART	
59	CONNECTOR	1	PC/ABS	SEE PART	
60	CONNECTOR	1	PC/ABS	SEE PART	
61	CONNECTOR	1	PC/ABS	SEE PART	
62	CONNECTOR	1	PC/ABS	SEE PART	
63	CONNECTOR	1	PC/ABS	SEE PART	
64	CONNECTOR	1	PC/ABS	SEE PART	
65	CONNECTOR	1	PC/ABS	SEE PART	
66	CONNECTOR	1	PC/ABS	SEE PART	
67	CONNECTOR	1	PC/ABS	SEE PART	
68	CONNECTOR	1	PC/ABS	SEE PART	
69	BACK PANEL	1	PC/ABS	SEE PART	
70	CONNECTOR	1	PC/ABS	SEE PART	
71	CONNECTOR	1	PC/ABS	SEE PART	
72	CONNECTOR	1	PC/ABS	SEE PART	