


PROLOGY MDD-300

SERVICE MANUAL

SPECIFICATION

Power requirement	12 V DC car battery (negative earth)
Operating temperature	-10 C to +70 C
Storage temperature:	-30 C ~ +80 C
Operational humidity:	45%~80%RH
Atmosphere pressure:	860mbar~1060mbar

CAR DVD PLAYER

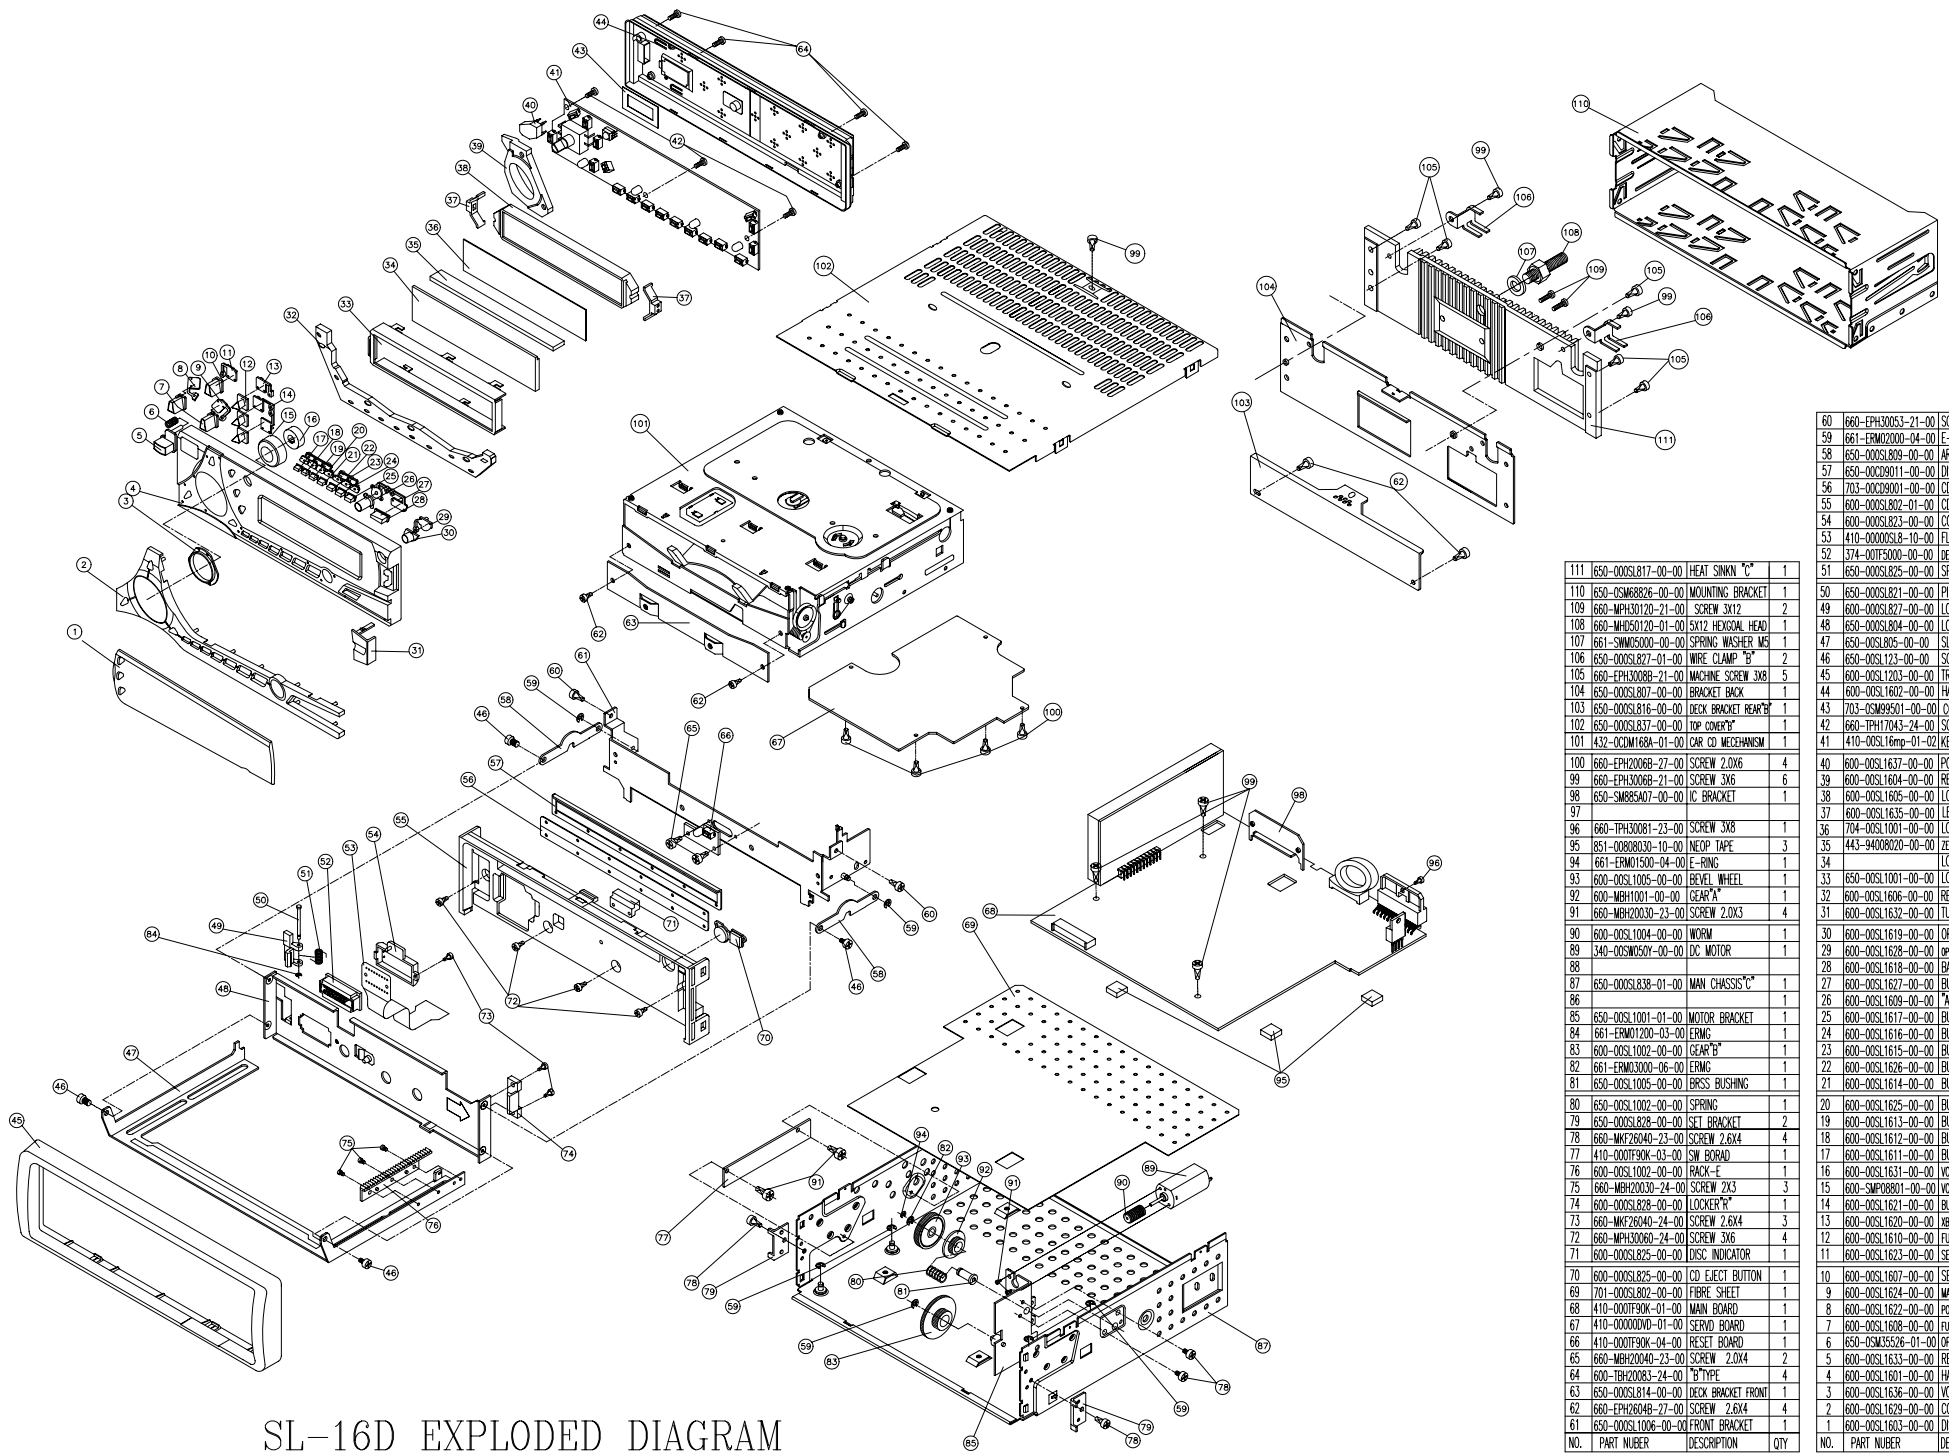


SL-16D EXPLODED DIAGRAM















111	650-000SL817-00-00	HEAT SINK "C"	1				
110	650-05M8826-00-00	MOUNTING BRACKET	1				
109	660-MPH30120-21-00	SCREW 3X12	2				
108	660-MH050120-01-00	5X12 HEXAGONAL HEAD	1				
107	661-SM05000-00-00	SPRING WASHER M5	1				
106	650-000SL827-01-00	WIRE CLAMP "B"	2				
105	660-EPH3008-21-00	MACHINE SCREW 3X8	5				
104	650-000SL807-00-00	BRACKET BACK	1				
103	650-000SL816-00-00	DECK BRACKET REAR "B"	1				
102	650-000SL837-00-00	TOP COVER "B"	1				
101	437-00DM168A-01-00	CAR CD MECHANISM	1				
100	660-EPH2006B-27-00	SCREW 2.0X6	4				
99	660-EPH3006B-21-00	SCREW 3X6	6				
98	650-SM885407-00-00	IC BRACKET	1				
97	660-TPH30081-23-00	SCREW 3X8	1				
96	660-TPH30081-23-00	SCREW 3X8	1				
95	851-00R0130-10-00	NEOP TAPE	3				
94	661-ERM01500-04-00	E-RING	34				
93	600-00SL1005-00-00	BEVEL WHEEL	1				
92	600-MB1001-00-00	GEAR "A"	1				
91	660-MB20030-23-00	SCREW 2.0X3	4				
90	600-00SL1004-00-00	WORM	1				
89	340-00SM0507-00-00	DC MOTOR	1				
88	600-00SL1604-00-00	REFLECTOR "L"	1				
87	650-000SL838-01-00	MAN CHASSIS "C"	1				
86	600-00SL1609-00-00	"A" BUTTON	1				
85	600-00SL1001-01-00	MOTOR BRACKET	1				
84	661-ERM01200-03-00	ERMIG	1				
83	600-00SL1002-00-00	GEAR "B"	1				
82	661-ERM03000-06-00	ERMIG	1				
81	650-00SL1005-00-00	BRSS BUSHING	1				
80	650-00SL1002-00-00	SPRING	1				
79	650-000SL828-00-00	SET BRACKET	2				
78	660-MKF26040-23-00	SCREW 2.6X4	4				
77	410-000TP90K-03-00	SW BOARD	1				
76	600-00SL1002-00-00	RACK "E"	1				
75	660-MB20030-24-00	SCREW 2X3	3				
74	600-000SL828-00-00	LOCKER "R"	1				
73	660-MKF26040-24-00	SCREW 2.6X4	3				
72	660-MPH3006-24-00	SCREW 3X6	4				
71	600-000SL825-00-00	DISC INDICATOR	1				
70	600-000SL825-00-00	CD EJECT BUTTON	1				
69	701-000SL802-00-00	FIBRE SHEET	1				
68	410-000TP90K-01-00	MAIN BOARD	1				
67	410-000000D-01-00	SERVO BOARD	1				
66	410-000TP90K-04-00	RESET BOARD	1				
65	660-MB20040-23-00	SCREW 2.0X4	2				
64	600-TB20083-24-00	"B" TYPE	4				
63	650-000SL814-00-00	DECK BRACKET FRONT	1				
62	660-EPH2604B-27-00	SCREW 2.6X4	4				
61	650-000SL1006-00-00	FRONT BRACKET	1				
60	660-EPH30053-21-00	SCREW 3X5	2				
59	661-ERM02000-04-00	E-RING	7				
58	650-000SL809-00-00	ARM	2				
57	650-00039011-00-00	DISC FEEL	1				
56	703-00039001-00-00	CD BUSTPROOF FELT	1				
55	600-000SL802-01-00	CD BASE	1				
54	600-000SL823-00-00	CONNECTOR COVER	1				
53	410-00000SL8-10-00	FLEXIBLE PCB	1				
52	374-00T5000-00-00	DETACHABLE CONNECTOR	1				
51	650-000SL825-00-00	SPRING "A"	1				
50	650-000SL821-00-00	PIN "B"	1				
49	600-000SL827-00-00	LOCKER "L"	1				
48	650-000SL804-00-00	LOADING BRACKET	1				
47	650-000SL805-00-00	SLIDE BRACKET	1				
46	650-00SL123-00-00	SCREW	4				
45	600-00SL1203-00-00	TRIM PLATE	1				
44	600-00SL1602-00-00	HANDY BACK	1				
43	703-03M99501-00-00	CONNECTOR FELT	1				
42	660-TPH17043-24-00	SCREW 1.7X4	3				
41	410-00SL16mp-01-02	KEY BOARD	1				
40	600-00SL1637-00-00	POWER REFLECTOR	1				
39	600-00SL1604-00-00	REFLECTOR "L"	1				
38	600-00SL1605-00-00	LCD REFLECTOR	1				
37	600-00SL1635-00-00	LED BRACKET "A"	2				
36	704-00SL1001-00-00	LCD PLATE	1				
35	443-94008020-00-00	ZEBRA RUBBER CONTACT	1				
34	600-00SL1001-00-00	LCD	1				
33	650-00SL1001-00-00	LCD HOUSE	1				
32	600-00SL1606-00-00	REFLECTOR "R"	1				
31	600-00SL1632-00-00	TUNE BUTTON	1				
30	600-00SL1619-00-00	OPEN BUTTON "E"	1				
29	600-00SL1628-00-00	OPEN BUTTON "E" ADAPTOR	1				
28	600-00SL1618-00-00	BAND BUTTON	1				
27	600-00SL1627-00-00	BUTTON ADAPTOR "D"	1				
26	600-00SL1609-00-00	"A" BUTTON	1				
25	600-00SL1617-00-00	BUTTON "G"	1				
24	600-00SL1616-00-00	BUTTON "5"	1				
23	600-00SL1615-00-00	BUTTON "4"	1				
22	600-00SL1626-00-00	BUTTON ADAPTOR "C"	1				
21	600-00SL1614-00-00	BUTTON "3"	1				
20	600-00SL1625-00-00	BUTTON ADAPTOR "B"	1				
19	600-00SL1613-00-00	BUTTON "2"	1				
18	600-00SL1612-00-00	BUTTON "1"	1				
17	600-00SL1611-00-00	BUTTON AS/PS	1				
16	600-00SL1631-00-00	VOL. BUTTON ADAPTOR	1				
15	600-SMP08001-00-00	VOL. BUTTON ADAPTOR	1				
14	600-00SL1621-00-00	BUTTON ADAPTOR "A"	1				
13	600-00SL1620-00-00	IRBSS BUTTON ADAPTOR	1				
12	600-00SL1610-00-00	FUNCTION BUTTON "B"	3				
11	600-00SL1623-00-00	SEL. BUTTON ADAPTOR	1				
10	600-00SL1607-00-00	SEL. BUTTON	1				
9	600-00SL1624-00-00	MODE BUTTON ADAPTOR	1				
8	600-00SL1622-00-00	POWER BUTTON ADAPTOR	1				
7	600-00SL1608-00-00	FUNCTION BUTTON	2				
6	650-03M35326-01-00	OPEN BUTTON SPRING	2				
5	600-00SL1633-00-00	RELEASE BUTTON	1				
4	600-00SL1601-00-00	HANDY FRONT	1				
3	600-00SL1636-00-00	VOLUME REFLECTOR	1				
2	600-00SL1629-00-00	COVER	1				
1	600-00SL1603-00-00	DISPLAY LENS	1				
NO.	PART NUMBER	DESCRIPTION	QTY	NO.	PART NUMBER	DESCRIPTION	QTY

脚位	规格 R-H LED	规格 R-B LED
R18	180Ωm 1.6W	22 Ωm 1.6W
R20	6.80Ωm 1.4W	10 Ωm 1.4W


脚位	PT6578LQ
84	控制LCD背光灯开关
85	控制BUTTON背光灯开关
86	控制蓝色LED
87	控制红色LED


脚位	18PIN-接插器说明
1	KEY1 (控制BUTTON作用)
2	ENCODER-VOL控制脚
3	INH (LCD-IC到主机CPU)
4	CE (LCD-IC到主机CPU)
5	CLK (LCD-IC到主机CPU)
6	DATA (LCD-IC到主机CPU)
7	CPU检测开关
8	CPU供电+5V
9	KEY2 (控制BUTTON作用)
10	LCD-IC供电+5V
11	KEY脚地
12	ACC-IN 12V
13	接插脚
14	LED灯脚地
15	LED灯供电+5V
16	ENCODER-LED灯内控制
17	空脚
18	空脚

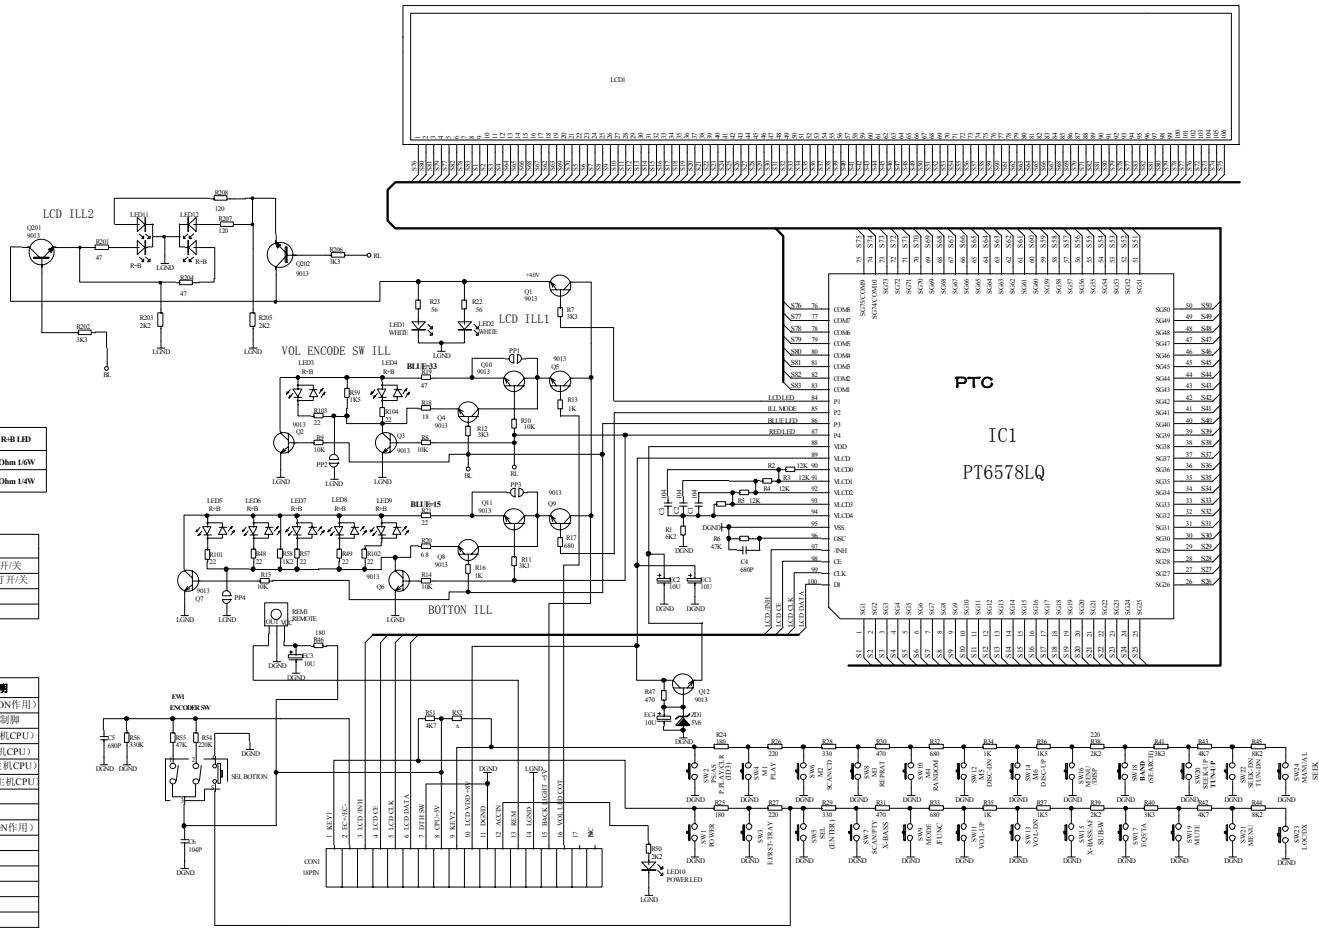


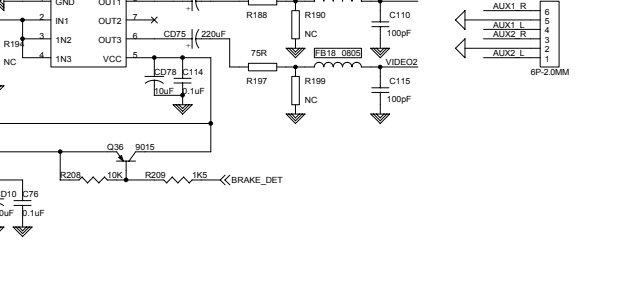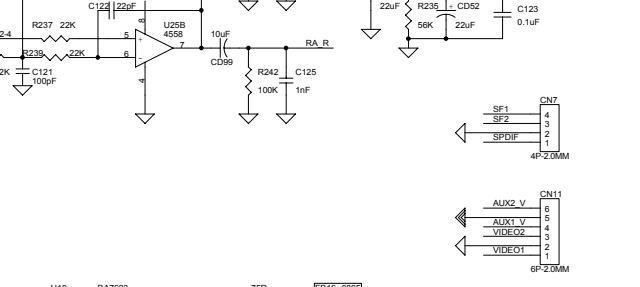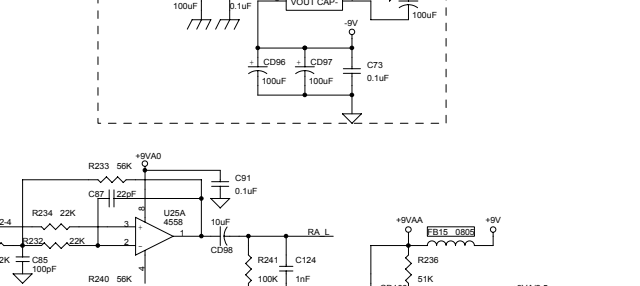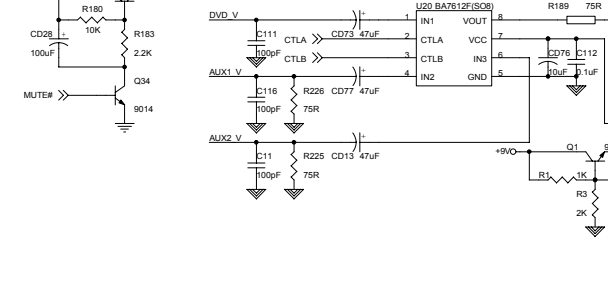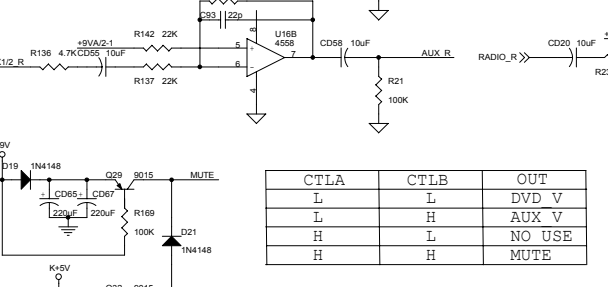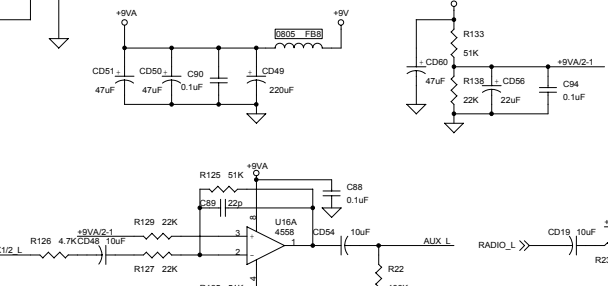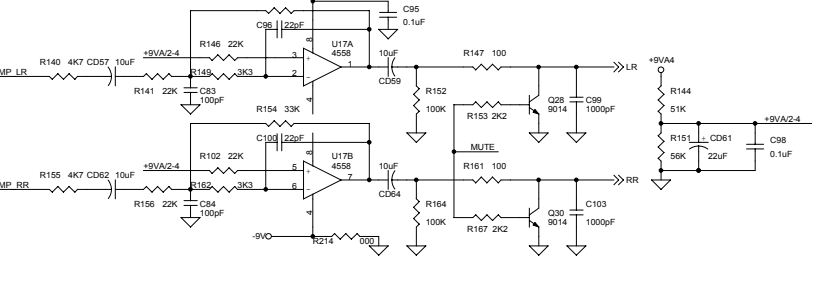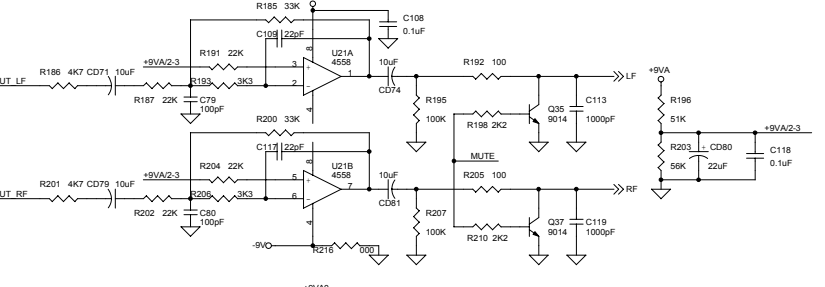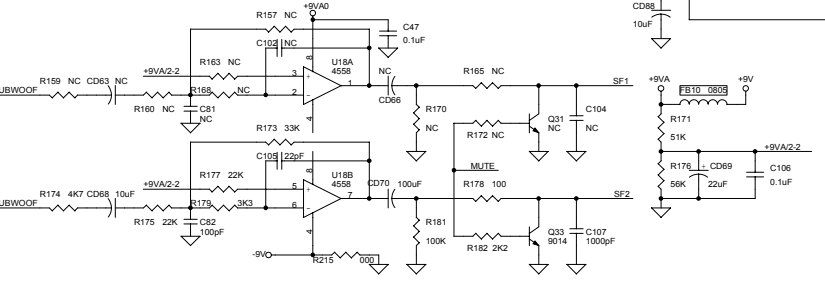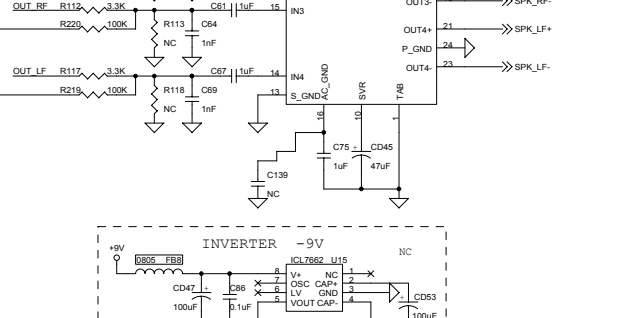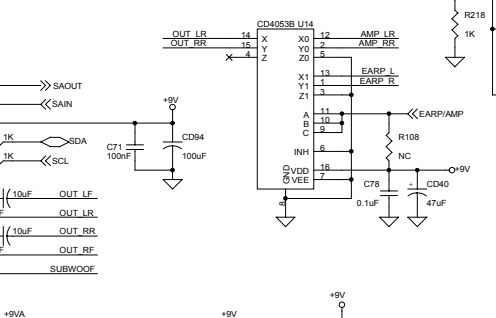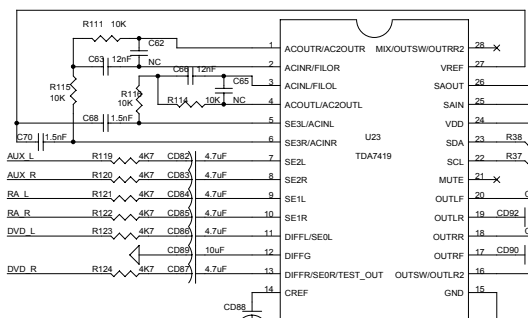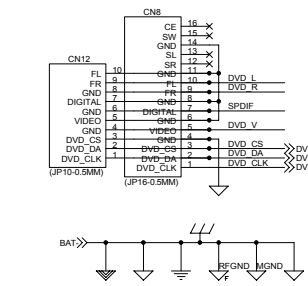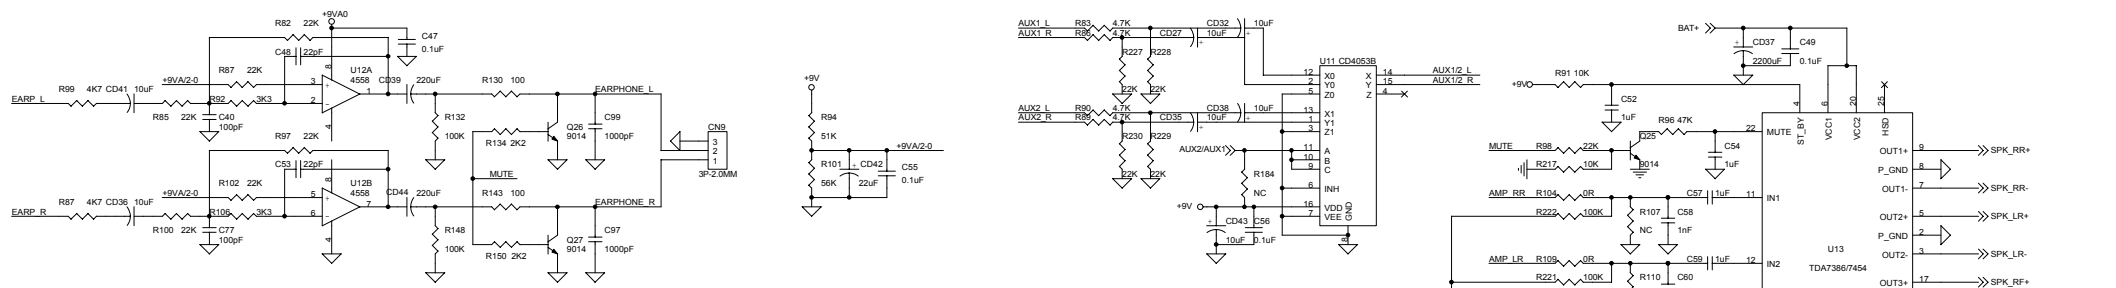


CTLA	CTLB	OUT
L	L	DVD V
L	H	AUX V
H	L	NO USE
H	H	MUTE

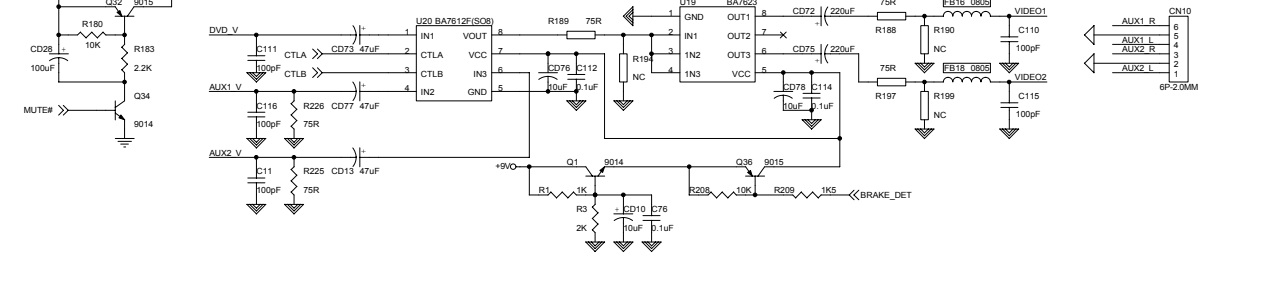

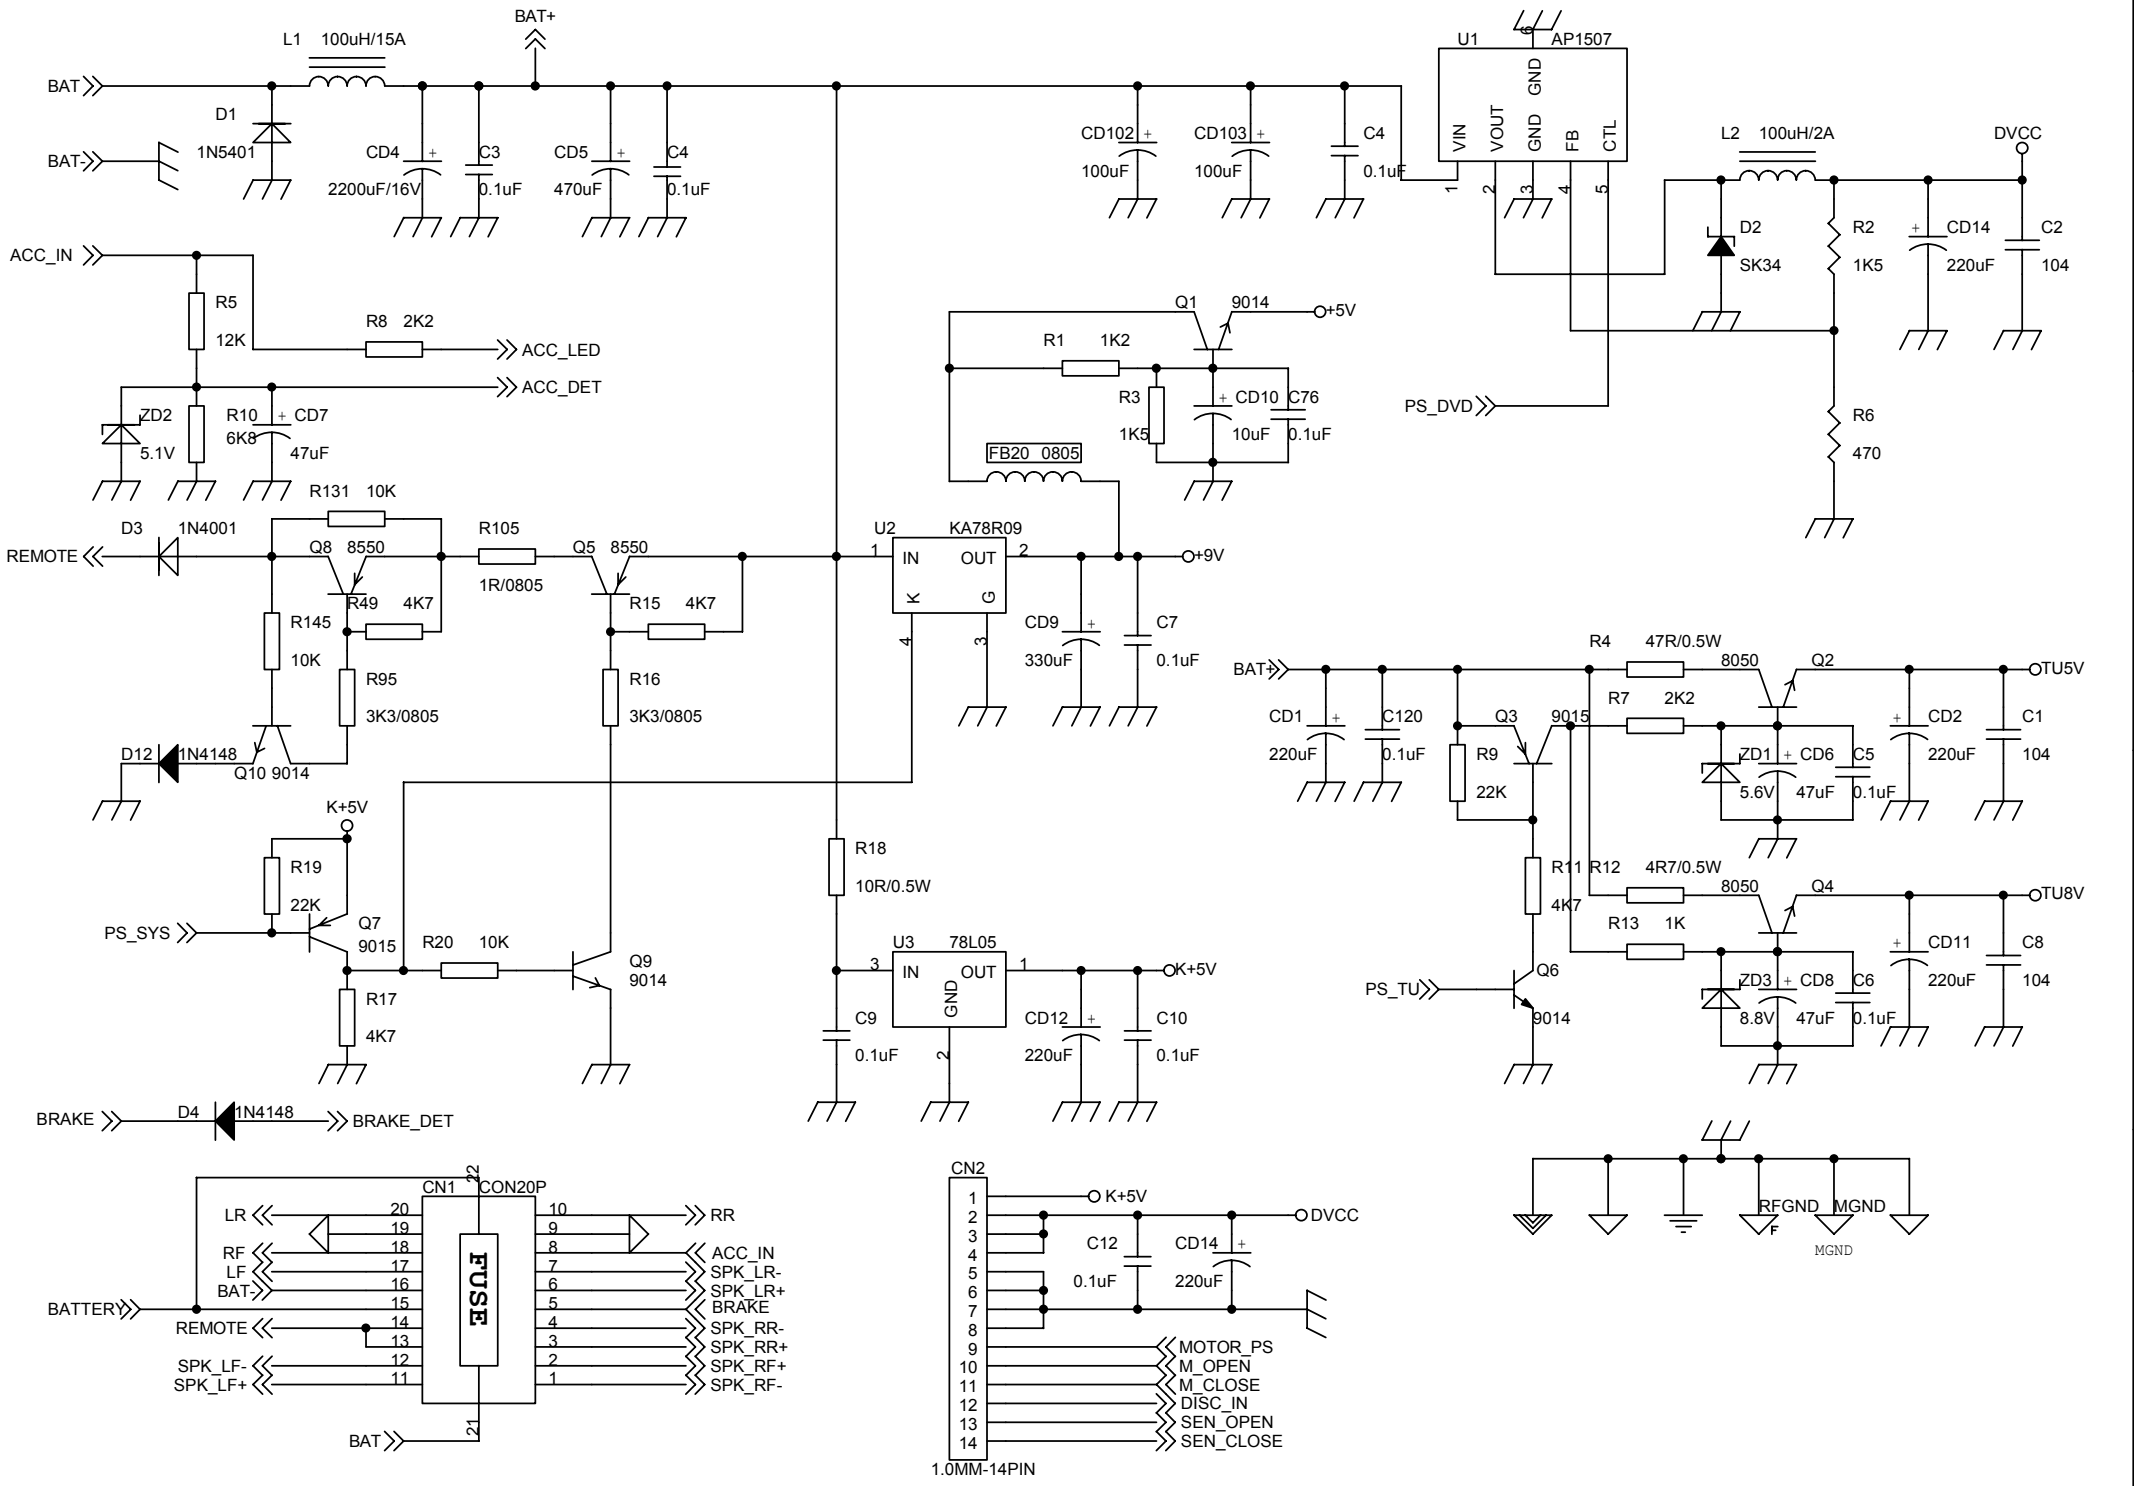




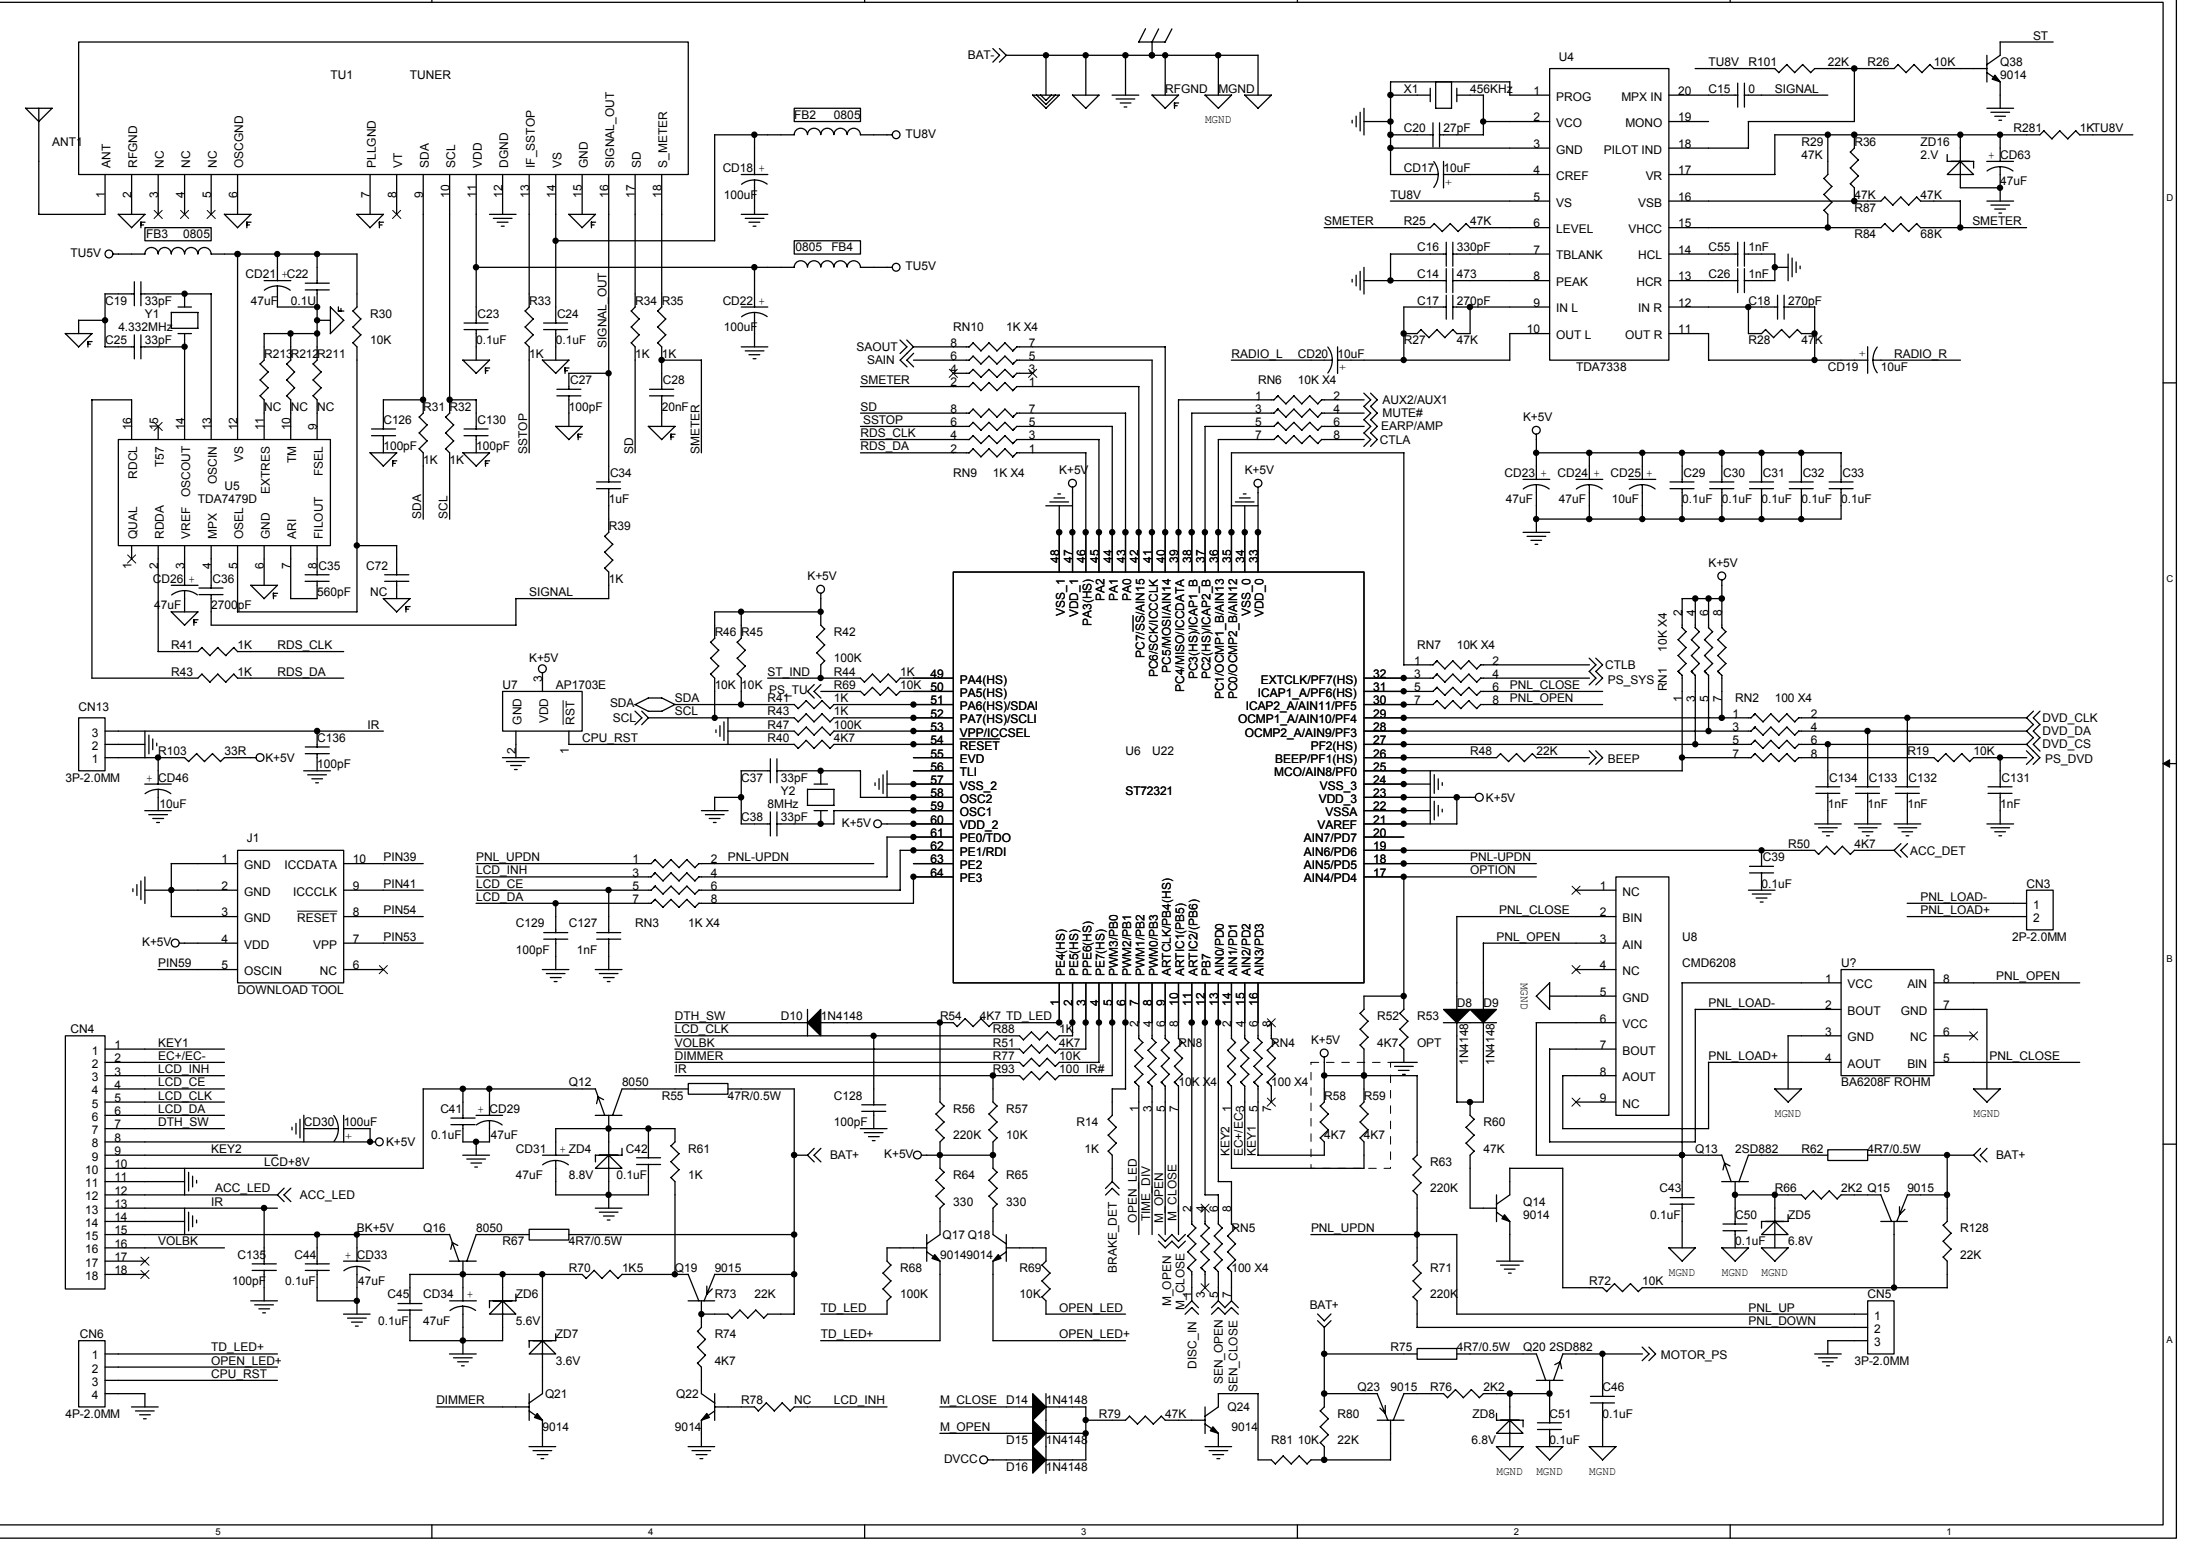


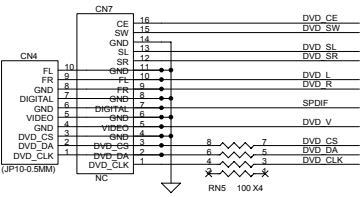








M3355 GPIO Usage

GPIO0	IR_EN (NO USE!)
GPIO1	DVD_CS
GPIO2	DVD_DA
GPIO3	DVD_CLK
GPIO4	MIC_DA
GPIO5	MIC_SCL
GPIO6	PS_ANSWER (NO USE!)
GPIO7	PS_NOTICE (NO USE!)
GPIO8	DRV5B
GPIO9	IR_SW
GPIO10	GAINSW
GPIO11	INSW
GPIO12	OUTSW
GPIO13	DISC_IN
GPIO14	OPEN
GPIO15	CLOSE
GPIO16	HOME_SW
GPIO17	
GPIO18	
GPIO19	
GPIO19	TXD

XSFCP	XSFCP
XSFGN	XSFGN
SLEGP	SLEGP
TV_DAC2	TV_DAC1
TV_DAC3	TV_DAC1
XFLAG0	XYSNC
XFLAG1	XYSNC
SBLPFO	
CELPEFO	
FELPFO	
TELPFO	
TEXD	
SVREF21	SVREF21

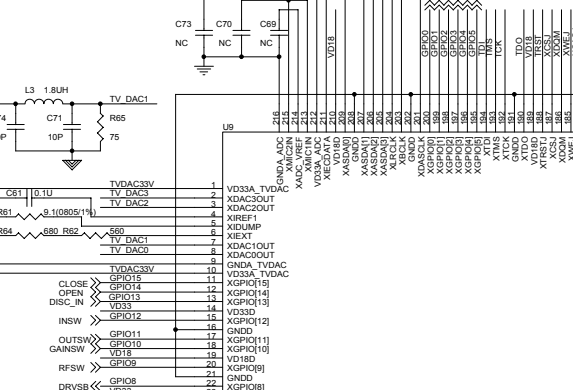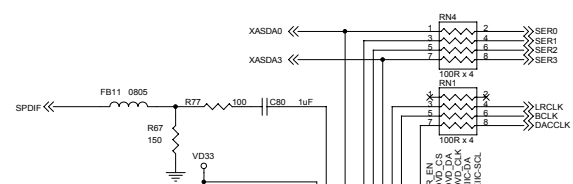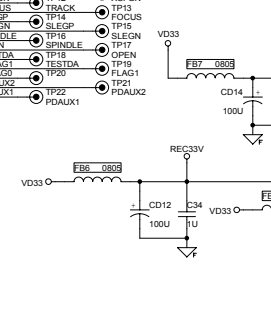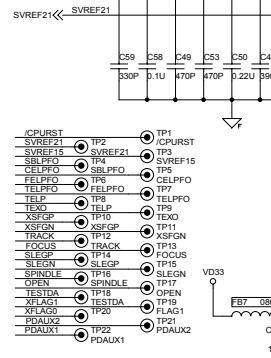

ALi M3355

 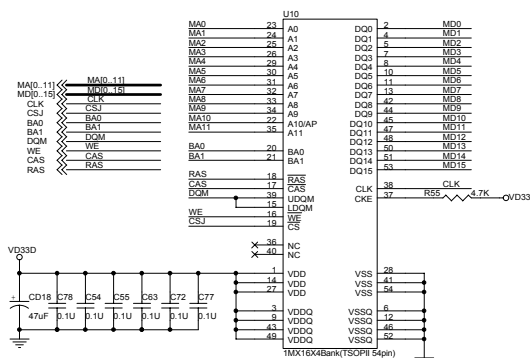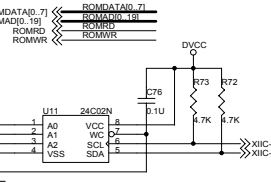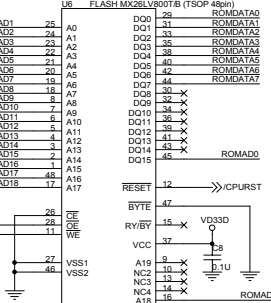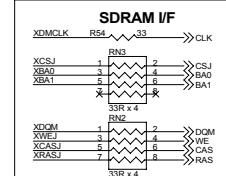  

XMD115	162	MD15
XMD114	161	MD14
XMD113	160	MD13
XMD112	159	MD12
XMD111	158	MD11
XMD110	157	MD10
XMD109	156	MD9
XMD108	155	MD8
XMD107	154	MD7
XMD106	153	MD6
XMD105	152	MD5
XMD104	151	MD4
XMD103	150	MD3
XMD102	149	MD2
XMD101	148	MD1
XMD100	147	MD0
XMD99	146	MD0
XMD98	145	MD0
XMD97	144	MD0
XMD96	143	MD0
XMD95	142	MD0
XMD94	141	MD0
XMD93	140	MD0
XMD92	139	MD0
XMD91	138	MD0
XMD90	137	MD0
XMD89	136	MD0
XMD88	135	MD0
XMD87	134	MD0
XMD86	133	MD0
XMD85	132	MD0
XMD84	131	MD0
XMD83	130	MD0
XMD82	129	MD0
XMD81	128	MD0
XMD80	127	MD0
XMD79	126	MD0
XMD78	125	MD0
XMD77	124	MD0
XMD76	123	MD0
XMD75	122	MD0
XMD74	121	MD0
XMD73	120	MD0
XMD72	119	MD0
XMD71	118	MD0
XMD70	117	MD0
XMD69	116	MD0
XMD68	115	MD0
XMD67	114	MD0
XMD66	113	MD0
XMD65	112	MD0
XMD64	111	MD0
XMD63	110	MD0
XMD62	109	MD0
XMD61	108	MD0
XMD60	107	MD0
XMD59	106	MD0
XMD58	105	MD0
XMD57	104	MD0
XMD56	103	MD0
XMD55	102	MD0
XMD54	101	MD0
XMD53	100	MD0
XMD52	99	MD0
XMD51	98	MD0
XMD50	97	MD0
XMD49	96	MD0
XMD48	95	MD0
XMD47	94	MD0
XMD46	93	MD0
XMD45	92	MD0
XMD44	91	MD0
XMD43	90	MD0
XMD42	89	MD0
XMD41	88	MD0
XMD40	87	MD0
XMD39	86	MD0
XMD38	85	MD0
XMD37	84	MD0
XMD36	83	MD0
XMD35	82	MD0
XMD34	81	MD0
XMD33	80	MD0
XMD32	79	MD0
XMD31	78	MD0
XMD30	77	MD0
XMD29	76	MD0
XMD28	75	MD0
XMD27	74	MD0
XMD26	73	MD0
XMD25	72	MD0
XMD24	71	MD0
XMD23	70	MD0
XMD22	69	MD0
XMD21	68	MD0
XMD20	67	MD0
XMD19	66	MD0
XMD18	65	MD0
XMD17	64	MD0
XMD16	63	MD0
XMD15	62	MD0
XMD14	61	MD0
XMD13	60	MD0
XMD12	59	MD0
XMD11	58	MD0
XMD10	57	MD0
XMD9	56	MD0
XMD8	55	MD0
XMD7	54	MD0
XMD6	53	MD0
XMD5	52	MD0
XMD4	51	MD0
XMD3	50	MD0
XMD2	49	MD0
XMD1	48	MD0
XMD0	47	MD0

