







ANT.

TP101

TP102

EAR102

R120 C131 R132 R136 C127 C130 R131 C119 C153 C152

C304 R300 C303 L302

SPK101

C331

L307

U302

C353 C354 C355 C352

RFS400

L303

U106

C133

PAM400

SH400

F401 F400

ZD122 ZD121 R322 R310 R145 C147 R137 R153 R133 R153 C148 R144 R146 C143 C137 R14 R140 U101 R128 R123 R128 R123 C121 C128 C128 C144 C140 R121 R124 R149 R148 R125 R127 R152 R150

UCP101

C123 C101 C102 R200 C202

G8

U400

L309 OSC400

G7

UCP201

TR103 (INTRO) (PWR\_KEEP) TP202 R215 R216 TP204 TP203 C211 C218 C214 C209 R204 C208 C129 C201

RST (EP\_TD) (EP\_TMS) GND (EP\_TCK) (EP\_TDI)

U206

C200 C203 C204 C205 C206 C207 C208 C209 C210 C211 C212 C213 C214 C215 C216 C217 C218 C219 C220 C221

SIM103

C110

BTC104

ZD114 VR112 R210

G5

C103 R100 C104 C105 C106

DCJ101

R129 R122 U109 R126 R130 C125

C139 R151 R157 C150 R154 R147 C146 C145 VR119 VR118 R156 U105 C149

G6

MIC100

MOD300

GND300

GND301

MENU

ZD216

LEFT

UP

I

RIGHT

STO

SEND

LED301  
R312  
ZD217  
VR212

DOWN

LED307  
R318  
VR206

PWR

1

VR205  
R315  
LED304

VR208  
R313  
LED302  
VR204

2

VR209  
R314  
LED303

3

VR203  
R317  
LED306

4

ZD218

5

6

7

LED308  
R319

8

LED305  
R316

9

\*

0

SHARP