Car Audio


DVS-2130




Service Manual





SET WIRING DIAGRAM

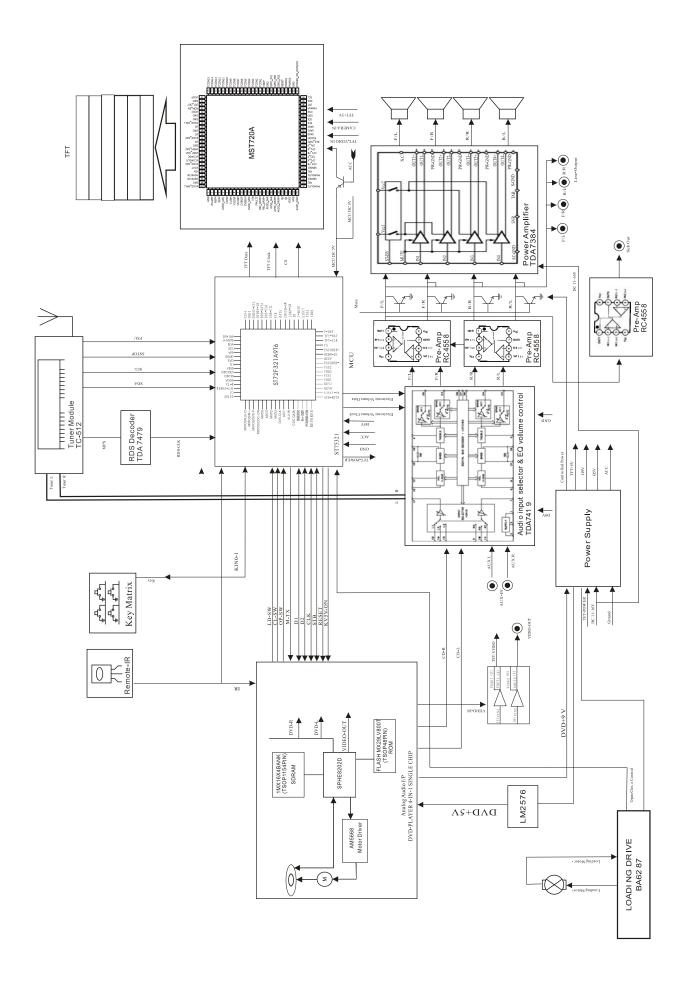


MAIN BOARD - CIRCUIT DIAGRAM

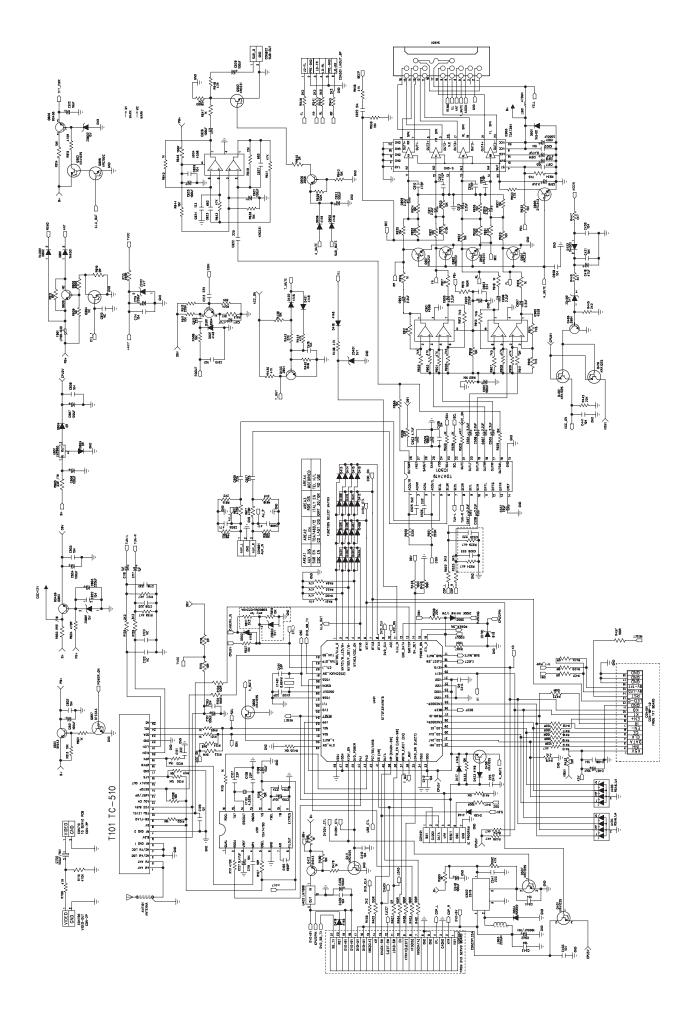


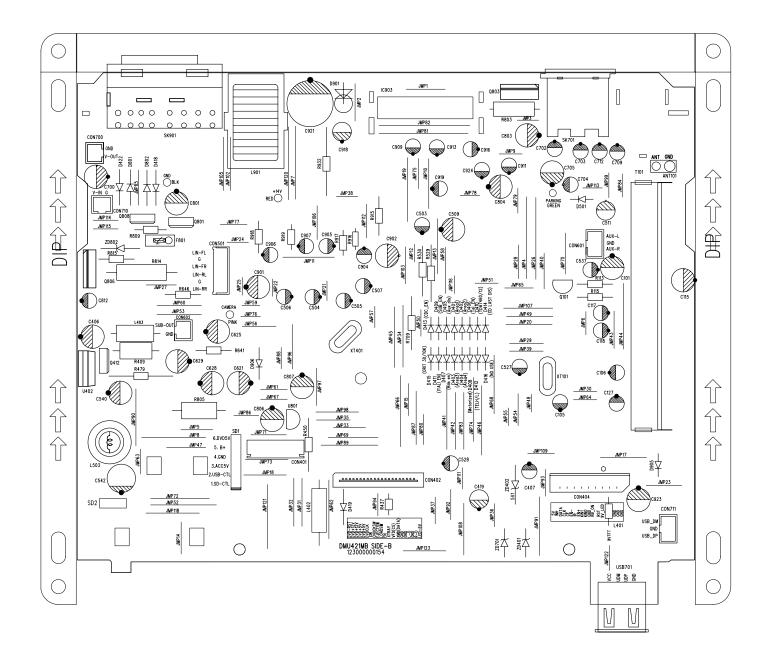


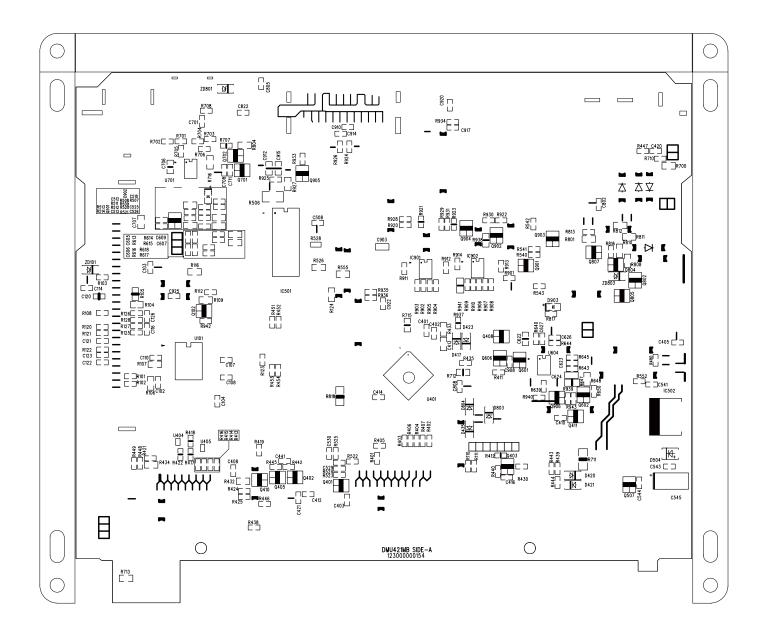


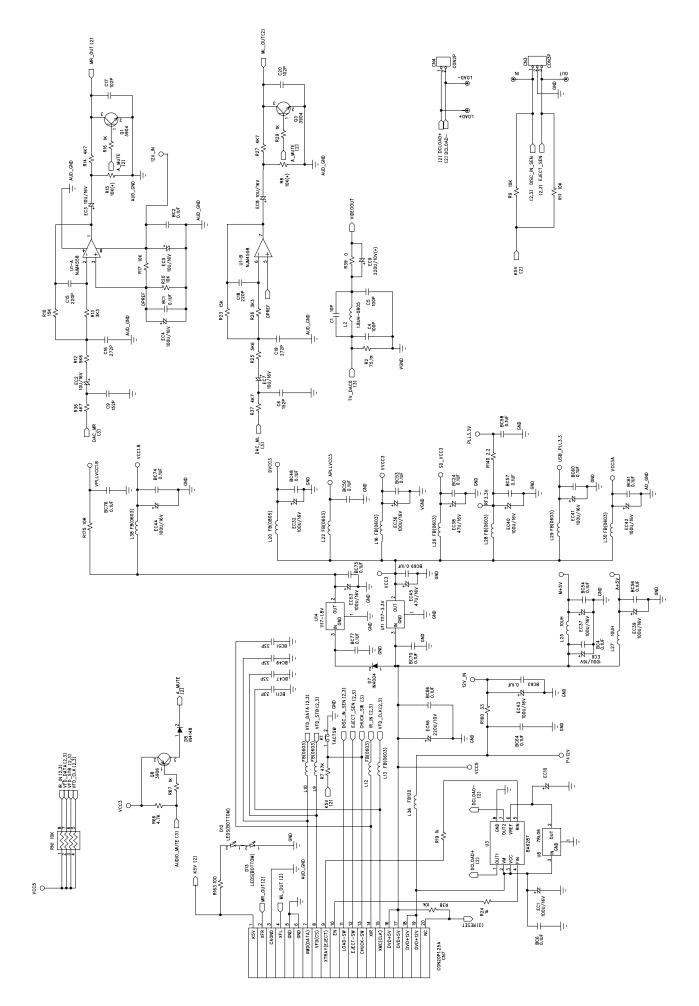


SERVO BOARD - CIRCUIT DIAGRAM

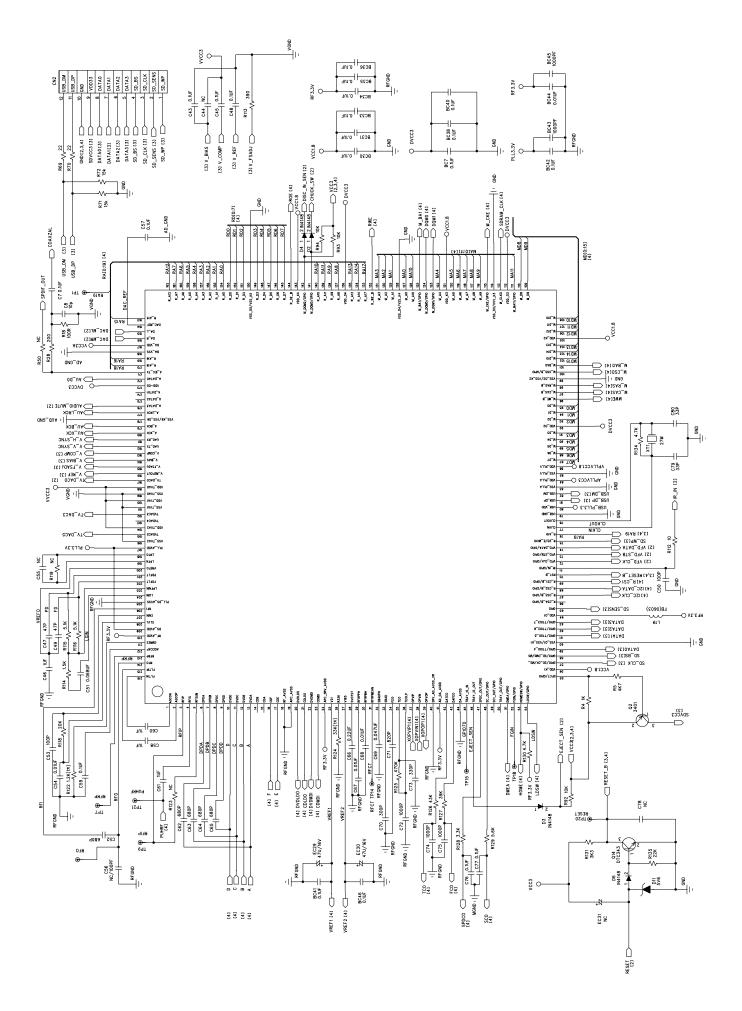


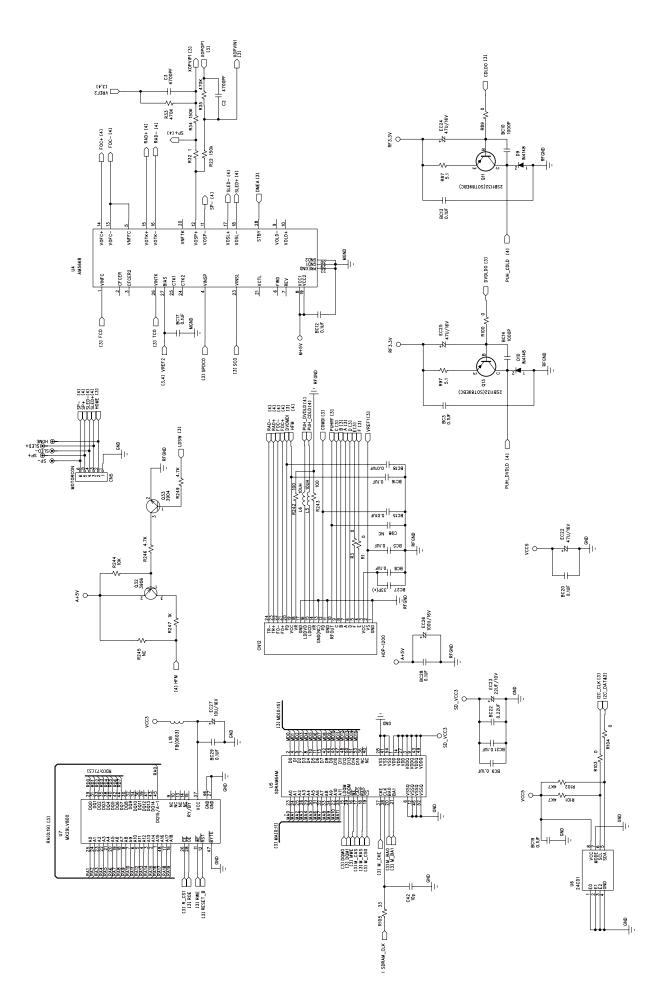

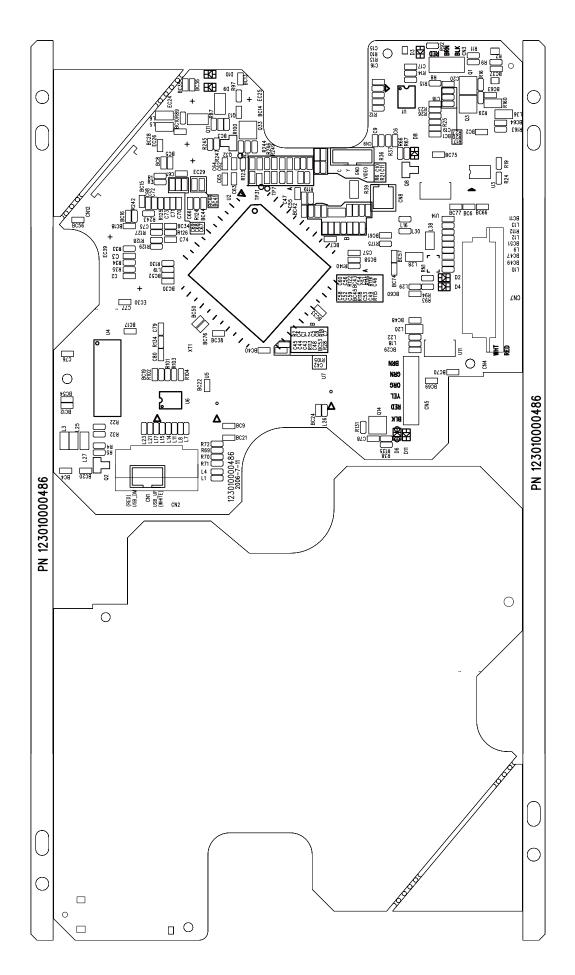

SERVO BOARD - LAYOUT DIAGRAM BOTTOM VIEW

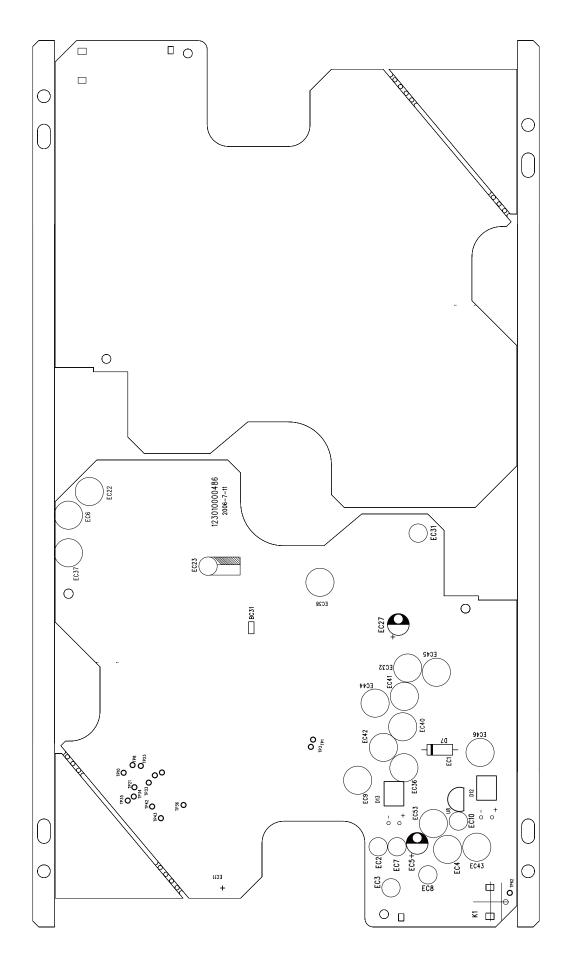

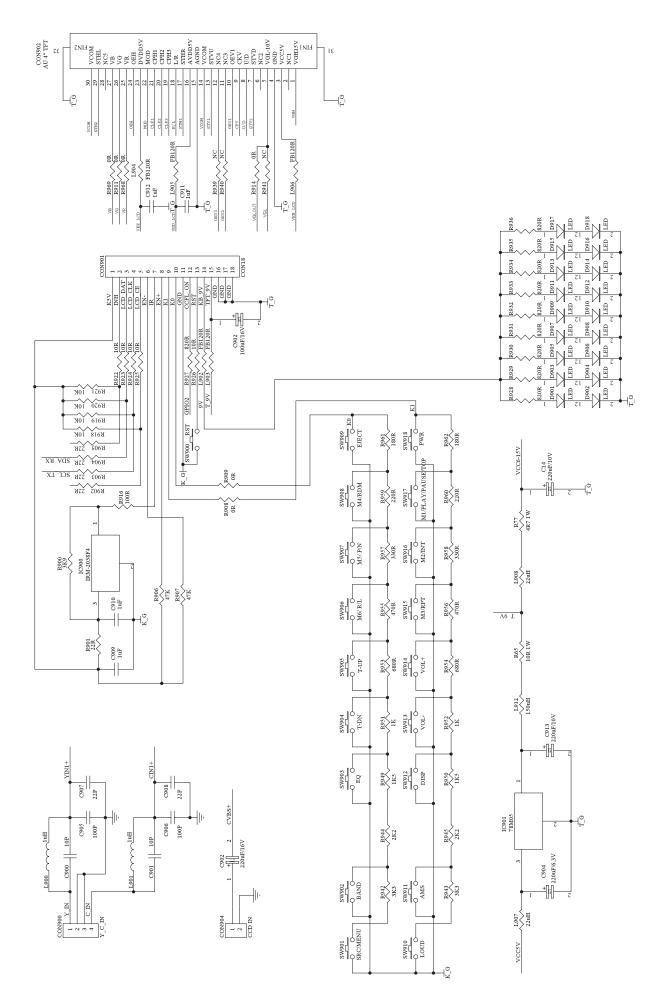

KEY BOARD - CIRCUIT DIAGRAM

SCP2 FB

 $\frac{1}{2}$

C97 C98 0.1uF 0.1uF

C95 C96 C

SCP1_FB

C83 100F/25V C1206

C84 - C85 - C86 0.1uF 0.1uF 0.1uF

łŀ

CP1_N≫ СР1_Р≫

C82 0.1uF

☆ ☆ KEF_PWM 📎


CP2_N CP2_P


5C88 0.1uF

R70 22K

-||+


R79 30K

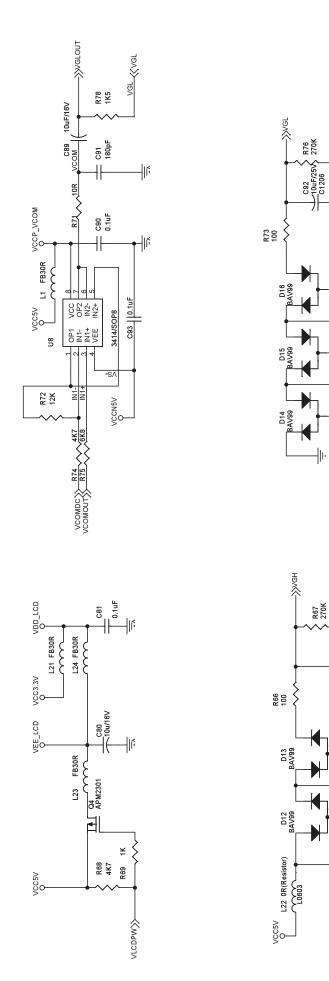




12

KEY BOARD - CIRCUIT DIAGRAM

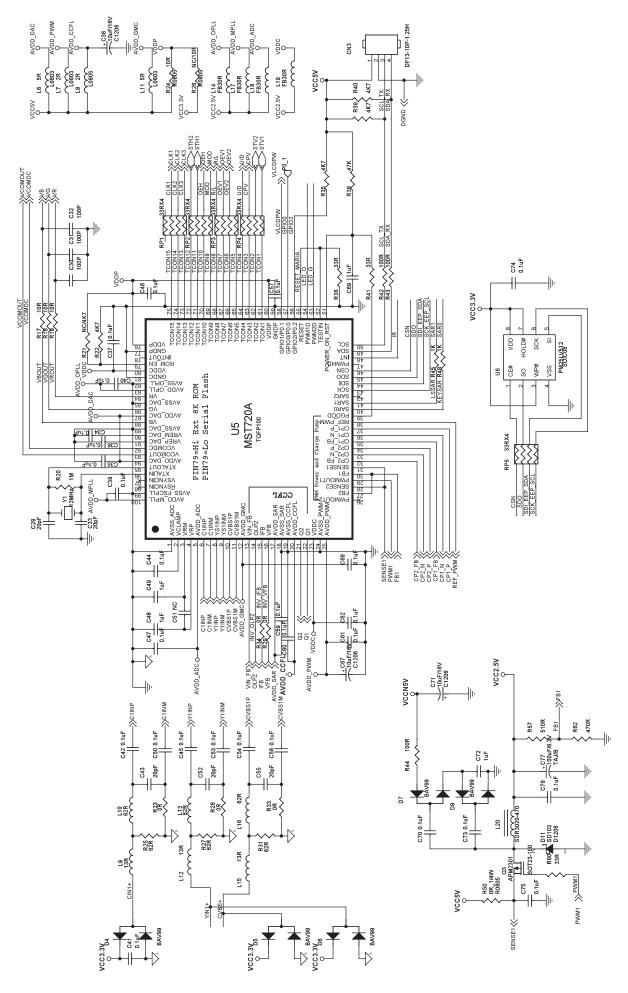

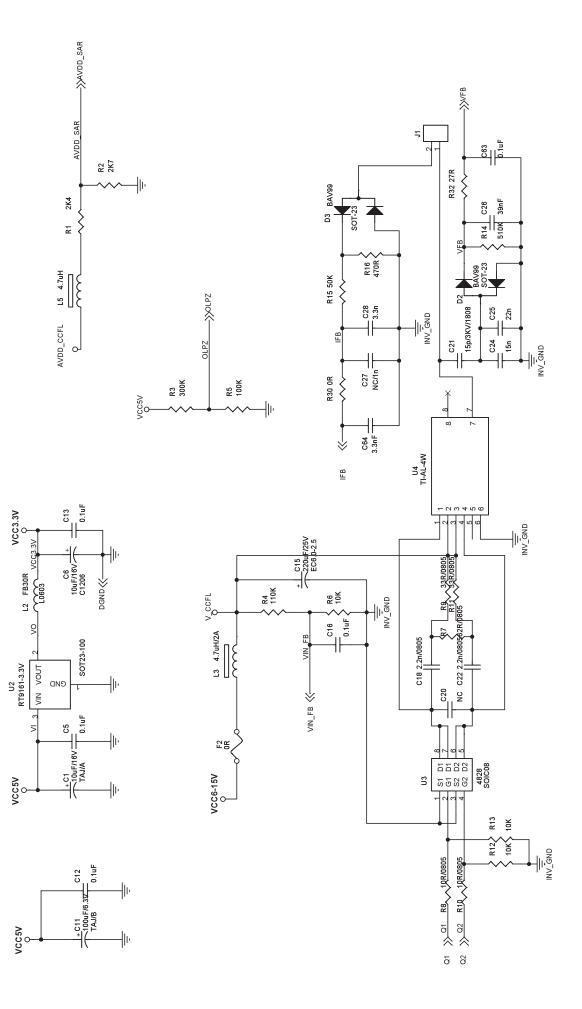

KB BOARD - CLAYOUT DIAGRAM TOP VIEW

