# **AV110T Service Manual**

#### **Contents**

## chapter One Brief Introduction to Product

Section One General description Section Two Functions and features

# **Chapter Two Operating Principle**

Section One Overall structure

Section Two Volume board

Section Three Signal processing board

Section Four CPU board

Section Five Panel control and display circui

Section Six Power amplifier board

Section Seven Video board

## **Chapter Three Servicing Process**

- 1. No output for Karaoke
- 2. Power supply not connected
- 3. No on screen display (OSD)
- 4. No output

Schematic & pcb wiring diagram

Spare parts list

### **Chapter One Brief Introduction to Product**

#### **Section One General Description**

AV110T is a 5.1CH audio power amplifier for home theatre usage. On the basis of AV100, the follows are newly added functions:

- 1.1.1 Digital tuning function;
- 1.1.2 Video switch function;
- 1.1.3 Headphone output function;
- 1.1.4 Scene surround sound function.

#### **Section Two Functions and features**

- 1.2.1 Two-way audio signal input: VCD, DVD;
- 1.2.2 With 5.1CH input terminal, capable of connection with AC-3, DTS decode output signal;
- 1.2.3 One way subwoofer signal line output, capable of connecting with active subwoofer speaker;
- 1.2.4 Automatically signal search when power on;
- 1.2.5 6CH digital volume control and separate channel level adjustment;
- 1.2.6 Three sound field modes: Hi-Fi, Standard and Cyber Logic;
- 1.2.7 Six preset EQ modes, multi-band electronic equalization adjustment;
- 1.2.8 Save/Call of user-set parameter;
- 1.2.9 Digital Karaoke, with microphone volume, echo and delay adjustment;
- 1.2.10 Auto mute function;
- 1.2.11 Dynamic display screen; multiple spectrum display modes; English intelligent operation interface;
- 1.2.12 Bass enhancer function;
- 1.2.13 Full remote control operation.

### **Chapter Two Operating Principle**

#### **Section One Overall structure**


The whole unit of AV110T is mainly composed of the following parts:

- 2.1.1 Volume board: input selection, Cyber Logic and bass enhancer control.
- 2.1.2 Signal processing board: Karaoke signal processing and front stage amplifying of 5.1Ch signal.
- 2.1.3 CPU board: whole machine control unit, breadth sampling circuit and auto searching circuit.
- 2.1.4 Control panel: LCD display, remote control and keyboard scanning and fulfill man-machine conversation function.
- 2.1.5 Power amplifier board: supply operating voltage required for each unit circuit, and perform power amplifying for 5.1Ch signal or analog signal.
- 2.1.6 Tuner: receive radio signal and then send to power amplifier to perform signal processing.
- 2.1.7 Video input and output board: fulfill video input and video switch function.

#### Section Two Volume board

AV110T has 4 kinds of input modes in all: FM/AM, VCD, DVD and 5.1CH.

By sampling from L/R channel of AV110T, after Cyber Logic function, C, SL and SW channel signals are achieved. In this circuit, electronic analog switch is adopted to fulfill the switch in all states, and the signal flow chart is as follows:

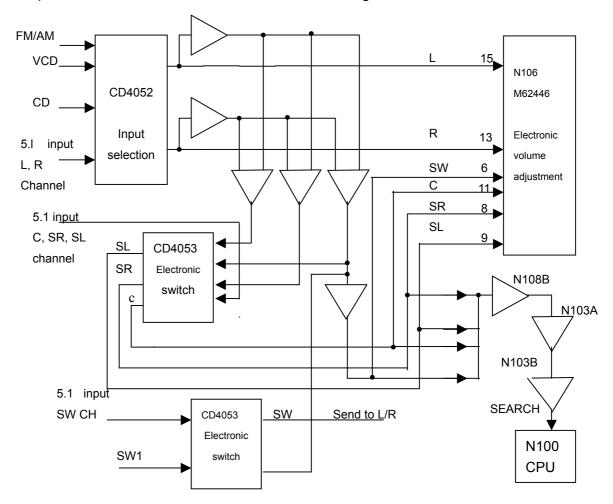

#### 2.2.1 Input selection and sound field processing mode

The input selection of AV110T is achieved via electronic switches CD4052 and CD4053, and the truth tables are as follows:

 CD4052 Truth table

 Tuner
 VCD
 DVD
 5.1

 A
 0
 0
 1
 1

 B
 0
 1
 0
 1

OD TOOUT TALL LADIC								
Α	Х		В	Υ		С	Z	
0	X0		0	Y0		0	Z0	
1	X1		1	Y1		1	Z1	

CD4053 Truth table

**5.1CH input mode:** Now A/B/5.1CH control pins of M62446 are in high level. L/R channel signals of 5.1 input terminal is outputted from pin 3/13 of N101 and sent to IC N106 for volume and tone adjustment; meanwhile, C/SR/SL signals of 5.1CH input terminal are outputted from pin 14/15/4 of N102 and then respectively sent to IC N106 for independent volume adjustment. And SW signal of 5.1CH is outputted via pin 4 of N103 and then sent to M62446 after being amplified by N107A.


Three analog input modes: AV110T totally has three analog input modes:

digital tuning demodulation signal, VCD and DVD, which are controlled via A/B signal respectively.

AV110T totally has three sound field modes: Standard, Cyber Logic and Hi-Fi.

- 1. Standard: Under the control of overall CPU, when bass enhancer is off, L/R channel and subwoofer output are available; when bass enhancer is on, only L/R channel output is available.
- 2. Hi-Fi: Under the control of overall CPU, only L/R channel output is available to M62446.
- 3. Cyber Logic: Pin 9/10 of electronic switch N101 (CD4052) select a group of analog L/R channel input signals according to the truth table. L/R signals are outputted from pin 13/3 via the internal electronic switch of N101, and divided into two ways. One way is respectively sent into pin 13/15 of M62446 for electronic volume and tone adjustment. The other way produces SW/S-SR/S-SL and S-C signals via buffer, adder-subtractor and low-pass filter. S-C/S-SR/S-SL signals are sent to pin 12/2/5 of N102. N102 select Cyber Logic signal input (see CD4053 truth table) from Cyber Logic and 5.1Ch signals, outputs C/SR/SL signals from pin 14/15/4 and sends into pin 11/8/9 of M62446 for volume adjustment. Still another way of SW signal directly sends to pin 6 of M62446 after being outputted from N107A. 5.1CH signal sent into M62446 is outputted from pin 31-36 after volume and tone adjustment, and then outputted to signal board by XS20 power distributor.

The relation between sound sources in input circuit and sound processing modes is as the following figure.

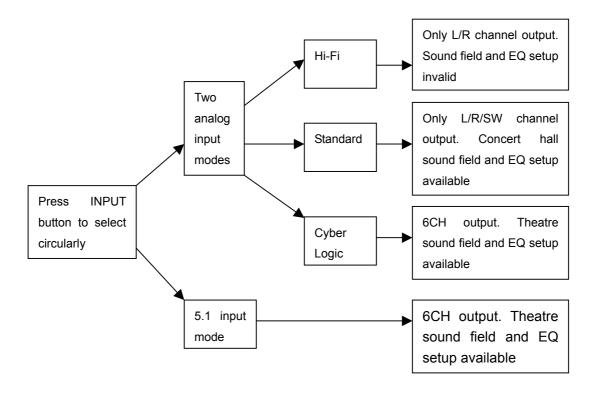

#### 2.2.2 Control circuit

Pin 23/26/27 of CPU (N100) output data, PVST and clock signals send to pin 39/40/41 of M62446, control pin 1/2/3/4 of M62446 output control level, so as to select input signal and spectrum sampling signal. It is worth noting that PVST signal is a latch control signal. When data and clock of CPU are sent to M62446, an identification signal will be added, indicating that this signal can only be used by M62446 while other IC of I<sup>2</sup>C bus cannot use current data and clock signal.

#### 2.2.3 Frequency spectrum sampling circuit

Only S-C/S-SR/S-SL/SW signals are sampled during frequency spectrum sampling in AV110T and added to pin 14 of N103 via a 150K sampling resistor. Another S-C cyber logic signal is added to pin 1 of N103, called S-C′. 5.1CH and LR-T of M62446 select sampling signals. When cyber logic is selected, the control signal of 5.1CH is of low level while pin 9/11 of N103 is of low level. According to the truth table, it is known that the outputs are X0/Z0. Sampling signal is grounded while LR-T is of H level. Select Y1, S-C′ signal is outputted from pin 15 of N103 to N108B, adding to OK-R signal for the amplification of frequency spectrum signal, and then sent to frequency point gating and auto search circuits via XS20.

#### 2.2.4 Tuning function

The tuning function directly controls tuner and receives audio frequency signal mainly via CPU and then outputs after amplification via power amplifier. The clock and data line of tuner are shared with LM62446 and the other two control lines are connected to CPU directly. L, R signal processed by the tuner can be sent to N101 IC CD4052 directly to input the selected channel.

#### **Section Three Signal processing board**

The signal processing board superposes, mixes and amplifies 5.1CH signal sent from the volume board, voice signal from the voice board and Karaoke signal.

#### 2.3.1 Karaoke circuit of AV110T

This circuit processes human voice through power amplifier and reproduces it via speaker. It includes human voice beautification circuit, wide sound field processing circuit, Karaoke echo and delay adjusting circuit.

IC and its functions for Karaoke:

S.N. of IC	Name of IC	Functions of IC			
N201	PT2308	Transmittal, pre-amplification for Karaoke signal			
N200	PT2315	Karaoke volume control, including tone control			
N205	CD4053	Electronic switch			
N209	PT2399	Karaoke echo processing			
N207	CD4051	Karaoke delay adjustment			
N208	CD4051	Karaoke echo adjustment			
N204	4558	Phase inverter			

PT2315 functional pin

S.N.	Name of pin	Description
1	REF	Reference voltage (1/2VDD)
2	VDD	Power supply
3	AGND	Analog
4	TREB L	Treble control pin of L/R channel
5	TREB R	Treble control pill of L/R charinel
6	RIN	R channel input
7	LOUD-R	Loudness control pin of R channel
9	LOUD-L	Loudness control pin of LR channel
11	LIN	L channel input
12	BIN L	Bass control input/output pin of L channel
13	BOUT L	Bass control input/output pin of E chariner
14	BIN R	Bass control input/output pin of R channel
15	BOUT R	
16	RFOUT	R channel output
17	LFOUT	L channel output
18	DGND	Digital
19	DATA	Control data of sequence transmission (DATA)
20	LCK	Clock input of sequence transmission
8, 10	NC	Not connected

#### 2.3.2 Flow chart of Karaoke signal

When the microphone is inserted, MIC signal is sent via MIC to the transmittal circuit combined by N201A for amplification. Amplified MIC signal gives CPU a MIC identification signal after N202A amplification, followed by VD201 rectification and filtering control triode V200. CPU sends PKM signal, which is of low level, causing cutoff of triode V103/V105 and enabling output of MIC signals; another way reaches pin 6 and 11 of PT2315 after C219/C222 coupling, outputs from pin 16/17 after internal volume and tone control, mixed into one way and sent to N202B and then reversely send to N203B for amplification. Signals amplified by N203B are divided into two ways: one way is directly outputted; and the other way is outputted from pin 14 after being coupled by R222/C247 to PT2399 for internal delayed echo adjustment, reversed by N204B and outputted by mixing with karaoke signal. While OK-R is outputted from pin 14 after being gated by N205 and superposed to L/R channel.

In this circuit, the bass boost network made up of triode V201 connected to the negative terminal of N202B is primarily for bass boost of 75HZ low frequency signal.

During delay adjustment for PT2399, first control signal is given to CPU, which controls N207 after being expanded via N211 IC CD4094 and connects with pin 6 of PT2399 by selecting different resistance values for purpose of delay adjustment.

Echo control is to change the resistance value at the connection point to R229, so as to change the superposition on through connect signal for echo control.

The wide sound field processing control signal of SOK's karaoke is in wide sound field mode when it is high level, and now the signal of OK-R is the OK signal inverted by N204A.

A sense signal of OK-SW on the MIC plug detection together with the network made up of V200. When MIC is not plugged, it is low level; when plugged, it is of high level.

Karaoke auto mute function is also available. When P-KT fails to detect signal for a continuous period, CPU will send a P-KM signal to mute karaoke and avoid MIC receiving noise, which may affect on sound effect.

#### Signal flow chart of scene mode

AV110T has a special function that switching between 5 scene modes is available without karaoke, which is fulfilled through part of karaoke.

When pin 9/10 of N205 are of high level, sampled L/R/C signals are outputted via pin 3 through N205 gating. After amplification by N203, one way is connected directly; and another way is sent to internal of PT2399 for echo delay adjustment (controlled by IC CD4049), with the adjusted effect superposed to L/R/C channel to form different scene modes.

In this circuit, MIC shall not be inserted and is only available in 5.1CH mode. N203A is for the purpose of reversal.

In addition, this device is added headphone output function. PHSW is low level and each channel has output when headphone is not inserted. But when headphone is inserted, PHSW will be high level for the mechanical settings thus LRM and SCM signals change into high level at the same time to realize muting in each channel, so the signal is only outputted from headphone, that is, there is not signal output with each channel when connecting with headphone output.

#### 2.3.3 Bass enhancer circuit

P-BURST is the switch signal of bass enhancer. When it is of high level and added to the base electrode of V102, V102 will be switched into conduction. When the collector electrode outputs low level, V107 will be cutoff; when the collector electrode is of low level, V100 will also be cutoff. SW signal is normally outputted to external terminal. Meanwhile, the high level signal of P-BURST is added to the emitter electrode of V108. V108 is positively biased and switched into conduction. The collector electrode adds high level to the base electrode of V101. V101 is positively biased and switched into conduction, and ground SW signal, not superposing it to L/R signal.

In reverse, when P-BURST is of high level, V100 will be switched into conduction and SWM cannot be outputted from external terminal. Meanwhile, V101 is cut off and SW signal is superposed to L/R channel signal.

The bass enhancer of AV110T can be divided into three steps. This principle is to change the volume of bass enhancer by changing the SW output volume of M62446.

#### 2.3.4 Mixing and amplification circuit of 5.1 signal and karaoke signal

When L/R channel signal of 5.1 signal is superposed with SW signal and amplified by N101B/N100B, it is sent to the reverse phase of N101A/N100A. Meanwhile, OK-R/OK-L signals are also respectively added to the reverse phases of N101A/N100A. After mixing and amplification by N100A/N101A, they are respectively outputted from pin 1 of N100A/N101A to power amplification circuit for power amplification.

Meanwhile, the C-1 signal sent by volume board is added to the reverse phase of pin 6 of N102B and added to the reverse phase of N102A after amplification. Now C1-1 signal after electronic echo processing is also added to the reverse phase of N102A and sent to power amplification circuit after mixing and amplification.

SR-1/SL-1 of another volume board is also added to the reverse phase of N103B and N104B for amplification and then sent to N103A and N104A for further amplification, and later sent to power amplification circuit.

One way of 5.1 signal after being mixed and amplified is sent to power amplification circuit passing through XS9, and the other way forms DIST (distortion error detecting signal) signal passing through R111-R113/R142/R145/VD100-VD104, which will be added to CPU for automatic gain adjustment, so as to control volume output.

#### **Section Four CPU board**

#### 2.4.1 CPU control unit

N100, the overall CPU, is the overall control center, inputting all kinds of control instructions to controlled circuits to achieve all kinds of control functions. It adopts +5V supply with pin 40 as its supply pin. Pin 18 and pin 19 connect externally with 12M crystal oscillator to provide working clock frequency for itself. Pin 9 is its reset pin. When starting, +5V charges C106 via R100. The voltage of two ends of capacitance cannot be mutated, thus B-pole of triode V100 is low level, that is, V100 conduction gives a high-level reset signal to CPU. When capacitance C106 finishes charge, V100 stops and then reset finishes. The form of this reset circuit is to reset high level and keep low level. When the machine is working, the static information of Power-on logo on screen and Chinese characters are stored in CPU internal static memory. N101, a status memory, can record the current working status of machine when powering off and show the status when next time power on, avoiding users to re-adjust. The sound field mode set by users is also stored in it and can be called when necessary.

#### 2.4.2 Detect input signal and automatically search circuit


DISPLAY signal from volume board is sent to N103A to amplify and limit level, and then sent to inverse end of voltage comparator N103B after capacitance coupling. It inputs from pin 7 of N103B and then is sent to pin 16 of CPU via VD103, V101, R109 and R107. When N103B inputs a high level, VD103 is in

reverse cut-off status, B-pole of switch tube V101 is high level and is in conducting status, then gets an about +5V high level (signal input) to CPU after VD101's stabilization and stop searching. When the output end of N103B outputs a low level, VD103 is in conducting status, B-pole of switching tube V101 is low level and is in cut-off status, and then CPU detects the low level (no signal input). Its working principles are as follows:

- ① After starting up, under CPU internal program's control, a data signal is outputted via pin 23 to M62446, and then M62446 scans each input port of N101, N102 and N103 by emitting high and low levels. When the input ports have no signal input, it automatically becomes standby status. When any of ports has signal input, channel paths of input N101, N102 and N103 has A/C signal which is amplified and limited level by N108B and N103A of CPU board, then compares with pin 5 of N103B and gets plus-minus level close to supply power. The co-phase voltage of N103B is about 0.1V. After the direct current voltage is over 0.1V, the output end of N103B outputs low level is close to negative-power voltage, VD103 positive-bias conducts, switch tube V101 (S9014) stops, emitter outputs a low level to pin 16 of CPU which by controlling IC M62446 makes search level lock on the port through which signal inputs, to enter normal play.
- ② When pressing "SEARCH" button on the remote controller, it is converted from optical signal to electric signal by the remote control receiver of panel. Pin 14 of CPU emits a high level to conduct V102 and search according to the same previous process.

## 2.4.3 Spectrum Analysis Circuit (see the following figure)

Spectrum analysis circuit is divided into three parts:

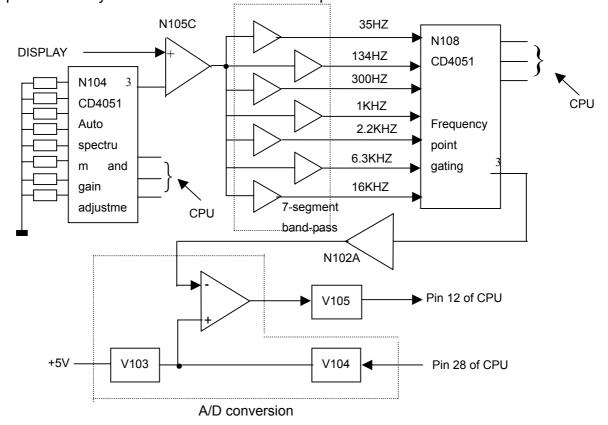


**Automatic spectrum gain adjustment circuit:** To avoid two situations that spectrum display amplitude is too low when input signal is too weak or spectrum display is in full screen when input signal is too strong, AV110T sets automatic spectrum gain adjustment circuit, using a single-track one-from-eight electronic analog switch, its true value diagram is as follows:


CD4051Truth table

	X0	X1	X2	Х3	X4	X5	X6	X7
Α	0	1	0	1	0	1	0	1
В	0	0	1	1	0	0	1	1
С	0	0	0	0	1	1	1	1

Its main working principle is to change the value of inverse ground resistance of transmittal N104 to change the transmittal gain multiple. Let's see the detailed work of the whole circuit. We've referred that spectrum analysis signal source (DISPLAY) is sent to the co-phase input end of transmittal N105C to amplify. Its amplification factor is determined by the value of the resistance connecting with the electronic switch of its inverse end N104. When the main volume is large, CPU will automatically increase the value of ground resistance and decrease the amplification factor; when the main volume is small, CPU will automatically decrease the value of ground resistance and increase the amplification factor.

Amplitude sampling circuit: signal amplified by N105C is sent via C115 coupling to seven band-pass filters composed of transmittals. By setting its capacity of feedback capacitance, its frequency-band range can be determined. The frequency value of superscript of the output points is the central frequency-point of the frequency band. The output end of each band-pass filter is connected with a half-wave rectifier circuit. The amplified A/C signal is rectified to direct current. The circuit is mainly to achieve frequency-point sample. It can display the amplitude of all frequency-points of the whole sound signal via direct-current voltage. If the low frequency of sound signal is stronger, the current voltage of output end of 35HZ and 100HZ band-pass filter is higher. When high frequency is stronger, the current voltage of 10K and 16K band-pass filter is higher. The output ends of the seven band-pass filter are connected with the seven input ends of electronic switch N108 (CD4051). These electronic switches will quickly circularly-switch among frequency points (referring to previous true value diagram). Pin 3 output end of N108 will output a string voltage value representing frequency point signal amplitude (see next diagram).

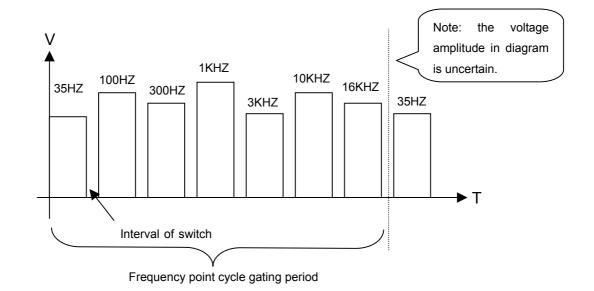

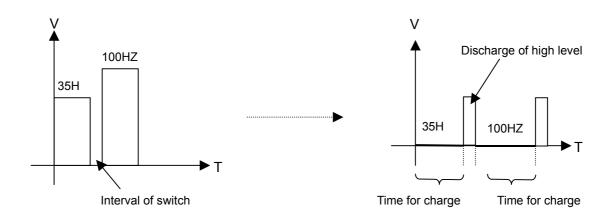

#### A/D conversion and output circuit display (two situations):

- 1. When no signal input, pin 28 of CPU sends a high level to B-pole of V104. The positive end of N102B is low voltage, the inverse end of N102B gets partial voltage of R189 and R172, making N102B output a low level, that is, triode V105 stops and C-pole of V105 will give a high level to pin 12 of CPU to let CPU not conduct AD conversion (pin 6/7/8 of CPU are inactive and keep high level).
- 2. When the machine has detected the signal (the inverse end of N102B has a current voltage representing 35HZ signal amplitude), pin 28 of CPU is converted into low level and +5V voltage charges for C137 via V103. When reaching the voltage value of inverse end, the comparator converts and N102B outputs high level. Once CPU receives low-level signal, it stops 35HZ level gating and converts into next frequency point 100HZ. During conversion, pin 28 of CPU outputs an instant high level to conduct V104, leak the voltage capacity of C137 and make the co-phase end of N102B restart to charge 100HZ from 0-level. When the charge of 100HZ finishes, the charge and discharge of next frequency point begin, and such process occurs circularly under the control of CPU. The charge time form 0-level to the occurrence of

output conversion represents the signal amplitude of current frequency point—the larger the amplitude, the longer the time and the amplitude displaying in screen is higher; the smaller the amplitude, the shorter the time and the amplitude displaying in screen is lower. Digital pulse outputted from N102B output end is added by V105's inverse to pin 12 of CPU which handle it and output to panel to display dynamic frequency in screen. The display of original frequency points is sequential. However, the above circular process is extremely quick, thus, what we see in screen is the progress of the whole spectrum displaying synchronously.


#### Section Five Panel control and display circuit

The panel control and display circuit of AV110 adopts the special IC 101 (PT6311), whose external buttons of pin 10/11/12/13 scan buttons matrix. After receiving the control command of users to the machine, processing is done inside and then outputted by two ways: one way is sent to display screen to display the working status; and the other way is transmitted to CPU through pin 5/6/8/9 to ask for performing and finishing the corresponding control function. N102 is remote control receiver, which transforms the received infrared remote control signal into electronic signal and then send it to pin 13 of CPU so as to complete remote control function.

### Section Six Power amplifier board

#### 2.5.1 Power supply

This part is used to provide all kinds of required working voltage for all unit circuit. The circuit diagram of power supply is shown as follows:

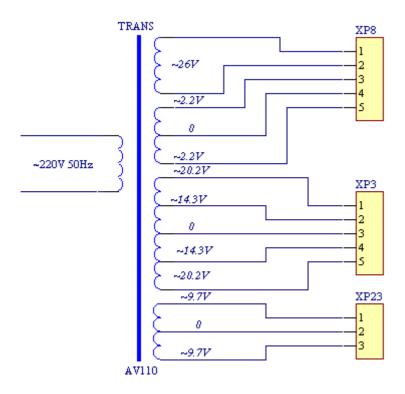

Through the flat cable XP8, the first group output of transformer provides filament voltage for display screen, and provides working power supply for display drive ICPT6311.

The second group output of transformer is outputted by flat cable XP3 to the power supply part of power amplifier board. After being rectified by rectification diode 5404, two groups of anode and cathode power supply are achieved, which respectively provide two groups of anode and cathode working power supply for the main channel power amplification circuit of power amplifier board and center/surround channel power amplification circuit.

The third group output of transformer is outputted by the flat cable XP23 to the signal processing board. After being rectified by rectification diode, voltage regulated by the voltage regulator 7805 and +5V power supply is outputted.

#### 2.5.2 Power amplification

Main channel and center surround audio signals are processed by signal processing board, and then inputted by flat cable XP200 to power amplification circuit to perform amplification respectively. L and R channels are respectively amplified by the special audio usage integrated power IC N200 and N201 TDA7296. LS and RS channels are amplified by a dual-transmittal integrated power IC N202 TDA7265. Center channel is amplified by the integrated power IC N203 TDA7298.

The used IC TDA7296 has the following features (attached with materials of TDA7296):

- 1. High voltage range:  $\pm 35V$ ;
- 2. Power: 60W (4 ohm);
- 3. With mute and standby function;

- 4. Complete protection circuit: over-current and over-heat protection;
- 5. Packaging: dual line pin 15.


The used IC TDA7265 has the following features (attached with materials of TDA726):

- 1. Complete protection circuit: grounding short-circuit and over-heat protection;
- 2. Power supply voltage range:  $\pm 5 \sim \pm 25$ V;
- 3. Packaging: dual line pin 11;
- 4. Power: 2\*25W (4 ohm);
- 5. With mute function.

The used IC TDA7298 has the following features (attached with materials of TDA7298):

- 1. Complete protection circuit: short-circuit and over-0heat protection;
- 2. Power supply voltage range: ±22V;
- 3. Packaging: dual line pin 7;
- 4. Power: 28W (4 ohm);
- 5. With mute/standby function.


#### 2.5.3 Anti impulsive sound circuit when power-on

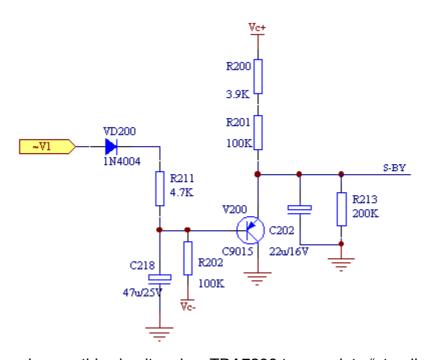

When powering on, this circuit makes TDA7296 to complete "standby --- mute --- work" process and has effectively removed the impulsive sound when power-on. When powering off, this circuit makes TDA7296 to complete "work --- mute --- standby" process and has effectively removed the impulsive sound when power-off.

#### **Section Seven Video board**


Video board fulfills the functions of input, output and switch of the video, with the schematic diagram shown as the following figure:

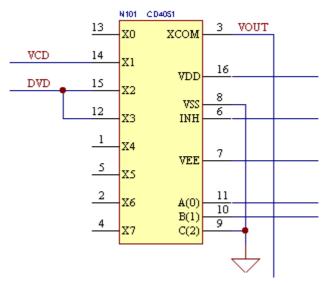


This switch function is realized through an electronic switch IC CD4051. When high and low level of control signal A and B are changing, IC CD4051 switches between VCD and DVD, and video signal is outputted by pin 3 VOUT.

## **Chapter Three Servicing Process**


### 1. No output for Karaoke

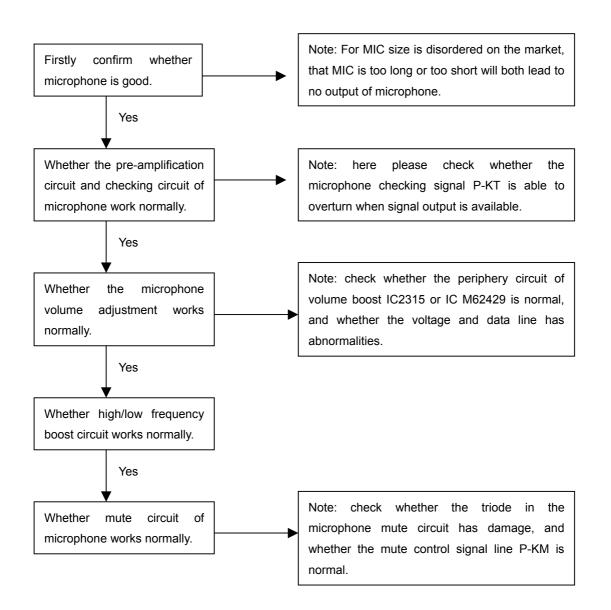


### 2. Power supply not connected

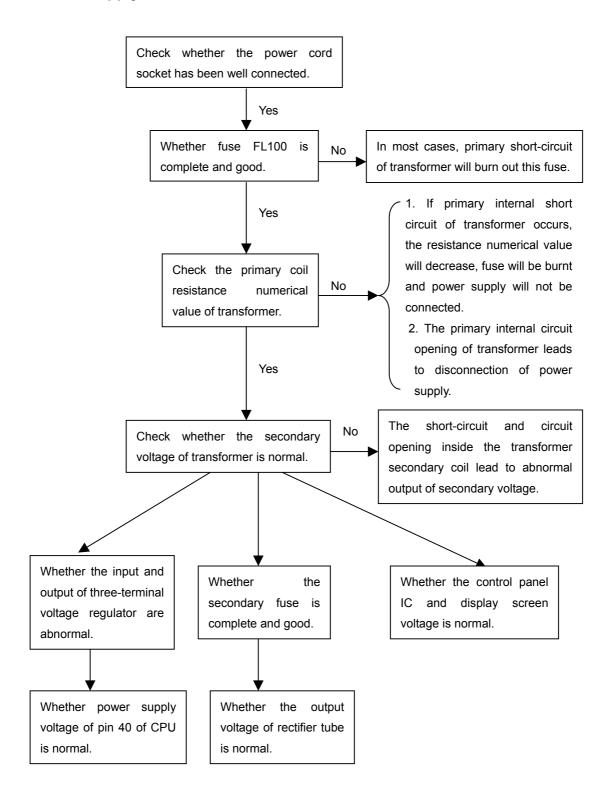

### 3. No on screen display (OSD)

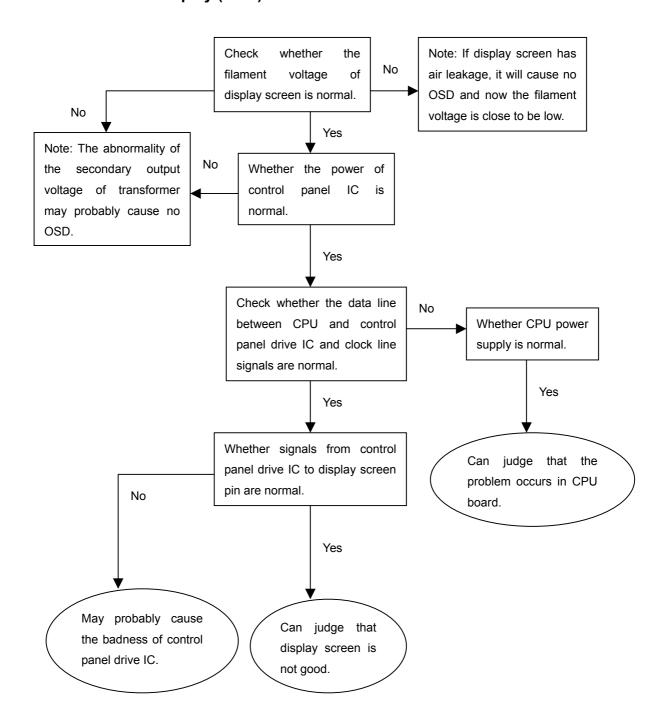



### 4. No output

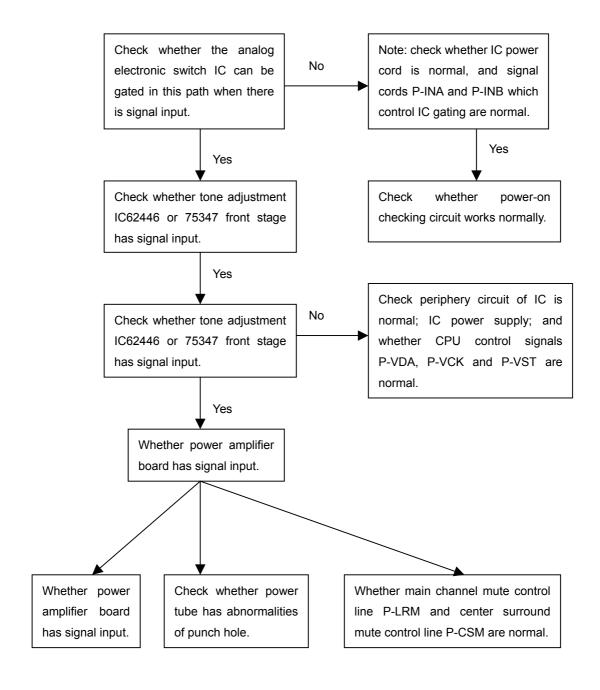


# Schematic & pcb wiring diagram


# Input board

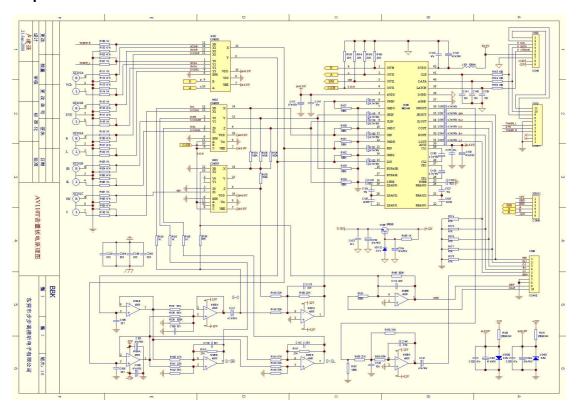

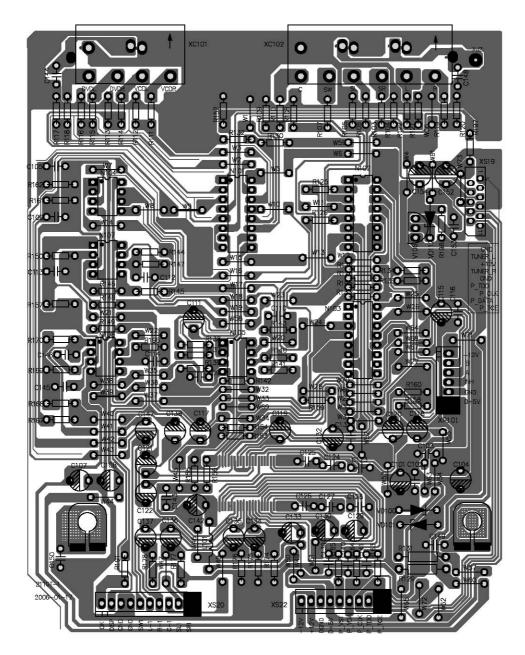



Signal processing board

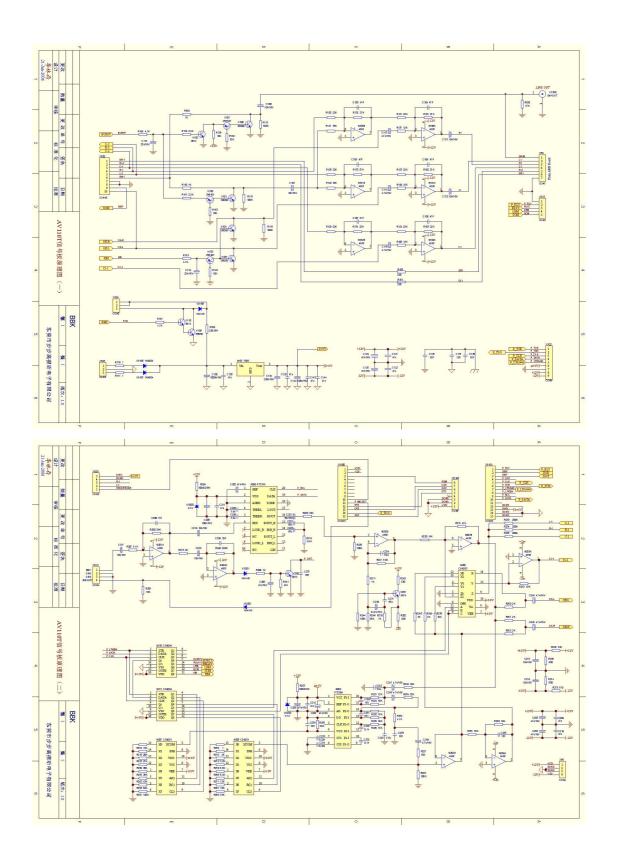


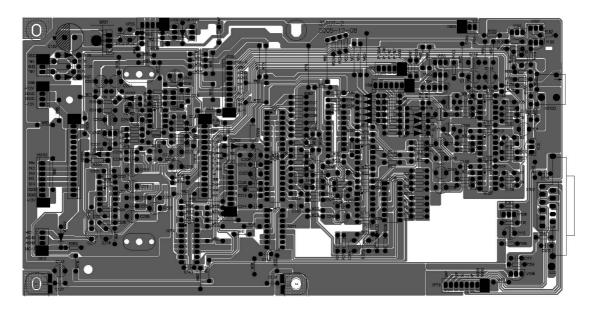


# Power amplifier board

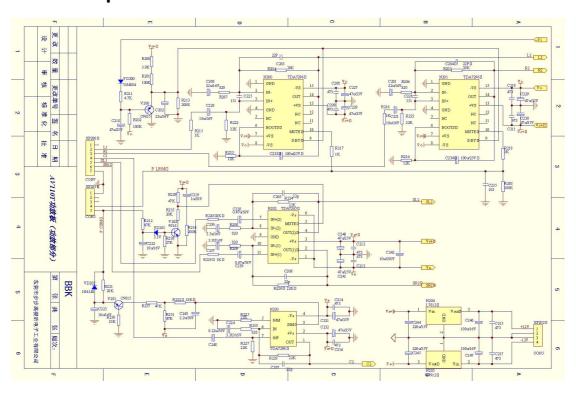


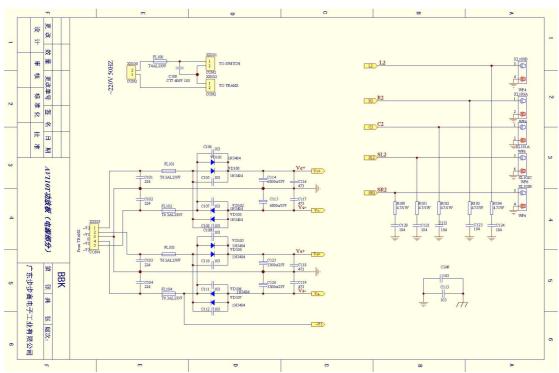

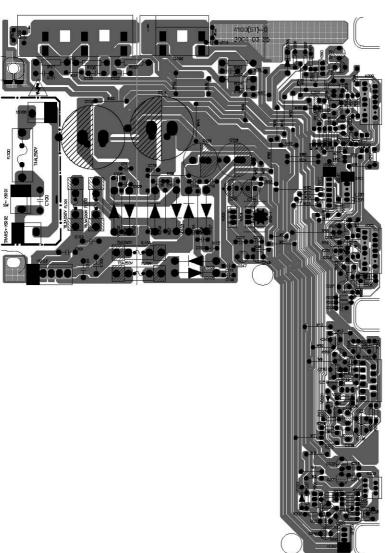


# Panel control board

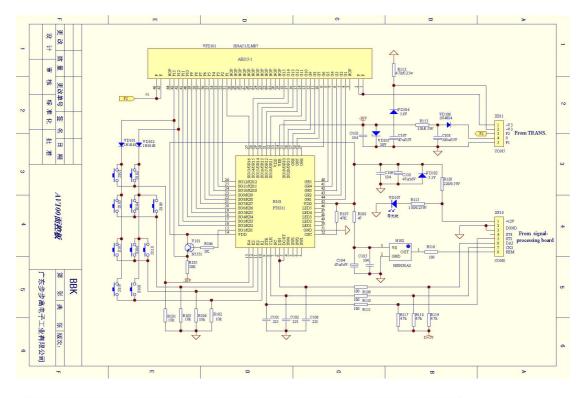


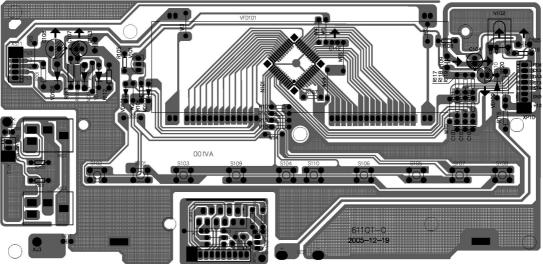


**CPU** control board

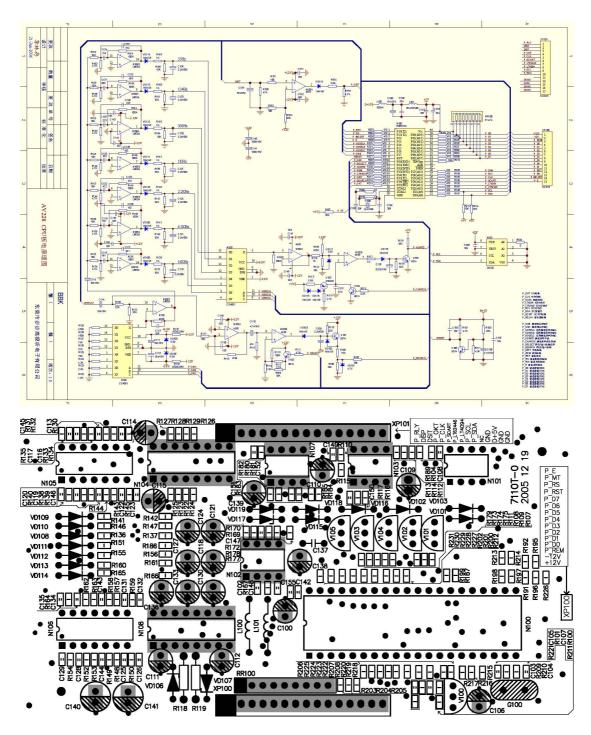



Microphone board

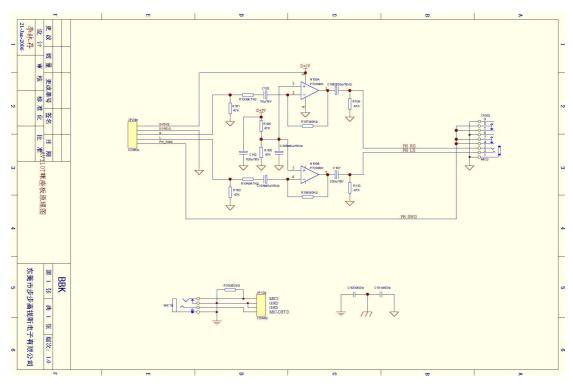

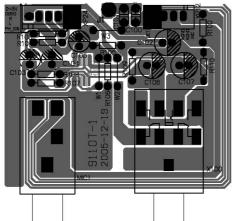

Video board

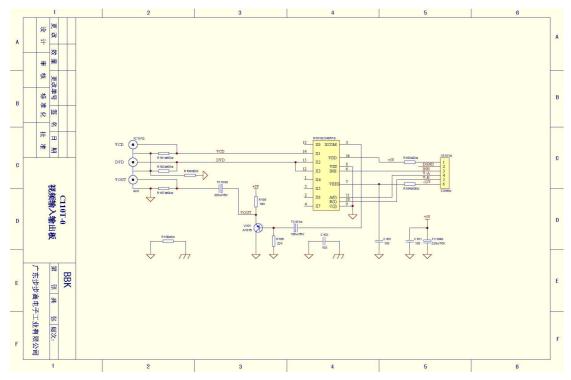

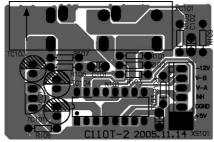

Spare parts list

# Signal processing board

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
0880230	IC	PT2399 DIP	PCS	1	N209
0880417	IC	CD4053BCN DIP	PCS	1	N205
0881430	IC	CD4053BE DIP	PCS	1	N205
0880379	IC	LM7805 GOLD SEALED TO-220	PCS	1	N107
0880247	IC	MC7805CT GOLD SEALED TO-220	PCS	1	N107
0880499	IC	L7805CV GOLD SEALED TO-220	PCS	1	N107
0881743	IC	F4558 DIP	PCS	4	N201~N204
0882161	IC	AZ4558 DIP	PCS	4	N201~N204
0880445	IC	4558C DIP	PCS	4	N201~N204
0880124	IC	NJM4558D DIP	PCS	4	N201~N204
0881393	IC	IL4558N DIP	PCS	4	N201~N204
0882223	IC	NE5532 DIP	PCS	3	N100~N102
0880807	IC	PT2315 SOP	PCS	1	N200
0880271	IC	CD4051 DIP	PCS	2	N207,N208
0881428	IC	CD4051BE DIP	PCS	2	N207,N208
0880444	IC	CD4094BCN DIP	PCS	2	N210,N211
0880654	IC	TC4094BP DIP	PCS	2	N210,N211
0882338	IC	CD4094BE(TI) DIP	PCS	2	N210,N211
0260030	CD	CD11 16V1000U±20%10×16 5	PCS	1	C130
1940002	SOCKET	3P 2.5mm	PCS	1	XS23
1940003	SOCKET	4P 2.5mm	PCS	2	XS6,XS12
1940004	SOCKET	5P 2.5mm	PCS	1	XS13
1940007	SOCKET	7P 2.5mm	PCS	1	XS9
1940009	SOCKET	8P 2.5mm	PCS	1	XS103
1910034	TERMINAL SOCKET	AV1-8.4-5G BLACK	PC <b>S</b>	1	XC100
1970064	NEEDLE HEADER	15P 40mm2.54mm SPACING INTERVAL OUTSIDE GLUE CORE 28.4mm	PCS	2	BETWEEN XS100 AND XP100, BETWEEN XS101 AND XP101
2120296	FLAT CABLE	5P140 2.5 2PLUG WITH NEEDLE	PCS	1	X\$25
2121187	FLAT CABLE	10P75 2.5 2PLUG WITH NEEDLE IN-PHASE	PCS	1	XP20
2121561	FLAT CABLE	9P75 2.5 2PLUG WITH NEEDLE IN-PHASE	PCS	1	XP22
3580092	HEAT RADIATION BOARD	14×8×16 AV130	PCS	1	STICK AND INSTALL TO 7805 (N107)
3870591	GROUND CHIP	AV100	PCS	2	
3026724	PLASTIC BRACKET	H=28.4mm AV230	PC <b>S</b>	2	SIGNAL PROCESSING BOARD/CPU BOARD
4000197	SELF-TAPPING SCREW	BT3×8 NICKEL	PCS	4	2PCS FOR PLASTIC BRACKET/SIGNAL PROCESSING BOARD; 2PCS FOR PLASTIC BRACKET/CPU BOARD
4000462	SELF-TAPPING SCREW	BT 3×6H WHITE NICKEL	PCS	1	HEAT RADIATION BOARD/IC
5447612	SEMI-FINISHED PCB	7228-1 AV110T(RU)	PCS	1	
5447605	SEMI-FINISHED PCB	3110T-1 AV110T(RU) AI	PCS	1	

	2100003	CONNECTION CORDS	Φ 0.6 SHAPED 7.5mm	PCS	59	W1,W3~W11,W13~W33,W36~W42,W44~W48,W50,W52~W 59,W78,W84,W85,W92,W93,R104,R105
	2100004	CONNECTION CORDS	Φ 0.6 SHAPED 10mm	PCS	13	W60~W70,W86,W90
	2100007	CONNECTION CORDS	Φ 0.6 SHAPED 15mm	PCS	8	W71~W77,W91
	2100017	CONNECTION CORDS	Φ 0.6 SHAPED 20mm	PCS	4	W79~W81,W83
	02600019	CD	CD11 16V22U±20%5×11 C5	PCS	2	C119,C115
	02600029	CD	CD11 16V47U±20%5×11 C5	PCS	8	C124,C125,C202~C207
•	02601819	CD	CD11 16V220U±20%6×12 C5	PCS	1	C134
	02601889	CD	CD11 16V100U±20%6×12 C5	PCS	2	C142,C208
-	02603909	CD	CD11 50V0.47U±20%5×11C5	PCS	1	C240
	02604379	CD	CD11 16V10U±20%5×11C5	PCS	10	C131,C100,C101,C132,C215~C217,C219,C221,C252
	02604389	CD	CD11 16V4.7U±20%5×11C5	PCS	8	C113,C114,C118,C245~C249
-	00000029	CARBON FILM RESISTOR	1/6W1 Ω ±5%	PCS	1	R259
•	00000119	CARBON FILM RESISTOR	1/6W220 Ω ±5%	PCS	2	R158,R161
	00000139	CARBON FILM RESISTOR	1/6W330 Ω ±5%	PCS	1	R242
-	00000179	CARBON FILM RESISTOR	1/6W510 Ω ±5%	PCS	2	R236,R273
-	00000199	CARBON FILM RESISTOR	1/6W680 Ω ±5%	PCS	2	R239,R274
	00000229	CARBON FILM RESISTOR	1/6W1K±5%	PCS	5	R110,R109,R209~R211
	00000269	CARBON FILM RESISTOR	1/6W2K±5%	PCS	7	R248~R252,R213,R215
•	00000279	CARBON FILM RESISTOR	1/6W2.2K±5%	PCS	2	R151,R152
Ī	00000309	CARBON FILM RESISTOR	1/6W3.3K±5%	PCS	1	R272
-	00000329	CARBON FILM RESISTOR	1/6W3.9K±5%	PCS	1	R247
	00000349	CARBON FILM RESISTOR	1/6W4.7K±5%	PCS	3	R153,R169,R264
	00000359	CARBON FILM RESISTOR	1/6W 5.1K±5%	PCS	1	R207

R207	1	PCS	1/6W 5.1K±5%	CARBON FILM RESISTOR	00000359
R216	1	PCS	1/6W5.6K±5%	CARBON FILM RESISTOR	00000369
R270	1	PCS	1/6W6.8K±5%	CARBON FILM RESISTOR	00000379
R266	1	PCS	1/6W8.2K±5%	CARBON FILM RESISTOR	00000389
R139,R220,R222,R238,R253,R267,R268,R143,R162,R163 R224,R225,R227	13	PCS	1/6W10K±5%	CARBON FILM RESISTOR	00000409
R271,R221,R137,R140,R108	5	PCS	1/6W12K±5%	CARBON FILM RESISTOR	00000419
R232,R254,R226,R230	4	PCS	1/6W15K±5%	CARBON FILM RESISTOR	00000439
R261	1	PCS	1/6W18K±5%	CARBON FILM RESISTOR	00000449
R202,R218	2	PCS	1/6W20K±5%	CARBON FILM RESISTOR	00000459
R121,R123,R120,R128,R284,R134,R103,R124,R129	9	PCS	1/6W22K±5%	CARBON FILM RESISTOR	00000469
R223,R132,R133,R101,R102	5	PCS	1/6W27K±5%	CARBON FILM RESISTOR	00000489
R260	1	PCS	1/6W30K±5%	CARBON FILM RESISTOR	00000499
R269	1	PCS	1/6W33K±5%	CARBON FILM RESISTOR	00000509
R127,R122,R246,R200	4	PCS	1/6W39K±5%	CARBON FILM RESISTOR	00000519
R100,R241,R231	3	PCS	1/6W47K±5%	CARBON FILM RESISTOR	00000529
R258	1	PCS	1/6W56K±5%	CARBON FILM RESISTOR	00000549
R256	1	PCS	1/6W62K±5%	CARBON FILM RESISTOR	00000559
R115,R116,R228,R229,R118,R142,R145	7	PCS	1/6W100K±5%	CARBON FILM RESISTOR	00000599
R257	1	PCS	1/6W120K±5%	CARBON FILM RESISTOR	00000609
R244	1	PCS	1/6W150K±5%	CARBON FILM RESISTOR	00000629
R233,R234,R235	3	PCS	1/6W200K±5%	CARBON FILM RESISTOR	00000659
R240	1	PCS	1/6W220K±5%	CARBON FILM RESISTOR	00000669
R204 QR-4, 4-2	1	PCS	1/4W100 Ω ±5%	CARBON FILM RESISTOR	00001759

00003459	CARBON FILM RESISTOR	1/6W36K±5%	PCS	1	R255
00003519	CARBON FILM RESISTOR	1/6W43K±5%	PCS	1	R262
00006239	CARBON FILM RESISTOR	1/2W220 Ω ±5%	PCS	1	R263
00102289	METAL OXIDE FILM RESISTOR	1/4W1 Ω ±5%	PCS	2	R170,R171
02003069	PORCELAIN CAPACITOR	50V 47P±10% SHAPED 5mm	PCS	6	C103~C108
02003079	PORCELAIN CAPACITOR	50V 101±10% SHAPED 5mm	PCS	1	C235
02003109	PORCELAIN CAPACITOR	50V 103±10% SHAPED 5mm	PCS	6	C237~C239,C135,C138,C137
02003159	PORCELAIN CAPACITOR	50V 10P±10% SHAPED 5mm	PCS	1	C236
02003299	PORCELAIN CAPACITOR	50V561±10% SHAPED 5mm	PCS	2	C250,C251
02003309	PORCELAIN CAPACITOR	50V151±10% SHAPED 5mm	PCS	1	C200
02101049	METAL POLYESTER FILM CAPA	CL21X100V224 K C5BD	PCS	2	C213,C214
02101459	METAL POLYESTER FILM CAPA	CL21X 100V 104K C5	PCS	2	C232,C233
02100689	TERYLENE CAPACITOR	100V 683 ±10% SHAPED 5mm	PCS	3	C227,C228,C231
02102189	TERYLENE CAPACITOR	100V 683 ±5% SHAPED 5mm	PCS	3	C227,C228,C231
02101439	TERYLENE CAPACITOR	100V392±10% C5	PCS	1	C234
02101489	TERYLENE CAPACITOR	100V 473 ±10% SHAPED 5mm	PCS	10	C121,C122,C128,C129,C143,C144,C209~C212
02102209	TERYLENE CAPACITOR	100V 473 ±5% SHAPED 5mm	PCS	10	C121,C122,C128,C129,C143,C144,C209~C212
02101579	TERMINAL SOCKET	100V 562±10% SHAPED 5mm	PCS	4	C225,C226,C242,C243
02102219	TERYLENE CAPACITOR	100V 562±5% SHAPED 5mm	PCS	4	C225,C226,C242,C243
05700049	DIODE	1N4004	PCS	2	VD106,VD107
0570006	DIODE	1N4148	PCS	2	VD201,VD203
05800069	VOLTAGE REGULATOR DIODE	5.1V 1/2W	PCS	1	VD202
05800099	VOLTAGE REGULATOR DIODE	9.1V 1/2W	PCS	1	VD200 QR-4.4-20

07800259	TRIODE	2N5401	PCS	3	V103,V107,V108
07800329	TRIODE	9014C	PCS	3	V102,V200,V201
07801389	TRIODE	8050D	PCS	4	V105,V101,V104,V100
1564054	РСВ	3110T-1	PCS	1	

# Power amplifier board

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
2100008	CONNECTION CORDS	Φ 0.6 SHAPED 6mm	PCS	2	W63,W64
0260046	CD	CD11 25V3300U±20%16×25 7.5	PCS	2	C125,C126
0260702	CD	CD296 35V 6800U ±20% 22×40 10	PCS	2	C114,C115
0260437	CD	CD11 16V10U±20%5×11C5	PCS	1	C221
0260538	CD	CD11 35V47U±20%6×12 C5	PCS	1	C229
0882646	IC	CW7812CS TO-220	PCS	1	N204
0880131	IC	L7812CV GOLD SEALED TO-220	PCS	1	N204
0880380	IC	LM7812 GOLD SEALED TO-220	PCS	1	N204
0881418	IC	UA7812C GOLD SEALED TO-220	PCS	1	N204
0880381	IC	LM7912CT GOLD SEALED TO-220	PCS	1	N205
0880462	IC	TDA7296 GOLD SEALED MUT11	PCS	2	N200,N201
0881102	IC	TDA7265 Multiwatt11	PCS	1	N202
0881995	IC	TDA7298 TO-220	PCS	1	N203
0000499	CARBON FILM RESISTOR	1W4.7 Ω ±5% SHAPED R 15×9	PCS	5	R100,R101,R102,R103,R104
0200066	PORCELAIN CAPACITOR	50V 221 ±10% 2.5mm	PCS	1	C226
0200338	PORCELAIN CAPACITOR	CT7 400VAC 472 ±20% 2E4 10mm	PCS	1	C100
0210029	TERYLENE CAPACITOR	100V 104 ±5% 7mm	PCS	5	C120,C121,C122,C123,C124
0210031	TERYLENE CAPACITOR	100V 224 ±10% 8mm	PCS	4	C101,C102,C103,C104
0210213	TERYLENE CAPACITOR	100V 224 ±5% 8mm	PCS	4	C101,C102,C103,C104
0570020	DIODE	1N5404	PCS	8	VD100,VD101,VD102,VD103,VD104,VD105,VD106,VD107
05800019	VOLTAGE REGULATOR DIODE	3.3V 1/2W	PCS	1	VD201
1940038	SOCKET	5P 3.96mm	PCS	1	XS103
1940074	SOCKET	2P 7.92mm	PCS	3	XS100,XS101,XS102
2010003	CONNECTION POLE SOCKET	WP4-10A	PCS	1	XL100
2010004	CONNECTION POLE SOCKET	WP6-10A	PCS	1	XL102
2120296	FLAT CABLE	5P140 2.5 2PLUG WITH NEEDLE	PCS	1	XP201 OR-4, 4-20

2120812	FLAT CABLE	7P160 2.5 2 PLUG WITH NEEDLE	PCS	1	XP200
2120177	FLAT CABLE	4P150 2.5 2 PLUG WITH NEEDLE	PCS	1	XP202
2300005	FUSE TUBE	T6.3AL 250V	PCS	2	FL101,FL103
2300013	FUSE TUBE	T5AL 250V	PCS	2	FL102,FL104
2300006	FUSE TUBE	T4AL 250V	PCS	1	FL100
3020402	FUSE HOLDER	BLX-2	PCS	1	FL100
3540076	SCREEN-SHIELDED CHIP	AV100 OUTPUT TERMINAL	PCS	1	
3870591	GROUND CHIP	AV100	PCS	1	
4450012	SCREW SPACER	Ф 3×7.2×0.5	PCS	4	4PC\$ FOR SELF-TAPPING SCREW/POWER IC
4490001	SPRING SPACER	Ф3	PCS	4	4PC\$ FOR SELF-TAPPING SCREW/POWER IC
5230928	MICA SPACER	18×13×0.1	PCS	1	TDA7298/LARGE HEAT RADIATOR
5231418	MICA SPACER	22×22×0.1	PCS	3	3PC\$ FOR POWER IC/LARGE HEAT RADIATOR
3580034	HEAT RADIATION BOARD	15.4×10.7×40 AB203K	PCS	1	SRQ-1
3580111	LARGE HEAT RADIATOR	261×60×50 TREE BRANCH SHAPED AV100 2#	PCS	1	
3870775	PCB BRACKET	AV100 2#	PCS	3	
3870057	FUSE HOLDER	0	PCS	8	FL101~FL104
4000516	SELF-TAPPING SCREW	PT 3×12H WHITE NICKEL	PCS	4	4PC\$ FOR POWER IC/LARGE HEAT RADIATOR
4000453	SELF-TAPPING SCREW	BT 3×8H WHITE NICKEL	PCS	1	1PE FOR VOLTAGE REGULATOR DIODE/HEAT RADIATION BOARD
4000462	SELF-TAPPING SCREW	BT 3×6H WHITE NICKEL	PCS	9	6PCS FOR PCB BRACKET/LARGE HEAT RADIATOR; 3PCS FOR PCB BRACKET/PCB
5230395	INSULATION PAD CASING	Ф 3×6×3	PCS	1	TDA7298/SELF-TAPPING SCREW
5232281	INSULATION PAD CASING	Ф 3×6×3.2	PCS	3	3PCS FOR POWER IC/SELF-TAPPING SCREW
5231816	SOFT SPONGE SPACER	60×12×1.5 SINGLE-SIDED SOFT	PCS	1	FLAT CABLE (XP9, XP13)/HEAT RADIATOR
5447684	SEMI-FINISHED PCB	4100-0ST AV110T(RU) AI	PCS	1	

2100003	CONNECTION CORDS	Ф 0.6 SHAPED 7.5mm	PCS	22	W28,W29,W30,W31,W32,W35,W36,W37,W38,W39,W47, W49,W51,W52,W53,W62,W1,W3,W6,W8,W40,W61
2100004	CONNECTION CORDS	Φ 0.6 SHAPED 10mm	PCS	13	W4,W5,W10,W13,W14,W15,W41,W42,W21,W22,W26,W2 7,W45
2100006	CONNECTION CORDS	Φ 0.6 SHAPED 12.5mm	PCS	6	W23,W46,W2,W7,W9,W12
2100007	CONNECTION CORDS	Φ0.6 SHAPED 15mm	PCS	7	W24,W34,W43,W50,W60,W11,W54
2100010	CONNECTION CORDS	Φ0.6 SHAPED 5mm	PCS	4	W19,W16,W17,W69
2100016	CONNECTION CORDS	Φ0.6 SHAPED 18mm	PCS	3	W33,W44,W48
2100017	CONNECTION CORDS	Φ0.6 SHAPED 20mm	PCS	7	W18,W20,W55,W56,W57,W58,W59
00000219	CARBON FILM RESISTOR	1/6W820 Ω ±5%	PCS	5	R206~R210
00000229	CARBON FILM RESISTOR	1/6W1K±5%	PCS	6	R215,R216,R217,R218,R219,R220
00000329	CARBON FILM RESISTOR	1/6W3.9K±5%	PCS	1	R200
00000349	CARBON FILM RESISTOR	1/6W4.7K±5%	PCS	1	R211
00000409	CARBON FILM RESISTOR	1/6W10K±5%	PCS	2	R230,R232
00000419	CARBON FILM RESISTOR	1/6W12K±5%	PCS	2	R233,R234
00000459	CARBON FILM RESISTOR	1/6W20K±5%	PCS	4	R204,R205,R235,R221
00000469	CARBON FILM RESISTOR	1/6W22K±5%	PCS	7	R222,R223,R224,R225,R226,R227,R228
00000489	CARBON FILM RESISTOR	1/6W27K±5%	PCS	1	R236
00000509	CARBON FILM RESISTOR	1/6W33K±5%	PCS	1	R213
00000529	CARBON FILM RESISTOR	1/6W47K±5%	PCS	4	R237,R231,R229,R212
00000659	CARBON FILM RESISTOR	1/6W200K±5%	PCS	1	R214
00000599	CARBON FILM RESISTOR	1/6W100K±5%	PCS	3	R201,R202,R203
02003109	PORCELAIN CAPACITOR	50V 103±10% SHAPED 5mm	PCS	3	C249,C113,C235
02003059	PORCELAIN CAPACITOR	50V 22P±10% SHAPED 5mm	PCS	5	C203,C204,C205~C207

02003089	PORCELAIN CAPACITOR	50V 221±10% SHAPED 5mm	PCS	1	C225
02101599	TERYLENE CAPACITOR	100V 103 ±10% SHAPED 5mm	PCS	10	C105,C106,C107,C108,C109,C110,C111,C112,C215,C217
02102239	TERYLENE CAPACITOR	100V 103 ±5% SHAPED 5mm	只	10	C105,C106,C107,C108,C109,C110,C111,C112,C215,C217
02600019	CD	CD11 16V22U±20%5×11 C5	PCS	3	C200,C201,C202
02605399	CD	CD110 100V10U±20%6×13 C5	PCS	1	C242
02600059	CD	CD11 50V1U±20%5×11 C5	PCS	1	C219
02601179	CD	CD11 50V2.2U±20%5×11 C5	PCS	1	C243
02601889	CD	CD11 16V100U±20%6×12 C5	PCS	2	C246,C247
02603909	CD	CD11 50V0.47U±20%5×11C5	PCS	3	C238,C239,C248
02604379	CD	CD11 16V10U±20%5×11C5	PCS	3	C220,C222,C223
02605419	CD	CD11 16V3.3U±20%5×11 C5	PCS	3	C236,C237,C224
02601829	CD	CD11 25V100U±20%6×12 C5	PCS	2	C234,C233
02605389	CD	CD11 35V47U±20%6×12 C5	PCS	3	C227,C228,C230
02601849	CD	CD11 25V47U±20%5×11 C5	PCS	5	C218,C240,C241,C231,C232
05700049	DIODE	1N4004	PCS	1	VD200
0570006	DIODE	1N4148	PCS	1	VD202
07800329	TRIODE	9014C	PCS	1	V202
07800339	TRIODE	9015C	PCS	2	V200,V201
1562875	РСВ	4100-0ST	PCS	1	

# Input board

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
0881743	IC	F4558 DIP	PCS	1	N108
0882161	IC	AZ4558 DIP	PCS	1	N108
0880445	IC	4558C DIP	PCS	1	N108
0880124	IC	NJM4558D DIP	PCS	1	N108
0881393	IC	IL4558N DIP	PCS	1	N108
0882223	IC	NE5532 DIP	PCS	3	N104,N105,N107
0880417	IC	CD4053BCN DIP	PCS	2	N103,N102
0881430	IC	CD4053BE DIP	PCS	2	N103,N102
0881429	IC	CD4052BE DIP	PCS	1	N101
0880443	IC	CD4052BCN DIP	PCS	1	N101
0881380	IC	M62446AFP SOP	PCS	1	N106
0390425	INDUCTOR	100UH ±10% 0307 SHAPED 12.5	PCS	1	L101
3870591	GROUND CHIP	AV100	PCS	2	
2120325	FLAT CABLE	6P140 2.5 2PLUG WITH NEEDLE	PCS	1	XP101
1940029	SOCKET	9P 2.5mm	PCS	1	X\$22
1940030	SOCKET	10P 2.5mm	PCS	1	X\$20
1910117	TERMINAL SOCKET	AV6-8.4-13/ES	PCS	1	XC102
1910118	TERMINAL SOCKET	AV4-8,4-13/ES	PCS	1	XC101
1940072	CABLE SOCKET	6/5P 1.25mm DUAL LINE STRAIGHT PLUG	PCS	1	XS19
5447608	SEMI-FINISHED PCB	2110T-0 AV110T(RU) AI	PCS	1	

2100003	CONNECTION CORDS	Φ 0.6 SHAPED 7.5mm	PCS	73	W1~W73
02600029	CD	CD11 16V47U±20%5×11 C5	PCS	10	C101,C104,C107,C108,C115,C1 32,C142,C147,C152,C154
02604389	CD	CD11 16V4.7U±20%5×11C5	PCS	15	C111,C117,C118,C119,C120,C1 21,C122,C129,C130,C133,C134, C135,C138,C136,C137
00000099	CARBON FILM RESISTOR	1/6W100 Ω ±5%	PCS	3	R163,R164,R165
00000229	CARBON FILM RESISTOR	1/6W1K±5%	PC\$	16	R103,R106,R107,R110,R111,R1 14,R115,R118,R119,R122,R124~ R126,R197,R130,R198
00000469	CARBON FILM RESISTOR	1/6W22K±5%	PCS	8	R141,R145,R149,R150,R153,R1 54,R155,R156
00000489	CARBON FILM RESISTOR	1/6W27K±5%	PCS	3	R143,R147,R168
00000499	CARBON FILM RESISTOR	1/6W30K±5%	PCS	1	R148
00000509	CARBON FILM RESISTOR	1/6W33K±5%	PCS	2	R142,R146
00000529	CARBON FILM RESISTOR	1/6W47K±5%	PC <b>S</b>	19	R104,R105,R108,R109,R112,R1 13,R116,R120,R117,R132,R121, R144,R140,R152,R174~R178
00000549	CARBON FILM RESISTOR	1/6W56K±5%	PCS	3	R137,R138,R195
00000569	CARBON FILM RESISTOR	1/6W68K±5%	PCS	1	R169
00000579	CARBON FILM RESISTOR	1/6W75K±5%	PCS	1	R170
00000599	CARBON FILM RESISTOR	1/6W100K±5%	PCS	10	R139,R157~R162,R167,R191,R1 96
00000629	CARBON FILM RESISTOR	1/6W150K±5%	PCS	4	R133,R134,R135,R136
00006239	CARBON FILM RESISTOR	1/2W220 Ω ±5%	PCS	2	R129,R131
02003059	PORCELAIN CAPACITOR	50V 22P±10% SHAPED 5mm	PCS	1	C114
02003079	PORCELAIN CAPACITOR	50V 101±10% SHAPED 5mm	PCS	6	C109,C110,C112,C139,C140,C1
02003089	PORCELAIN CAPACITOR	50V 221±10% SHAPED 5mm	PCS	3	C105,C106,C113
02003109	PORCELAIN CAPACITOR	50V 103±10% SHAPED 5mm	PCS	2	C144,C148
02003149	PORCELAIN CAPACITOR	50V 822±10% SHAPED 5mm	PCS	2	C123,C128
02101439	TERYLENE CAPACITOR	100V392±10% C5	PCS	1	C146
02101449	TERYLENE CAPACITOR	100V 153 ±10% C5	PCS	2	C124,C127
02101489	TERYLENE CAPACITOR	100V 473 ±10% SHAPED 5mm	PCS	6	C102, C103,C116,C131,C143,C153
02102209	TERYLENE CAPACITOR	100V 473 ±5% SHAPED 5mm	只	6	C102, C103,C116,C131,C143,C153
02101599	TERYLENE CAPACITOR	100V 103 ±10% SHAPED 5mm	PCS	1	C145
02102239	TERYLENE CAPACITOR	100V 103 ±5% SHAPED 5mm	只	1	C145
02101419	METAL POLYESTER FILM CAPACITOR	CL21X100V334K C5	PCS	2	C125,C126
05800459	VOLTAGE REGULATOR DIODE	6.8V 1/2W	PCS	2	VD100,VD101
05800099	VOLTAGE REGULATOR DIODE	9.1V 1/2W	PCS	1	VD112
07801389	TRIODE	8050D	PCS	1	V106
1564053	РСВ	2110T-0	PCS	1	

## Panel control board

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
2100003	CONNECTION CORDS	Φ 0.6 SHAPED 7.5mm	PCS	3	W6,W8,W14
2100004	CONNECTION CORDS	Φ0.6 SHAPED 10mm	PCS	5	W9,W3,W4,W5,W10
2100006	CONNECTION CORDS	Φ 0.6 SHAPED 12.5mm	PCS	1	W50
0260025	CD	CD11 16V47U±20%5×11 2	PCS	2	C104,C110
0260232	CD	CD11 35V47U±20%6×12 2.5	PCS	1	C107
0260233	CD	CD11 35V100U±20%8×12 3.5	PCS	1	C108
0880251	ıc	D16311GC QFP	PCS	1	N101
0881563	ıc	S0791GC QFP	PCS	1	N101
0880275	ıc	PT6311 QFP	PCS	1	N101
0881409	ıc	TP6311Q QFP	PCS	1	N101
0000122	CARBON FILM RESISTOR	1/6W100 Ω ±5% SHAPED 7.5	PCS	4	R116,R109,R110,R111
0000133	CARBON FILM RESISTOR	1/6W4.7K±5% SHAPED 7.5	PCS	3	R117,R118,R119
0000137	CARBON FILM RESISTOR	1/6W10K±5% SHAPED 7.5	PCS	4	R101,R102,R103,R104
0000144	CARBON FILM RESISTOR	1/6W47K±5% SHAPED 7.5	PCS	1	R107
0000279	CARBON FILM RESISTOR	1/4W470 Ω ±5% SHAPED 10	PCS	1	R115
0000289	CARBON FILM RESISTOR	1/4W4.7K±5% SHAPED 10	PCS	1	R112
0000386	CARBON FILM RESISTOR	1/6W30K±5% SHAPED 7.5	PCS	1	R105
0000466	CARBON FILM RESISTOR	1/2W220 Ω ±5% SHAPED 12.5	PCS	1	R120
0000482	CARBON FILM RESISTOR	1/6W3K±5% SHAPED 7.5	PCS	1	R106
0000556	CARBON FILM RESISTOR	1/6W47 Ω ±5% SHAPED 7.5	PCS	1	R108
0000673	CARBON FILM RESISTOR	1/2W270 \( \Omega \text{ ±5% SHAPED 12.5} \)	PCS	1	R113
0010224	METAL OXIDE FILM RESISTOR	1/4W1 Ω ±5% SHAPED 10	PCS	1	R201
0010233	METAL OXIDE FILM RESISTOR	1/2W47 Ω ±5% SHAPED 12.5	PCS	1	R200
					Address Total Laborate Anni Anni Address
0200066	PORCELAIN CAPACITOR	50V 221 ±10% 2.5mm	PCS	3	C101,C102,C106
0210147	TERYLENE CAPACITOR	100V 473 ±10% 5mm	PCS	3	C103,C105,C109
0210025	TERYLENE CAPACITOR	100V 473 ±5% 6mm	只	3	C103,C105,C109
0570004	DIODE	1N4004	PCS	1	VD106
0570006	DIODE	1N4148	PCS	2	VD101,VD102
05800069	VOLTAGE REGULATOR DIODE	5.1V 1/2W	PCS	1	VD109
0580026	VOLTAGE REGULATOR DIODE	30V 1W	PCS	1	VD105
05800339	VOLTAGE REGULATOR DIODE	5.6V 1/2W	PCS	1	VD104
0780026	TRIODE	2N5551	PCS	1	V101
2360011	RECEIVER	HS0038A2	PCS	1	N102
3870593	SPRING PIECE	AV100	PCS	2	
1200562	DISPLAY SCREEN	HNA-15LM12	PCS	1	VFD101
1340003	LIGHT TOUCH RESTORE SWITCH	HORIZONTAL 6×6×1	PCS	10	\$101~\$110
1940066	SOCKET	5P 2.5mm RIGHT-ANGLED	PCS	1	XS11
2121038	FLAT CABLE	8P130 2.5 2PLUG WITH L NEEDLE	PCS	1	XP10
2121085	FLAT CABLE	2P270 7.92 1PLUG	PCS	1	WELD TO POWER SWITCH
5230058	SOFT SPONGE SPACER	10×10×5 DOUBLE-SIDED HARD	PCS	1	1PE FOR RECEIVER/PCB
5230064	SOFT SPONGE SPACER	15×10×2 DOUBLE-SIDED HARD	PCS	4	VFD/PCB
5230415	HEAT-SHRINKABLE CASING PIPE	Ф 22	MATRE	0.03	POWER SWITCH
1350006	POWER SWITCH	PS4D-A-062	PCS	1	

HORIZONTAL 6×6×1

9100-1

10 S101~S110

PCS

PCS 1

# **Microphone board**

LIGHT TOUCH RESTORE SWITCH

1340003

1563004

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
2100003	CONNECTION CORDS	Ф 0.6 SHAPED 7.5mm	PCS	3	W1,W2,W3
0260019	CD	CD11 16V10U±20%5×11 2	PCS	3	C103,C104,C105
0260027	CD	CD11 16V100U±20%6×12 2.5	PCS	1	C102
0260214	CD	CD11 16V330U±20%8×12 3.5	PCS	2	C106,C107
0882197	IC	PT2308L SOP	PCS	1	N100
0000133	CARBON FILM RESISTOR	1/6W4.7K±5% SHAPED 7.5	PCS	2	R103,R104
0000137	CARBON FILM RESISTOR	1/6W10K±5% SHAPED 7.5	PCS	2	R107,R108
0000140	CARBON FILM RESISTOR	1/6W22K±5% SHAPED 7.5	PCS	1	R100
0000144	CARBON FILM RESISTOR	1/6W47K±5% SHAPED 7.5	PCS	4	R105,R106,R109,R110
0200174	PORCELAIN CAPACITOR	50V 103 ±10% 2.5mm	PCS	2	C100,C101
2110329	LEAD	22# 70mm BLACK WITH WELDING PIECE	PCS	1	J1~MACHINE CASING
2150144	FLAT CABLE	4P 60 2.5 T2 2P SCREEN-SHIELDED WITH NEEDLE SERIES MAGNETIC RING	PCS	1	XP12
1940004	SOCKET	5P 2.5mm	PCS	1	XP24
1980006	MIC SOCKET	CK3-6.35-106	PCS	1	X100
1980030	MIC SOCKET	CK3-6.35-19	PCS	1	MIC1
1564055	РСВ	9110T-0	PCS	1	

## Video board

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
0260027	CD	CD11 16V100U±20%6×12 2.5	PCS	1	TC101
0260028	CD	CD11 16V220U±20%6×12 2.5	PCS	2	TC103,TC104
0880271	IC	CD4051 DIP	PCS	1	N101
0881428	IC	CD4051BE DIP	PCS	1	N101
0780043	TRIODE	2SA1015	PCS	1	V101
0000599	CARBON FILM RESISTOR	1/6W1 Ω ±5% SHAPED 7.5	PCS	1	R108
0000120	CARBON FILM RESISTOR	1/6W22 Ω ±5% SHAPED 7.5	PCS	1	R103
0000122	CARBON FILM RESISTOR	1/6W100 Ω ±5% SHAPED 7.5	PCS	4	R101,R102,R104,R105
0000140	CARBON FILM RESISTOR	1/6W22K±5% SHAPED 7.5	PCS	1	R106
0000137	CARBON FILM RESISTOR	1/6W10K±5% SHAPED 7.5	PCS	1	R107
0200174	PORCELAIN CAPACITOR	50V 103 ±10% 2.5mm	PCS	3	C101,C102,C103
1940006	SOCKET	6P 2.5mm	PCS	1	XS101
1910239	TERMINAL SOCKET	AV3-8.4-14/ES-10	PCS	1	XC101
1564056	РСВ	C110T-2	PCS	1	

## **CPU** control board

MATERIAL CODE	MATERIAL NAME	SPECS & MODEL	UNIT	QTY	LOCATION
0260019	CD	CD11 16V10U±20%5×11 2	PCS	5	C111,C112,C114,C115,C139
0260025	CD	CD11 16V47U±20%5×11 2	PCS	1	C100
0260049	CD	CD11 50V0.22U±20%5×11 2	PCS	1	C138
0260067	CD	CD11 50V2.2U±20%5×11 2	PCS	8	C118,C121,C124,C127,C130,C133,C136,C109
0260096	CD	CD110 16V100U±20%6×12 2.5	PCS	2	C140,C141
0260127	CD	CD11 16V4.7U±20%5×11 2	PCS	2	C110,C106
0880013	ıc	LM324N DIP	PCS	2	N105,N106
0880271	IC	CD4051 DIP	PCS	2	N104,N108
0881428	IC	CD4051BE DIP	PCS	2	N104,N108
0880664	IC	24C02 DIP	PCS	1	N101
0881743	IC	F4558 DIP	PCS	3	N102,N103,N107
0882161	IC	AZ4558 DIP	PCS	3	N102,N103,N107
0880445	IC	4558C DIP	PCS	3	N102,N103,N107
0880124	IC	NJM4558D DIP	PCS	3	N102,N103,N107
0881393	IC	IL4558N DIP	PCS	3	N102,N103,N107
0100008	RESISTOR NETWORKS	1/6W 4.7K ±5% 9P	PCS	1	RR100
0000279	CARBON FILM RESISTOR	1/4W470 Ω ±5% SHAPED 10	PC <b>S</b>	2	R118,R119
0390168	INDUCTOR	100UH±10% 0410 SHAPED 12.5mm	PCS	1	L100
0390353	MAGNETIC BEADS INDUCTOR	RH-357508 SHAPED 12.5mm	PCS	1	L101
0210111	METAL POLYESTER FILM CAPACITOR	CL21X 63V 104±5% 5	PC <b>S</b>	1	C137
0570006	DIODE	1N4148	PCS	13	VD102,VD103,VD108,VD109,VD110,VD111,VD112,VD113,VI 114,VD115,VD116,VD118,VD119
05800019	VOLTAGE REGULATOR DIODE	3.3V 1/2W	PCS	1	VD117
05800059	VOLTAGE REGULATOR DIODE	4.7V 1/2W	PCS	1	VD101
05800459	VOLTAGE REGULATOR DIODE	6.8V 1/2W	PC <b>S</b>	2	VD106,VD107
0780025	TRIODE	2N5401	PCS	1	V103
0780032	TRIODE	9014C	PCS	5	V101,V104,V102,V105,V100
0890272	SOFTWARE PROGRAM CPU	CPU110T(RU)-0	PC <b>S</b>	1	
1850005	DUAL LINE IC SOCKET	40P DIP	PC <b>S</b>	1	N100
0970002	CERAMIC RESONATOR	12.0MHz	PC <b>S</b>	1	G100
5447613	SEMI-FINISHED PCB	7228-1-SMD AV110T(RU)	PCS	1	

0090001	SMD RESISTOR	1/16W 0 Ω ±5% 0603	PC <b>S</b>	2	R104,R200
0090004	SMD RESISTOR	1/16W 22Ω ±5% 0603	PCS	1	R209
0090011	SMD RESISTOR	1/16W 470Ω ±5% 0603	PCS	32	R191,R192,R195~R199,R201~R208,R215~R231
0090014	SMD RESISTOR	1/16W 1K ±5% 0603	PCS	9	R136,R141,R146,R151,R155,R160,R165,R170,R177
0090016	SMD RESISTOR	1/16W 1.5K ±5% 0603	PCS	2	R122,R114
0090017	SMD RESISTOR	1/16W 2.2K ±5% 0603	PCS	3	R112,R123,R175
0090019	SMD RESISTOR	1/16W 4.7K ±5% 0603	PC <b>S</b>	11	RTTT,RT34,RT39,RT44,RT49,RT53,RT58,RT63,RT74,RT85,RT
0090023	SMD RESISTOR	1/16W 10K ±5% 0603	PC <b>S</b>	26	R108,R117,R125,R131,R133,R137,R138,R142,R143,R147, R148,R152,R156,R157,R161,R162,R166,R172,R178,R179, R186,R187,R189,R212,R213,R214
0090024	SMD RESISTOR	1/16W 15K ±5% 0603	PCS	1	R109
0090026	SMD RESISTOR	1/16W 22K ±5% 0603	PCS	4	R100,R110,R132,R183
0090027	SMD RESISTOR	1/16W 27K ±5% 0603	PCS	1	R126
0090029	SMD RESISTOR	1/16W 47K ±5% 0603	PCS	2	R115,R180
0090034	SMD RESISTOR	1/16W 100K ±5% 0603	PCS	8	R135,R140,R145,R150,R154,R159,R164,R167
0090109	SMD RESISTOR	1/16W 1M \Omega ±5% 0603	PCS	1	R210
0090181	SMD RESISTOR	1/16W 100 \Quad ±5% 0603	PCS	3	R107,R181,R182
0090184	SMD RESISTOR	1/16W 4.3K ±5% 0603	PCS	2	R124,R211
0090199	SMD RESISTOR	1/16W 180K ±5% 0603	PCS	2	R128,R113
0090208	SMD RESISTOR	1/16W 470K ±5% 0603	PCS	4	R129,R130,R116,R169
0090225	SMD RESISTOR	1/16W 5.6K ±5% 0603	PCS	2	R173,R184
0090242	SMD RESISTOR	1/16W 75K ±5% 0603	PCS	1	R127
0310067	SMD CAPACITOR	50V 152 ±10% 0603	PCS	2	C119,C120
0310072	SMD CAPACITOR	50V 103 ±10% 0603	PC <b>S</b>	14	C105,C142,C143,C144,C145,C146,C147,C148,C149,C150, C125,C126,C152,C151
0310594	SMD CAPACITOR	25V 104±10% X7R 0603	PC <b>S</b>	4	C102,C107,C108,C155
0310188	SMD CAPACITOR	50V 10P ±5% NPO 0603	PCS	1	C113
0310191	SMD CAPACITOR	50V 30P ±5% NPO 0603	PCS	2	C103,C104

- 1		I	I		i _	1
	0310471	SMD CAPACITOR	50V 561±5% NPO 0603	PC <b>S</b>	2	C116,C117
	0310198	SMD CAPACITOR	50V 472 ±10% 0603	PCS	2	C122,C123
	0310202	SMD CAPACITOR	50V 223 ±10% 0603	PC <b>S</b>	2	C128,C129
	0310206	SMD CAPACITOR	50V 683 ±10% 0603	PC <b>S</b>	2	C131,C132
Ī	0310634	SMD CAPACITOR	25V 154 ±10% X7R 0603	PC <b>S</b>	2	C134,C135
Ī	1631531	PCB	7228-1	PC <b>S</b>	1	

0881591	IC	SM8958AC25P DIP	PCS	1	N100	L
0882805	IC	STC89C58RD+ DIP	PCS	1	N100	
5156007	LABEL STICKER	CPU110T(RU)-0	PCS	1	N100	Г