

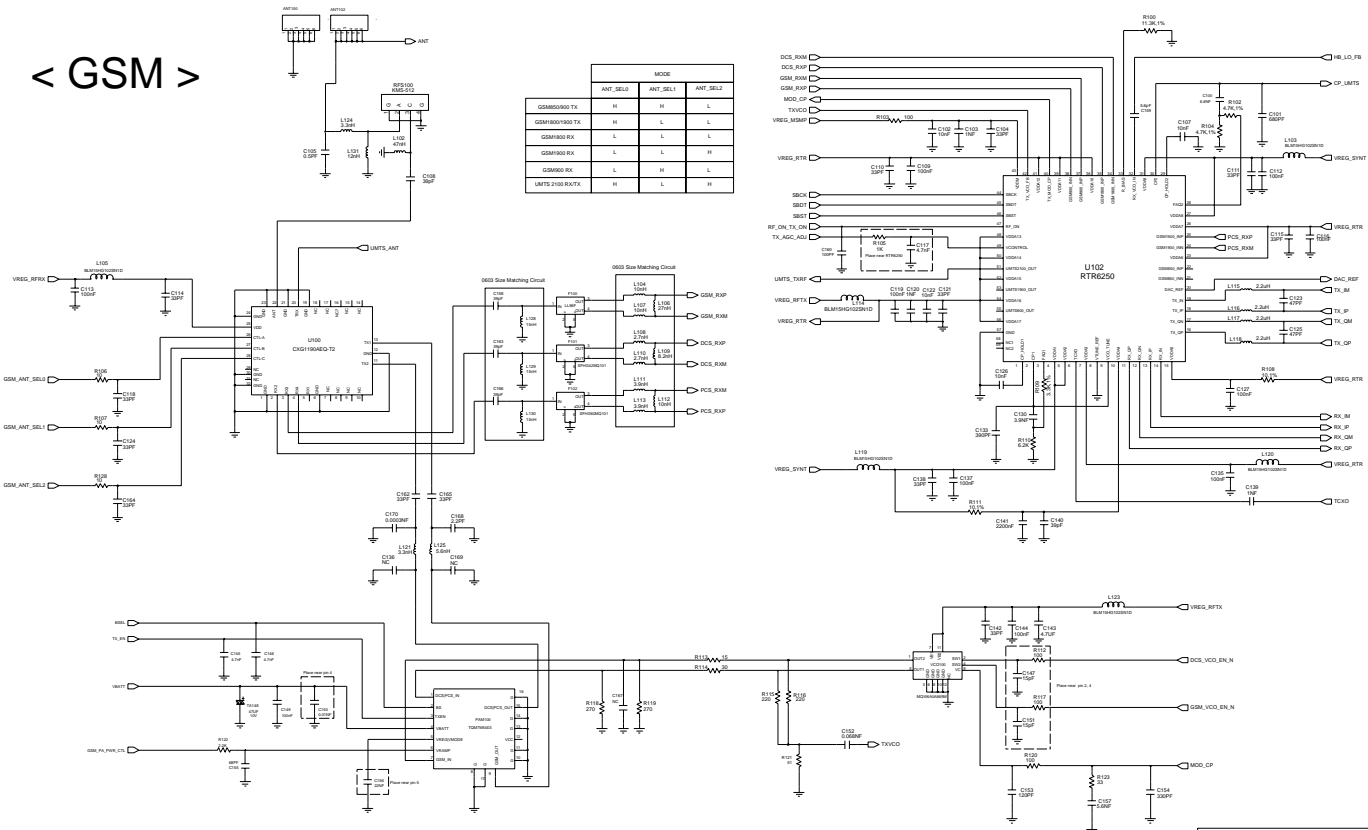




< GSM >

	MODE		
	ANT_SEL0	ANT_SEL1	ANT_SEL2
GGM00000 TX	H	H	L
GGM00100 TX	H	L	L
GGM00000 RX	L	L	L
GGM00000 RX	L	L	H
GGM00000 RX	L	H	L
GGM00000 RX	L	H	H
UMTS 2100 RX/TX	H	L	H

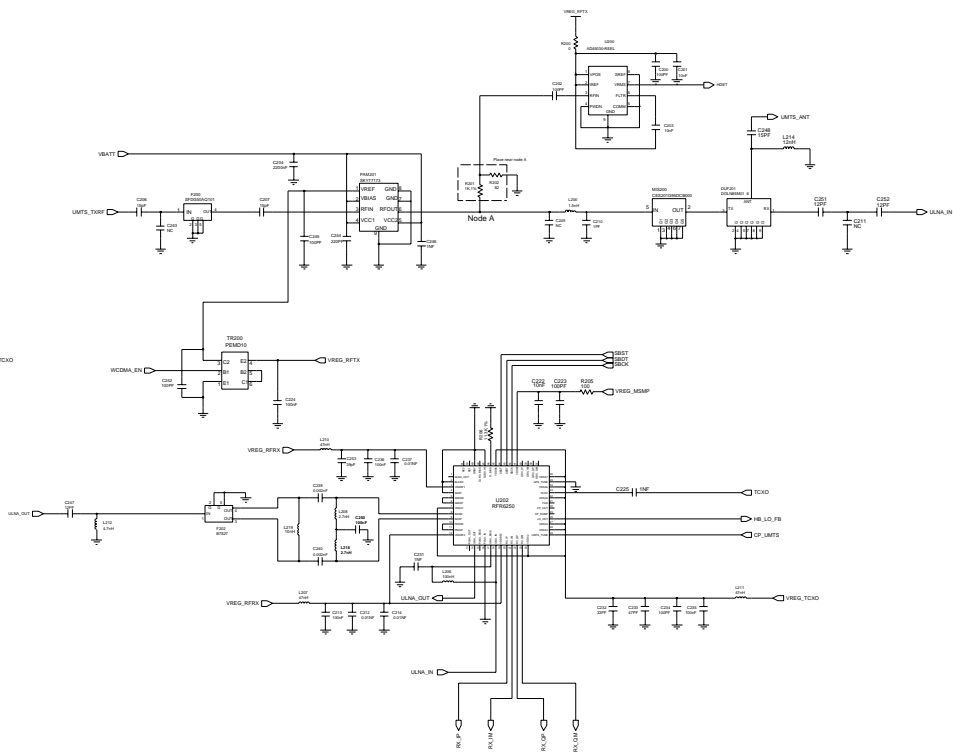


< WCDMA >




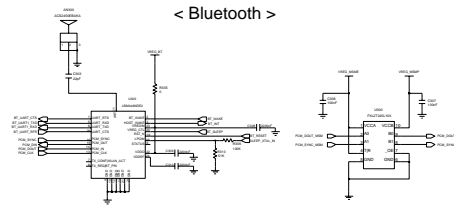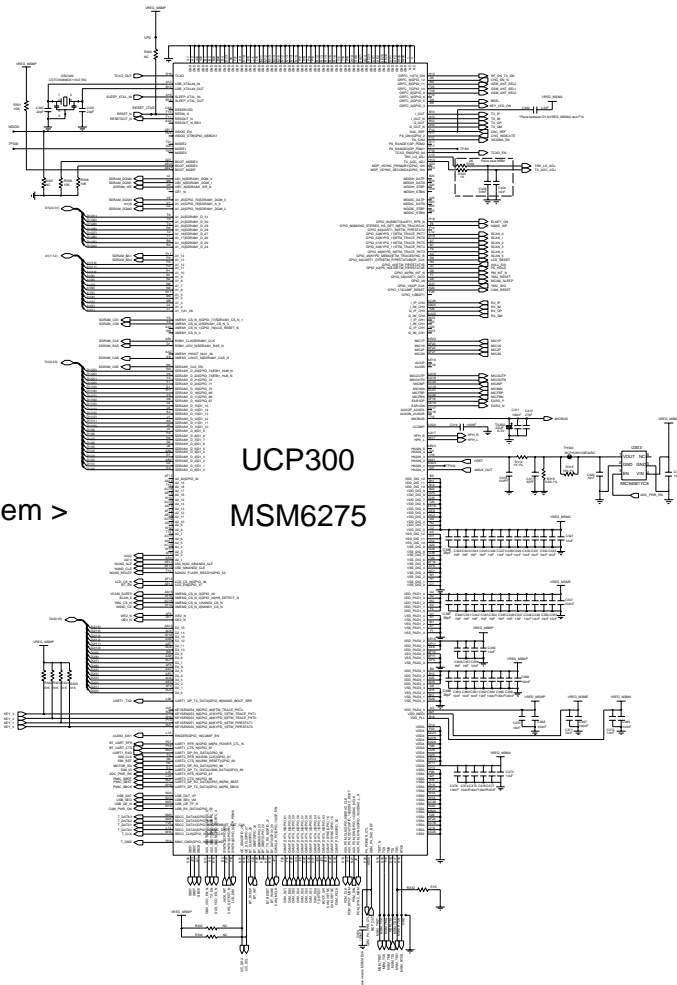


< Keypad LED Power >




< USB Filter >




< MIC Feedback >




< VBATT Control >




< USIM / T-Flash Connector >

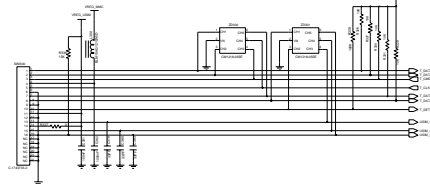


< Memory 1G / 512M >

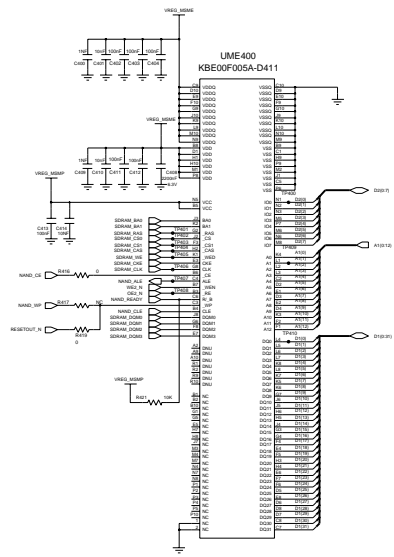


< Earjack / IF Connector >

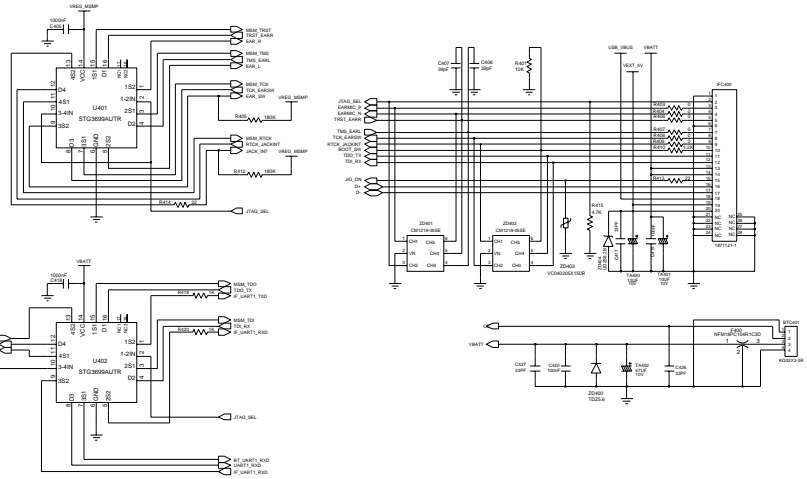

< Test JTAG PAD >

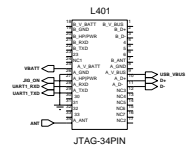


< Hall IC >

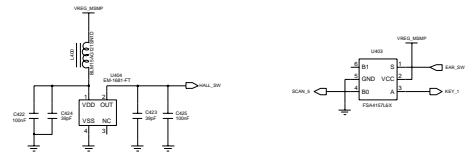




< Power Management IC >

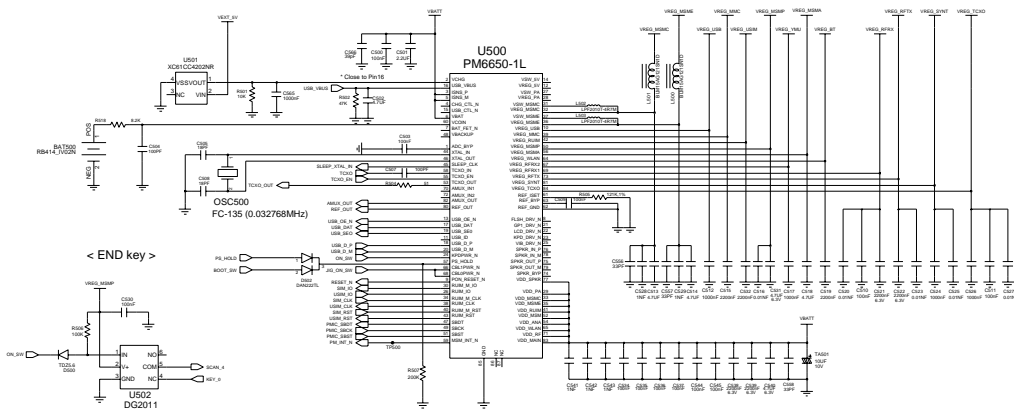


Power	Voltage
VREG_TCAD	2.80V
VREG_SF1N	2.80V
VREG_SF1P	2.80V
VREG_SF1X	2.80V
VREG_SF1	2.20V
VREG_SF2A	2.80V
VREG_SF2P	2.80V
VREG_SF2M	1.80V
VREG_SF2N	2.20V
VREG_SF2S	1.30V
VREG_SF2U	2.20V

< END key >

< Charging IC >

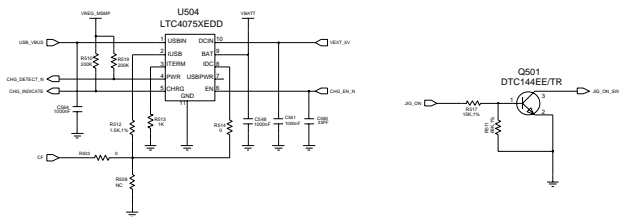


< Motor >

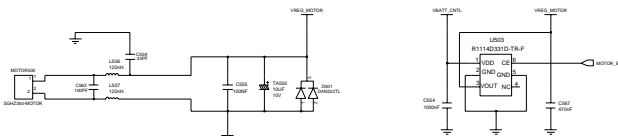


< Audio >


< Phone Mic Path >

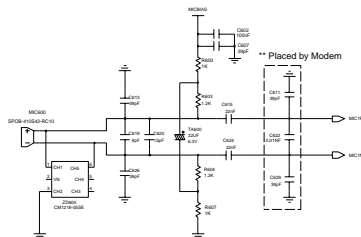


< Earphone Mic Path >

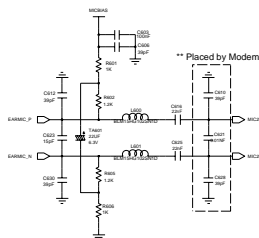



< Speaker Path >

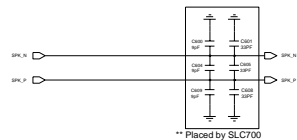



< Earphone Path >

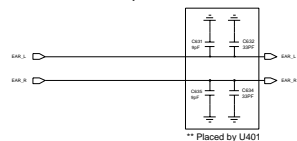


< Melody IC >

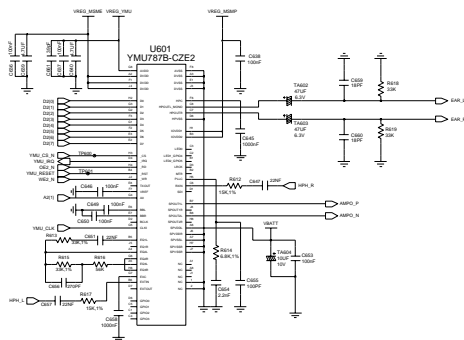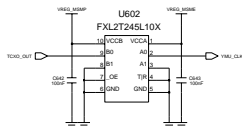


< Audio Switch 1 >

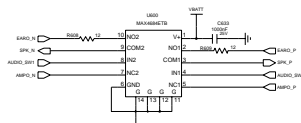


< Slide Connector >

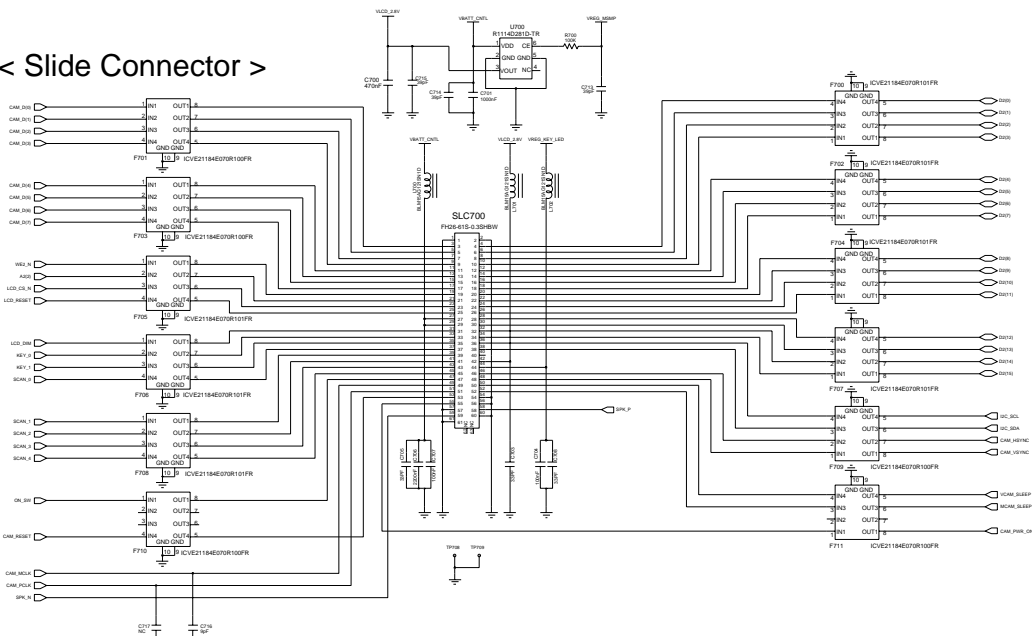


< Side Volum Key >

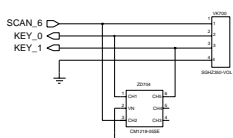


< Side Camera Key >





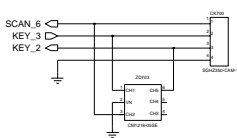



< Main Key >

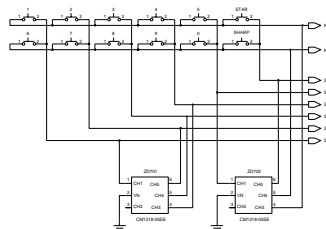



< EL KEYPAD >

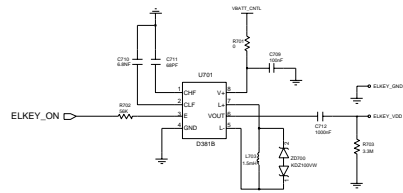

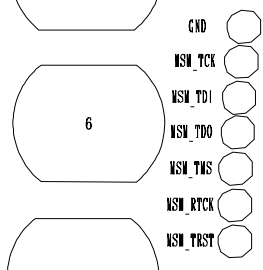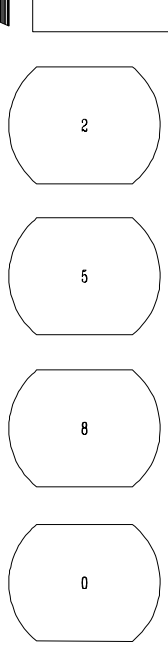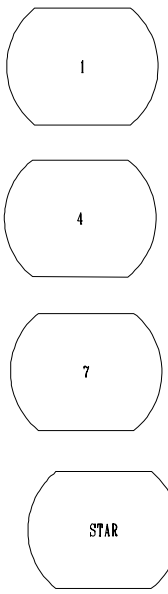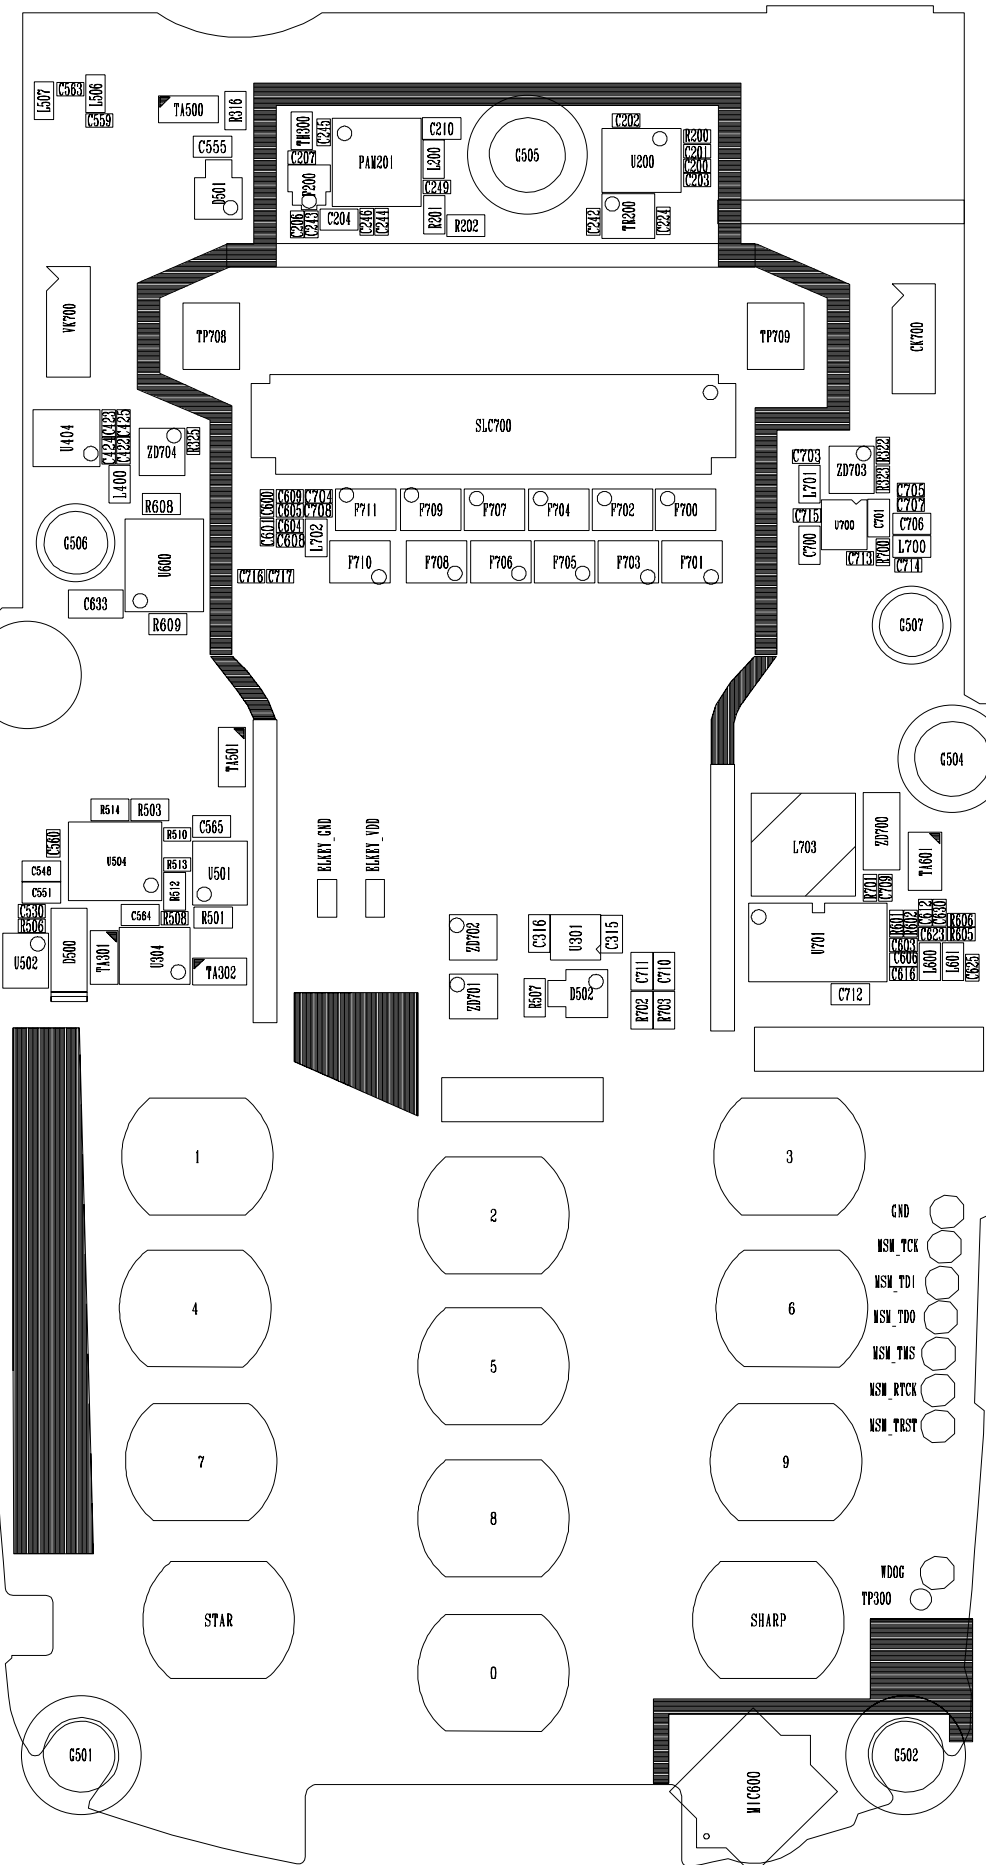

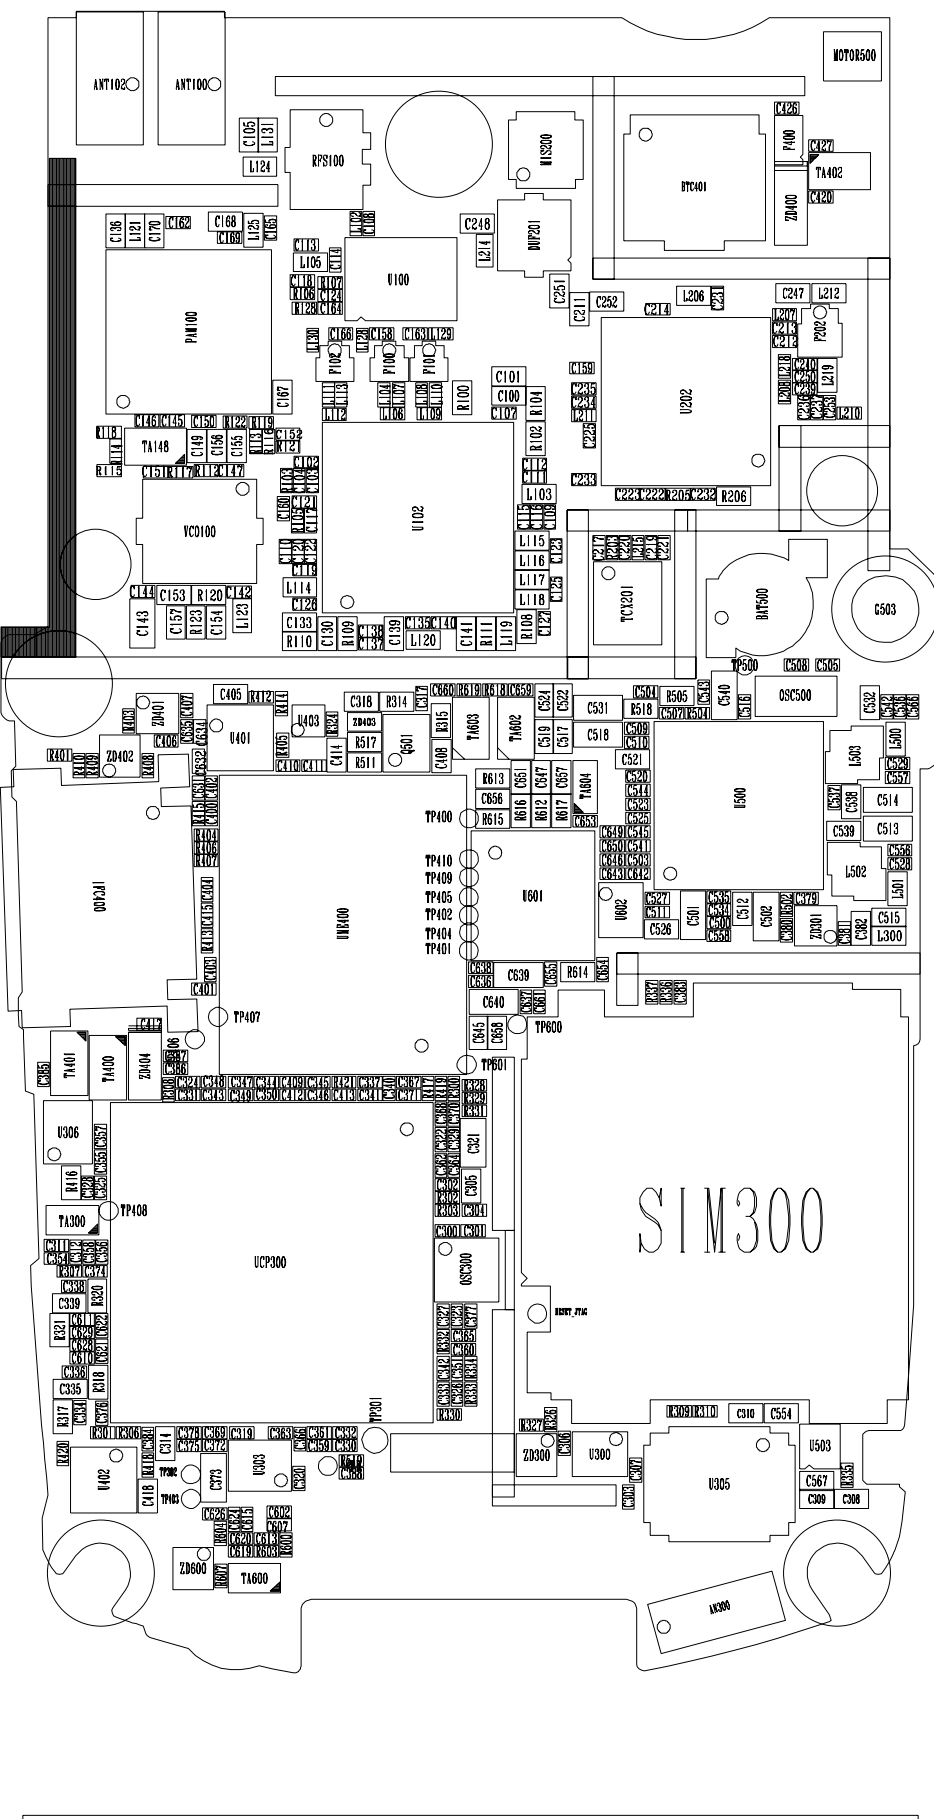

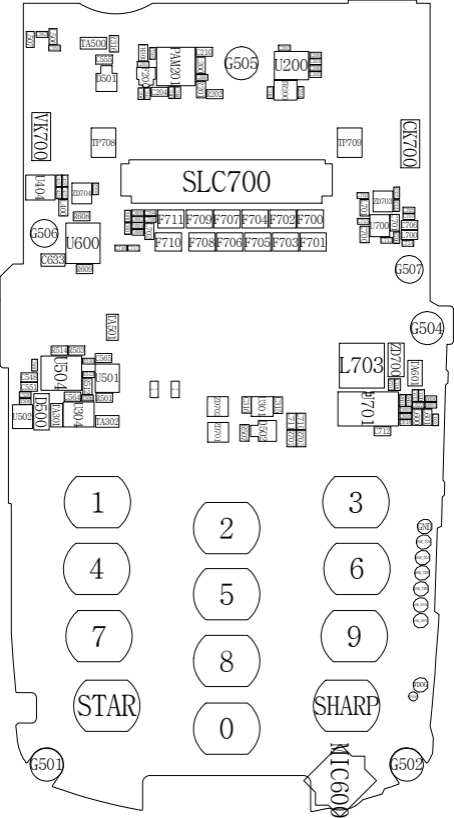

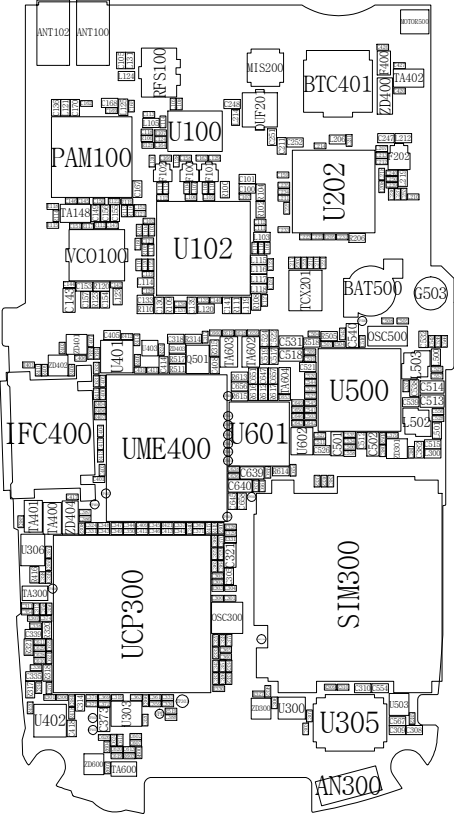

L401